

4K/UHD Five-Input Universal Matrix Switcher with Wireless Presentation Link



AT-UHD-SW-510W

Atlona Manuals
Switchers

Version Information

Version	Release Date	Notes
1	12/17	Initial release
2	02/18	Updated to reflect firmware 1.0.1
3	04/18	Updated to reflect firmware 1.0.3
4	05/18	Updated to reflect firmware 1.1.0
5	07/18	Updated to reflect firmware 1.1.1
6	08/18	Updated to reflect firmware 1.2.0
7	09/18	Updated to reflect firmware 1.2.1
8	10/18	Updated to reflect firmware 2.0.0
9	01/19	Updated to reflect firmware 2.2.0
10	03/19	Updated to reflect firmware 2.3.0
11	05/19	Updated to reflect hardware revision C
12	05/19	Updated to reflect firmware 2.4.0

Welcome to Atlona!

Thank you for purchasing this Atlona product. We hope you enjoy it and will take a extra few moments to register your new purchase.

Registration only takes a few minutes and protects this product against theft or loss. In addition, you will receive notifications of product updates and firmware. Atlona product registration is voluntary and failure to register will not affect the product warranty.

To register your product, go to <http://www.atlona.com/registration>

Sales, Marketing, and Customer Support

Main Office

Atlona Incorporated
70 Daggett Drive
San Jose, CA 95134
United States

Office: +1.877.536.3976 (US Toll-free)
Office: +1.408.962.0515 (US/International)

Sales and Customer Service Hours
Monday - Friday: 6:00 a.m. - 4:30 p.m. (PST)

<http://www.atlona.com/>

International Headquarters

Atlona International AG
Ringstrasse 15a
8600 Dübendorf
Switzerland

Office: +41.43.508.4321

Sales and Customer Service Hours
Monday - Friday: 09:00 - 17:00 (UTC +1)

Operating Notes

- Android devices require the Google™ Home app for casting.
- Miracast P2P reliability is dependent on the capabilities of laptop wireless cards.
- This product does not support URL casting (VP8 / VP9 decoding) from apps such as YouTube®, Netflix®, Hulu®, or Amazon Prime®. However, videos can be played directly from the web browser.
- This product does not support wireless casting of HDCP content.
- This product supports Bluetooth® discovery using an optional Bluetooth adapter (Bluetooth adapter not included). Atlona recommends the use of Plugable or Kinivo™ Bluetooth 4.0 adapters.



IMPORTANT: Visit <http://www.atlona.com/product/AT-UHD-SW-510W> for the latest firmware updates and User Manual.

Atlona, Inc. (“Atlona”) Limited Product Warranty

Coverage

Atlona warrants its products will substantially perform to their published specifications and will be free from defects in materials and workmanship under normal use, conditions and service.

Under its Limited Product Warranty, Atlona, at its sole discretion, will either:

- repair or facilitate the repair of defective products within a reasonable period of time, restore products to their proper operating condition and return defective products free of any charge for necessary parts, labor and shipping.

OR

- replace and return, free of charge, any defective products with direct replacement or with similar products deemed by Atlona to perform substantially the same function as the original products.

OR

- refund the pro-rated value based on the remaining term of the warranty period, not to exceed MSRP, in cases where products are beyond repair and/or no direct or substantially similar replacement products exist.

Repair, replacement or refund of Atlona products is the purchaser's exclusive remedy and Atlona liability does not extend to any other damages, incidental, consequential or otherwise.

This Limited Product Warranty extends to the original end-user purchaser of Atlona products and is non-transferrable to any subsequent purchaser(s) or owner(s) of these products.

Coverage Periods

Atlona Limited Product Warranty Period begins on the date of purchase by the end-purchaser. The date contained on the end-purchaser's sales or delivery receipt is the proof purchase date.

Limited Product Warranty Terms – New Products

- 10 years from proof of purchase date for hardware/electronics products purchased on or after June 1, 2013.
- 3 years from proof of purchase date for hardware/electronics products purchased before June 1, 2013.
- Lifetime Limited Product Warranty for all cable products.
- NOTE: Data cable (USB-C) and Wifi antenna covered by 1 year warranty.

Limited Product Warranty Terms – Refurbished (B-Stock) Products

- 3 years from proof of purchase date for all Refurbished (B-Stock) hardware and electronic products purchased on or after June 1, 2013.

Remedy

Atlona recommends that end-purchasers contact their authorized Atlona dealer or reseller from whom they purchased their products. Atlona can also be contacted directly. Visit www.atlona.com for Atlona's contact information and hours of operation. Atlona requires that a dated sales or delivery receipt from an authorized dealer, reseller or end-purchaser is provided before Atlona extends its warranty services. Additionally, a return merchandise authorization (RMA) and/or case number, is required to be obtained from Atlona in advance of returns.

Atlona requires that products returned are properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization or case number will be refused. Atlona, at its sole discretion, reserves the right to reject any products received without advanced authorization. Authorizations can be requested by calling 1-877-536-3976 (US toll free) or 1-408- 962-0515 (US/international) or via Atlona's website at www.atlona.com.

Exclusions

This Limited Product Warranty excludes:

- Damage, deterioration or malfunction caused by any alteration, modification, improper use, neglect, improper packaging or shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature.

Atlona, Inc. (“Atlona”) Limited Product Warranty

- Damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Atlona to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product.
- Equipment enclosures, cables, power supplies, batteries, LCD displays, and any accessories used in conjunction with the product(s).
- Products purchased from unauthorized distributors, dealers, resellers, auction websites and similar unauthorized channels of distribution.

Disclaimers

This Limited Product Warranty does not imply that the electronic components contained within Atlona’s products will not become obsolete nor does it imply Atlona products or their electronic components will remain compatible with any other current product, technology or any future products or technologies in which Atlona’s products may be used in conjunction with. Atlona, at its sole discretion, reserves the right not to extend its warranty offering in instances arising outside its normal course of business including, but not limited to, damage inflicted to its products from acts of god.

Limitation on Liability

The maximum liability of Atlona under this limited product warranty shall not exceed the original Atlona MSRP for its products. To the maximum extent permitted by law, Atlona is not responsible for the direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or under any other legal theory. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

To the maximum extent permitted by law, this limited product warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral or written, express or implied. To the maximum extent permitted by law, Atlona specifically disclaims all implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose. If Atlona cannot lawfully disclaim or exclude implied warranties under applicable law, then all implied warranties covering its products including warranties of merchantability and fitness for a particular purpose, shall provide to its products under applicable law. If any product to which this limited warranty applies is a “Consumer Product” under the Magnuson-Moss Warranty Act (15 U.S.C.A. §2301, ET SEQ.) or other applicable law, the foregoing disclaimer of implied warranties shall not apply, and all implied warranties on its products, including warranties of merchantability and fitness for the particular purpose, shall apply as provided under applicable law.

Other Conditions

Atlona’s Limited Product Warranty offering gives legal rights, and other rights may apply and vary from country to country or state to state. This limited warranty is void if (i) the label bearing the serial number of products have been removed or defaced, (ii) products are not purchased from an authorized Atlona dealer or reseller. A comprehensive list of Atlona’s authorized distributors, dealers and resellers can be found at www.atlona.com.

Important Safety Information



CAUTION: TO REDUCE THE RISK OF
ELECTRIC SHOCK
DO NOT OPEN ENCLOSURE OR EXPOSE
TO RAIN OR MOISTURE.
NO USER-SERVICEABLE PARTS
INSIDE REFER SERVICING TO
QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the product.




The information bubble is intended to alert the user to helpful or optional operational instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
11. Only use attachments/accessories specified by Atlona.
12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
13. Unplug this product during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC Statement

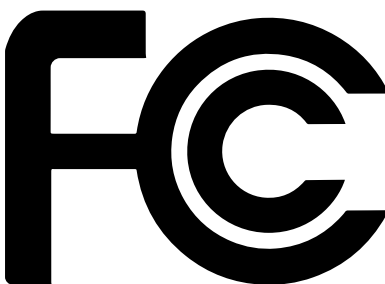

FCC Compliance and Advisory Statement: This hardware device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.

Table of Contents

Introduction	9
Features	9
Package Contents	9
Panel Description	10
Front Panel - Revision A and B	10
Front Panel - Revision C	10
Rear Panel - All Revisions	11
Installation	12
Audio	12
Trigger	12
Relay	13
Connection Instructions	14
Connection Diagram	15
IP Configuration	16
Switching the IP Mode Using the Front Panel	16
Getting the IP Address	16
Getting the IP Address without a Display	16
Setting the IP Address using the Web GUI	17
Auto IP Mode	18
Resetting to Factory-Default Settings	18
Basic Operation	19
Boot Sequence	19
Selecting the Input	20
Setting the System Date and Time	21
The Splash Screen	22
Customizing the Splash Screen	22
Displaying Metadata	24
Displaying the Wireless Password	26
Changing the Splash Screen Image	27
Resetting Splash Screen Images	28
HTML Splash Screens	29
Resetting the HTML Splash Screen	31
Wireless Configuration	32
Access Point Mode	32
Connect Mode	35
Casting	38
iOS Devices	38
OS X	39
Microsoft Miracast	41
Google Chrome	42
Advanced Operation	44
Matrix Modes	44
Matrix Mode	44
Matrix Mode w/ Static Route	46
Selecting the Audio Input	48
AirPlay Bluetooth Discovery	49
AirPlay / Miracast P2P PIN Codes	50
Changing the PIN Timeout	52
Using Moderator Mode	53
Scheduling Display Operation Times	56
802.1X Authentication	57
Using Wifi	57
Using Ethernet	59
RS-232 Control	60
Determining the Port Type	60

Table of Contents

Cable Assembly	61
Pass-through mode	62
Control mode	65
The Web GUI	68
Introduction to the Web GUI	68
Menu Bar	69
Info	70
General page	71
System page	72
Splash Screen page	74
Splash Screen	74
Images	75
Routing page	76
Input Selection	76
Matrix Switching	76
Display page	77
Control	77
CEC	78
Relay	78
Trigger I/O	79
EDID page	83
Administration page	84
Telnet page	84
Moderator page	85
Networking page	86
Debug page	95
User Accounts page	96
Advanced page	97
Pre-Release page	101
Audio page	102
Event Viewer page	103
Appendix	104
Updating the Firmware	104
Default Settings	109
Mounting Instructions	111
Single-unit Rack Installation	111
Dual-unit Rack Installation	112
Flat Surface	113
Specifications	114
Index	116

Introduction

The Atlona **AT-UHD-SW-510W** is a 5x2, multi-format matrix switcher with wireless presentation capability. It provides universal BYOD (bring your own device) compatibility with HDMI, DisplayPort, and USB-C inputs, plus wireless connectivity for mobile devices. The SW-510W is HDCP 2.2 compliant, and features matrixed or mirrored HDMI and HDBaseT outputs. The HDBaseT output is ideal for use with the Atlona [AT-UHD-EX-100CE-RX-PSE](#) HDBaseT receiver, or the [AT-HDVS-SC-RX](#) scaling HDBaseT receiver. It also includes automatic input switching and automatic display control capability, both applicable to wired and wireless source connections. This unique multi-format matrix switcher and wireless gateway provides a universal connectivity solution for presentation devices in a wide range of professional AV applications.

The USB-C w/ charging port on the SW-510W is ideal for newer Mac, Chromebook, and Windows PCs. All inputs and the local HDMI output are compatible with video signals up to 4K/UHD @ 60 Hz with 4:4:4 chroma sampling, as well as data rates up to 18 Gbps. For integration convenience and flexibility, simultaneous 18 Gbps HDMI and 10 Gbps HDBaseT outputs make the SW-510W ideal for various presentation scenarios such as primary and confidence displays in a corporate auditorium or lecture hall. The HDBaseT output extends video, audio, control, and Ethernet up to 100 meters. (For AV signals exceeding 10 Gbps, 4K/UHD video will be subsampled to 4:2:0, or HDR metadata removed for HDBaseT transmission.)

Features

- Two HDMI®, one DisplayPort, and one USB-C input, plus an input for wireless AV.
- Matrixed or mirrored HDBaseT™ and HDMI outputs.
- Wireless AV gateway for iOS®, Android™, Mac®, Chromebook™, and Windows® devices.
- 4K/UHD capability @ 60 Hz with 4:2:0 chroma subsampling, plus support for 4K/60 4:4:4 and HDR formats on local ports (HDMI, USB-C, and DisplayPort).
- HDCP 2.2 compliant.
- Automatic input selection and automatic display control.
- USB-C port supports device charging for laptops, tablets, and smartphones.

Package Contents


1 x AT-UHD-SW-510W
1 x Captive screw connector, 5-pin
1 x Captive screw connector, 4-pin
2 x Captive screw connector, 3-pin
2 x Wi-Fi antenna modules
1 x USB-C cable, 2 meters
1 x 24V DC power supply
2 x Mounting plates
4 x Mounting screws
1 x Installation Guide

Panel Description



NOTE: As of April 2019, Revision C is being shipped. Hardware revisions A and B were shipped prior to April of 2019. However, all hardware revisions support the latest version of firmware.

Front Panel - Revision A and B

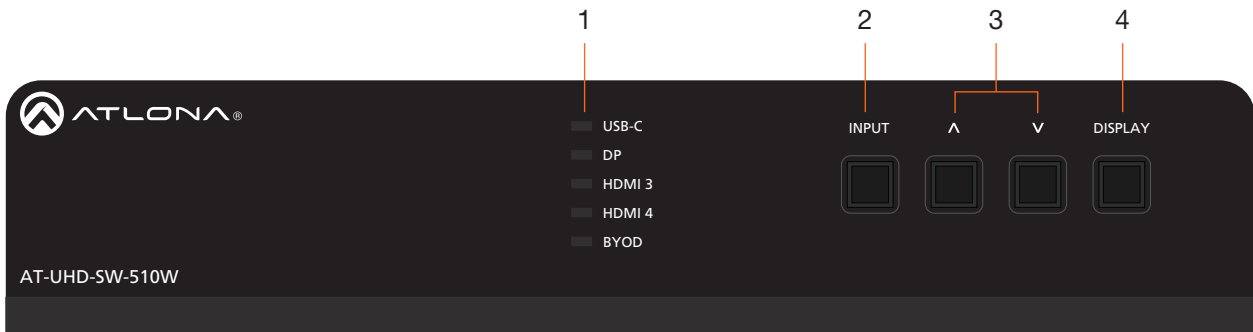

1 Input Indicators

Displays the currently selected input.

2 INPUT

Press this button to cycle through each input.


3 Cursor Buttons

Adjust the volume on the display.

4 DISPLAY

Press this button to toggle the power state of the desired display.

Front Panel - Revision C

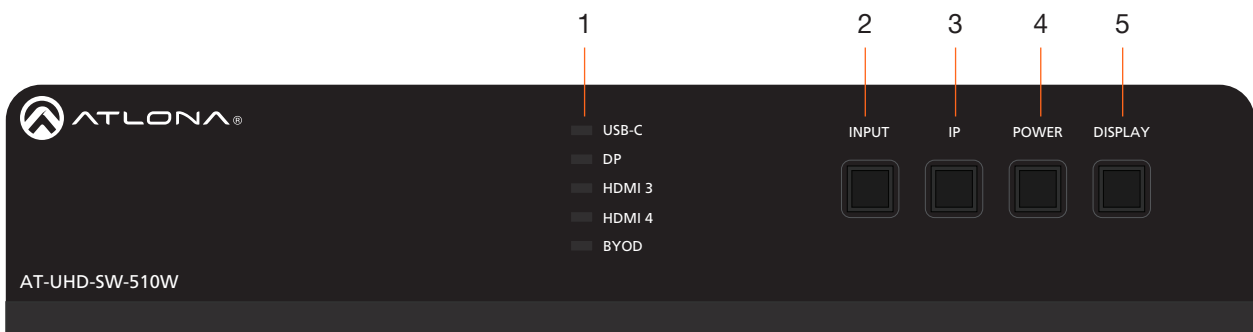

1 Input Indicators

Displays the currently selected input.

2 INPUT

Press this button to cycle through each input.

3 IP

Press this button to display the IP address of the AT-UHD-SW-510W on the connected display.


4 POWER

Press and hold this button for five seconds to power-off the AT-UHD-SW-510W. To power-on the unit, disconnect and reconnect the power cord on the rear panel.

5 DISPLAY

Press this button to toggle the power state of the desired display.

Rear Panel - All Revisions


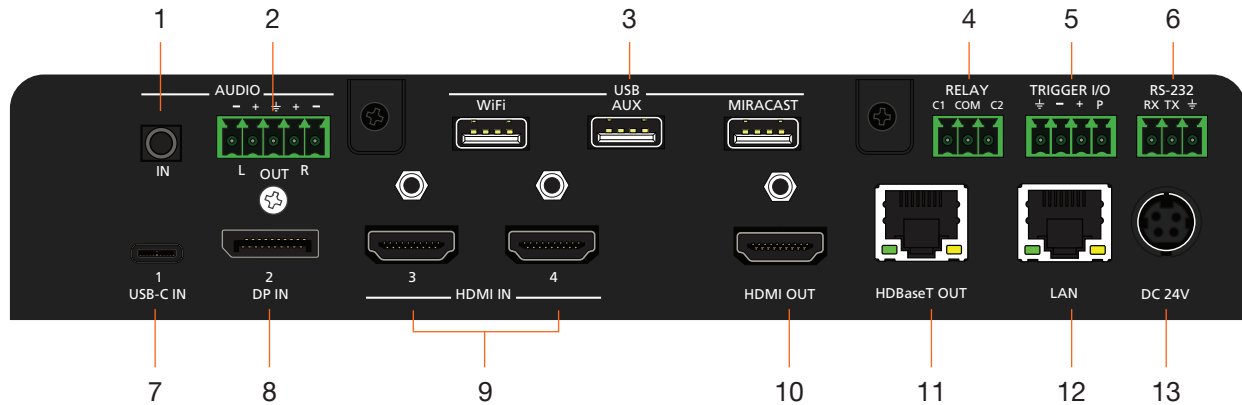


- 1 AUDIO IN**
Connect a 3.5 mm mini-stereo cable from an analog audio source to this connector.
- 2 AUDIO OUT**
Use the included captive screw connector to connect a balanced audio device.
- 3 USB**
Connect the included Wi-Fi modules to the **WIFI** and **MIRACAST** ports. Refer to [Connection Instructions](#) (page 14) for more information. Note that on Revision A hardware, the **MIRACAST** port is labeled **WIFI**.
- 4 RELAY**
Connect one of the included 3-pin captive screw connectors to this port to control screens, drapes, lights, or other devices.
- 5 TRIGGER I/O**
Connect voltage-controlled device to this port. A 4-pin captive screw connector is required.
- 6 RS-232**
Use the included captive screw connector to connect the AT-UHD-SW-510W to a control system or computer running a terminal emulator. Refer to [RS-232 Control](#) (page 60) for more information.
- 7 USB-C**
Connect a USB-C cable from this port to a USB-C source.
- 8 DP IN**
Connect a DisplayPort device to this port.
- 9 HDMI IN**
Connect an HDMI cable from each of these ports to a UHD/HD source.
- 10 HDMI OUT**
Connect an HDMI cable from this port to an HD/UHD display.
- 11 HDBaseT OUT**
Connect to a locally powered HDBaseT receiver such as the AT-UHD-EX-100CE-RX-PSE.
- 12 LAN**
Connect an Ethernet cable from this port to the network.
- 13 DC 24V**
Connect the included 24 V DC power supply to this power receptacle.

Installation


Audio

The **AUDIO OUT** connector on the AT-UHD-SW-510W provides a separate output for balanced audio using XLR connectors. Use the included 5-pin captive-screw terminal block. Balanced audio connections use two signal wires and a ground to minimize interference in audio signals. Unbalanced output audio is not supported.

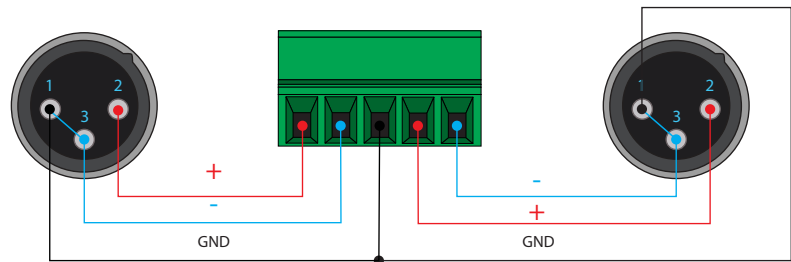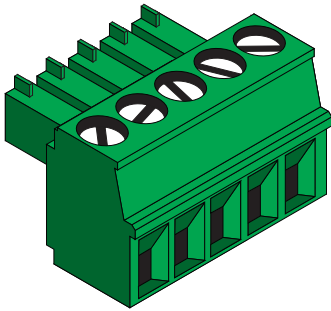


Trigger


The **TRIGGER I/O** port allows voltage-controlled devices, such as an occupancy sensor, to be connected to the AT-UHD-SW-510W. Use the included 4-pin captive screw connector to connect the device. Voltage range is 3 to 30 V DC.

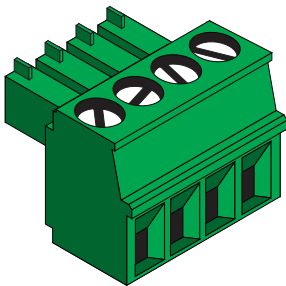

Passive sensor

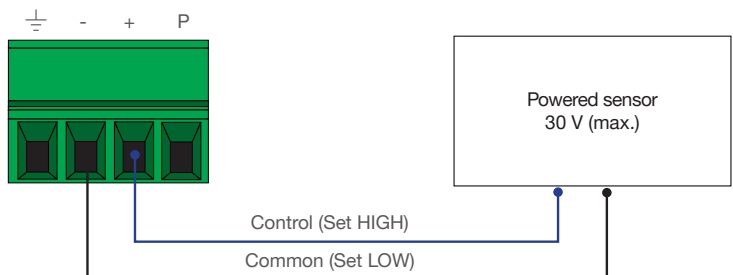

Powered sensor


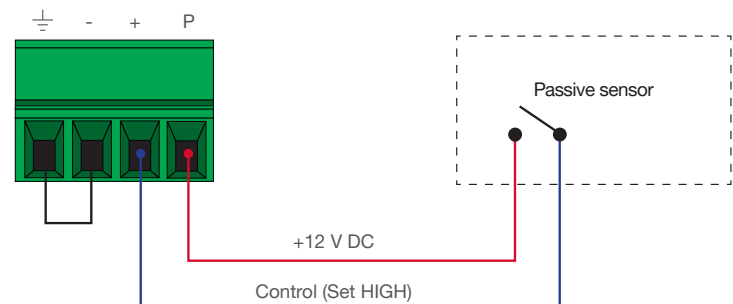


IMPORTANT: Some occupancy sensors require 24 V instead of 12 V. In order to power the sensor, an external power supply will be required.

Relay

The AT-UHD-SW-510W provides a **RELAY** port, which allows the control of screens, curtains, and other devices. Use a 48 V DC relay with no more than 1 A current draw.

When the AT-UHD-SW-510W is powered-on or rebooted, **C1** and **C2** are set to the Normally Open (NO) state.

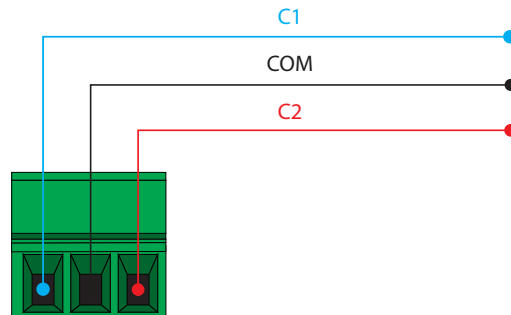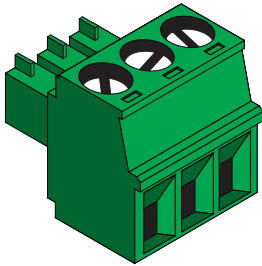


Connection Instructions

1. Connect a USB-C cable from a source to the **USB-C (1)** port.
2. Connect a DisplayPort cable from a source to the **DP IN (2)** port.
3. Connect up to two UHD/HD sources, using HDMI cables, to the **HDMI IN (3)** and **HDMI IN (4)** ports.
4. Connect an HDMI cable from the **HDMI OUT** port to a UHD/HD display.
5. Connect up to two USB wireless antenna modules to the **USB** ports. Two USB wireless antennas are included. The **WiFi** port supports Google Cast™ and Apple AirPlay®. The **MIRACAST** port only supports Miracast™. The **AUX** port is reserved for obtaining the IP address of the unit and for unit recovery. Refer to [Getting the IP Address \(page 16\)](#) for more information. Note that on hardware revision A, the **MIRACAST** port is labeled as **WiFi**.



IMPORTANT: Only use Atlona Wi-Fi USB modules. Other Wi-Fi modules may not be supported by this product.

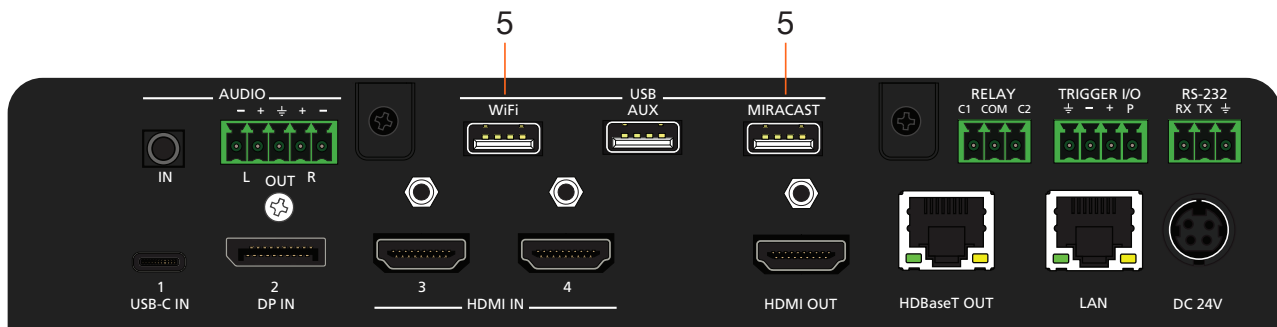


6. Connect the relay leads from the control motors of the projection screen, blinds, or curtains, to the relay outputs to the **RELAY** port, using the included 3-pin captive screw connector. Use a 48 V DC relay with no more than 1 A current draw.
7. Connect a trigger device, such as an occupancy sensor switch, to the **TRIGGER I/O** port. A 4-pin captive screw connector is required. Voltages from 3 to 30 V are supported.
8. Connect a 3.5 mm analog audio cable from an analog source to the **AUDIO IN** port. This audio source can be used to embed analog audio on any of the input sources.
9. Connect an Ethernet cable from the **LAN** port to the Local Area Network (LAN).
10. Connect an Ethernet cable from the **HDBaseT** port to an HDBaseT receiver unit, such as the AT-UHD-EX-100CE-RX-PSE.



IMPORTANT: If connecting the AT-UHD-SW-510W to the Local Area Network (LAN), make sure that the AT-UHD-EX-100CE-RX-PSE is not connected to the LAN, as this will create a network loop.

11. Connect the included green 5-pin captive screw connector to the **AUDIO OUT** connector.
12. Connect the included power supply to the **DC 24V** connector and connect the power cord to an available electrical outlet.
13. Follow the on-screen instructions to complete the set-up procedure.

Connection Diagram

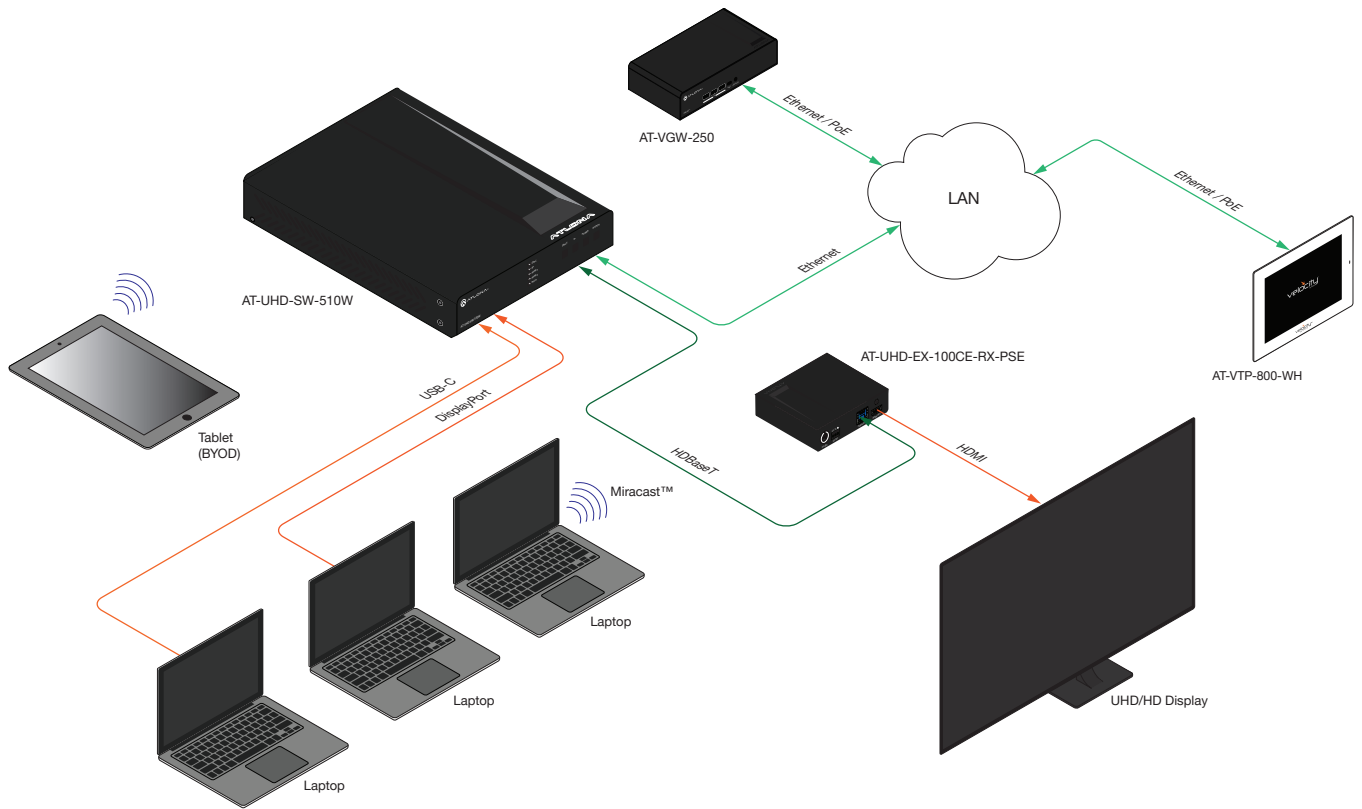

IP Configuration


The AT-UHD-SW-510W is shipped with DHCP enabled. Once connected to a network, the DHCP server (if available), will automatically assign an IP address to the unit. Use an IP scanner, along with the MAC address on the bottom of the unit, to identify both the unit and its IP address on the network.

If the AT-UHD-SW-510W is unable to detect a DHCP server within 15 seconds, then the unit will use a self-assigned IP address within the range of 169.254.xxx.xxx. If this occurs, refer to [Auto IP Mode \(page 18\)](#).

If a static IP address is desired, the unit can be switched to static IP mode. Use one of the following procedures to switch between DHCP and static IP mode. The default static IP address of the AT-UHD-SW-510W is 192.168.1.254.

Switching the IP Mode Using the Front Panel

1. Make sure the AT-UHD-SW-510W is powered and ready for operation.
2. Press and hold the **INPUT** button for at least 15 seconds.

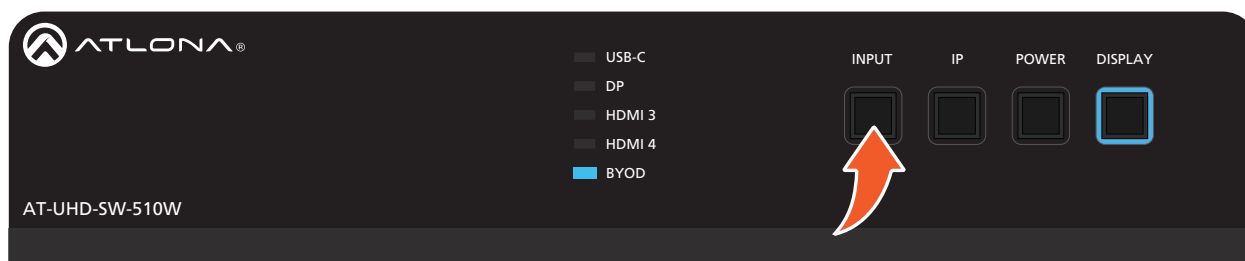

3. Release the **INPUT** button once all the front-panel LED indicators begin to flash. The unit will reboot. The number of flashes will indicate the currently selected IP mode:

Input LED Indicators flash	Description
Two	DHCP mode
Four	Factory Static IP mode (IP address set to 192.168.1.254)

Getting the IP Address

1. Make sure the unit is powered.
2. Connect a display to one of the video outputs on the rear of the unit. Make sure the display is powered.
3. Press and release the **IP** button.



NOTE: To display the IP address on Revision A and B units, simultaneously press and hold the **INPUT** and **A** buttons on the front panel, for five seconds, then release them.

4. The IP address of the unit will be displayed on the screen.

Getting the IP Address without a Display

If a display device is unavailable, use the following procedure to obtain the IP address.

1. Make sure the unit is powered.
2. Insert a USB drive into the **AUX** port.
3. Wait approximately 10 seconds.

- Remove the USB drive from the **AUX** port insert the drive into an available USB port on a computer.
- Two files will be present on the USB drive. One file is formatted for Windows and the other is formatted for Linux.

Windows: AtlonaReport-Win-GWB-20170821200241.txt
 Linux: AtlonaReport-Unix-GWB-20170821200241.txt

- Double-click the desired file to open it. Information, similar to the following, will be displayed:

Ethernet #1
 IP : 192.168.41.68
 MAC : B8:98:B0:05:7E:73

Ethernet #2
 IP : 169.254.7.58
 MAC : B8:98:B0:05:7E:72

- The IP address of the AT-UHD-SW-510W is listed under Ethernet #1.


Setting the IP Address using the Web GUI

Use the **System** page (page 72) in the web GUI, to set the AT-UHD-SW-510W to either DHCP or static IP mode. In order to access the web GUI, the IP address of the AT-UHD-SW-510W must be known.

- Open the desired web browser and enter the IP address of the AT-UHD-SW-510W.
- Log in, using the required credentials. The factory-default username and password are listed below:

Username: admin
 Password: Atlona

- Click **Administration > Networking > Ethernet**.

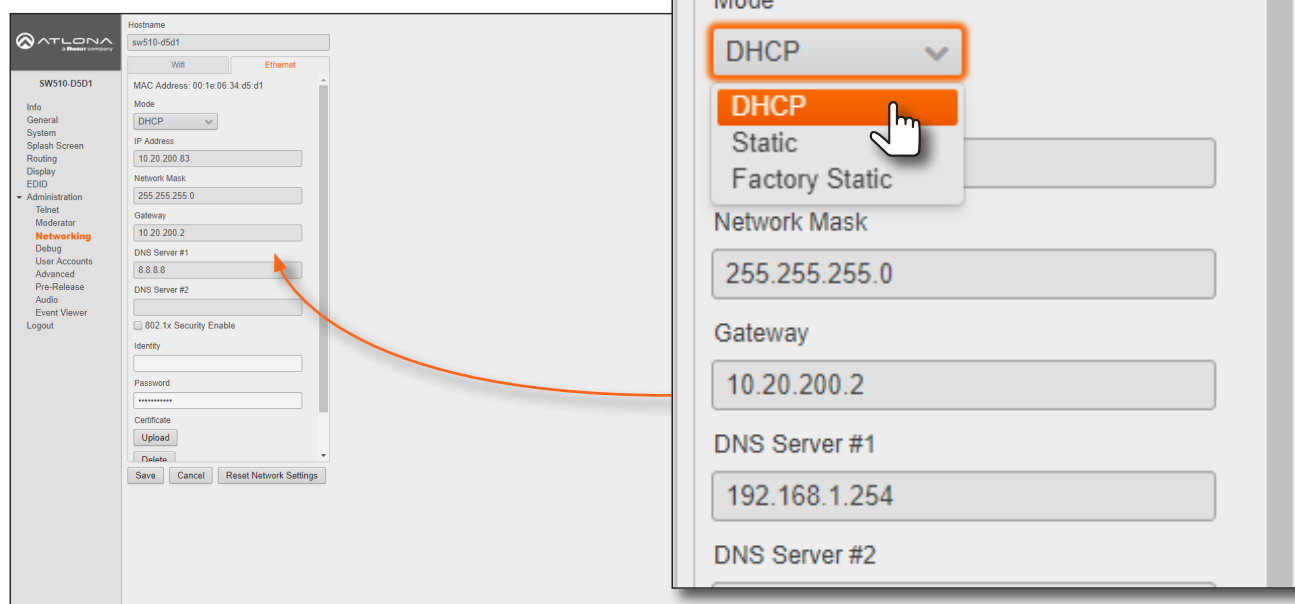

- Click the **Mode** drop-down list and select **DHCP**, **Static**, or **Factory Static**. Refer to the [Networking page \(page 86\)](#) for more information. If set to Factory Static, then the IP settings will be set to: IP Address = 192.168.1.254, Network Mask = 255.255.0.0, Gateway = 192.168.1.1.

When set to **Static**, the **IP**, **Network Mask**, **Gateway**, and **DNS Server** fields can be modified.

- Click the **Save** button to save the changes.

Auto IP Mode

If the AT-UHD-SW-510W is unable to detect a DHCP server within 15 seconds, then the unit will use a self-assigned IP address within the range of 169.254.xxx.xxx. If this occurs, connect the AT-UHD-SW-510W to a computer and do the following:

- Click **Start > Settings > Control Panel > Network and Sharing Center**.
- Click **Change adapter settings**.
- Right-click on the adapter that is used to establish a wired connection to the network, and select **Properties** from the context menu.
- Under the **Ethernet Properties** dialog box, select **Internet Protocol Version 4** and then click the **Properties** button.
- Click the **Use the following IP address** radio button.



IMPORTANT: Before continuing, write down the current IP settings in order to restore them, later. If **Obtain an IP address automatically** and **Obtain DNS server automatically** are selected, then this step is not required.

- Enter the desired static IP address or the IP address provided by the network administrator. If the PC does not require Internet access or if a statically-assigned IP address is being used, then an IP address of 169.254.xxx.xxx can be entered.
- Set the subnet mask to 255.255.0.0.
- Click the **OK** button then close all **Control Panel** windows.


Resetting to Factory-Default Settings

If necessary, the AT-UHD-SW-510W can be reset to factory-defaults from the front panel. Press and hold the **DISPLAY** button for 15 seconds to reset the AT-UHD-SW-510W to factory-default settings. Note that the AT-UHD-SW-510W will be placed in DHCP mode, as part of the reset procedure. The AT-UHD-SW-510W can also be reset through the web GUI. Refer to [System page \(page 72\)](#) for more information.

Basic Operation

Boot Sequence


1. After the power supply has been connected to the AT-UHD-SW-510W, the input indicators on the front panel will begin to flash, in an up-and-down pattern, as shown by the arrows.

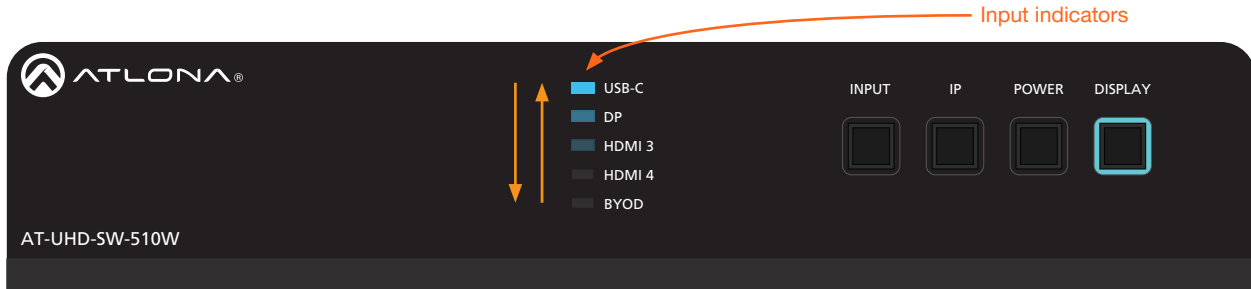

2. After about 45 seconds, the standby screen will be displayed.
3. Once the boot sequence is complete, the splash screen will be displayed and the **BYOD** input indicator will be illuminated.




Standby Screen

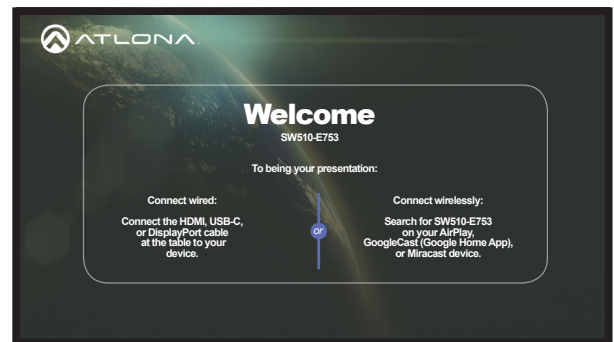

Splash Screen

The splash screen will show the OSD (On-Screen Display). The splash screen will display instructions on connecting wireless devices and how to connect devices directly to the AT-UHD-SW-510W, using cables.


4. The unit is now ready for use. The entire boot process takes approximately two minutes to complete.

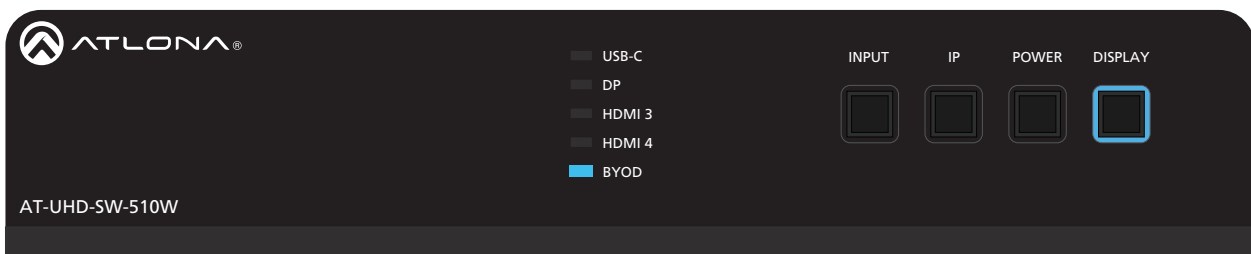

Ready state

Selecting the Input

Press the **INPUT** button to cycle through each of the available inputs on the unit. If the unit is powered-off, then powered-on, the AT-UHD-SW-510W will set the default input to **BYOD**.

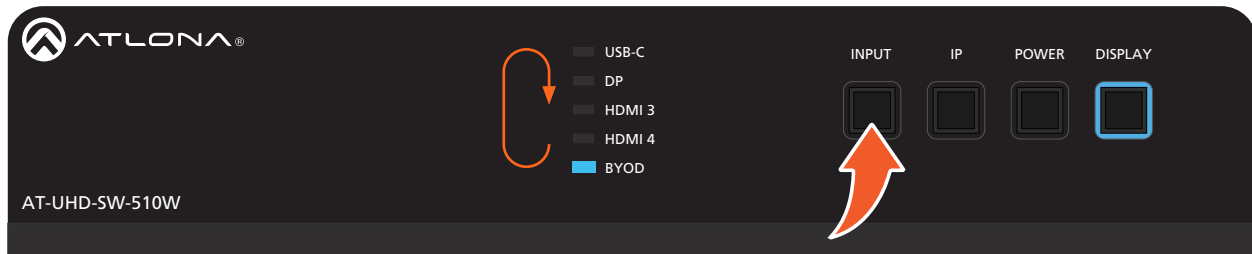


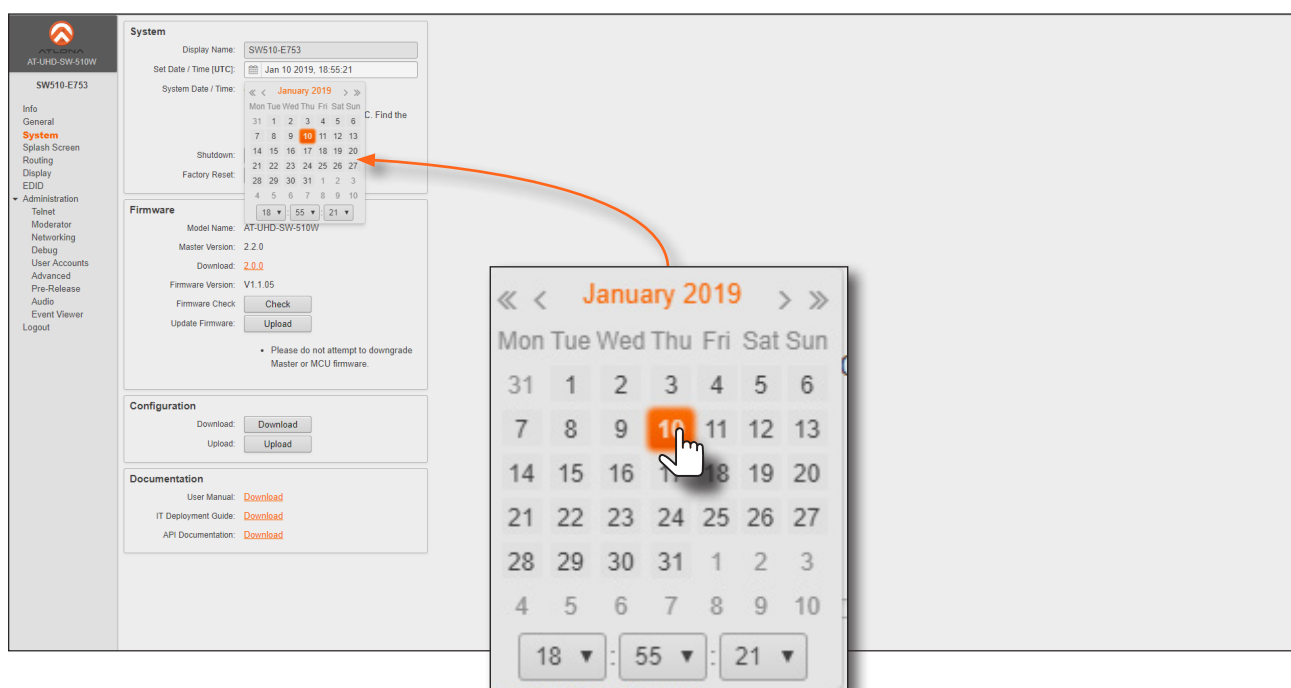
Setting the System Date and Time

The AT-UHD-SW-510W uses the internal clock to store the current date and time. When setting the time and date, Universal Coordinated Time (UTC) must be used.

1. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
2. Convert the local time to 24-hour time.
3. Use the tables below, to convert 24-hour time to UTC. For US Daylight Savings Time, subtract one hour from each value, when converting to UTC. UTC for other specific regions can be obtained from <https://time.is/UTC>.

Region	Eastern Time	Central Time	Mountain Time	Pacific Time
United States	+ 5:00	+ 6:00	+ 7:00	+ 8:00

3. Click the  icon to display the calendar fly-out menu.
4. Select the desired year by clicking on the << or >> icons. To select the month, use the < or > icons.
5. Select the day.
6. Set the time by either clicking on the hour, minute, and second drop-down lists or by entering the time, directly into the **Set Date / Time [UTC]** field. Always use Universal Coordinated Time (UTC).




7. Exit the **Set Date / Time [UTC]** field by pressing the TAB key or clicking outside the text field. The time and date information will automatically be saved.



NOTE: When setting a time or date that is ahead of the current settings, the web session will automatically time out. This is normal behavior. Login to continue setting up the unit.

The Splash Screen


The illustration below, identifies each portion of the Splash Screen. The vertical position of the Panel can be adjusted using the **Y Offset** feature. **Displaying Metadata (page 24)** can be enabled or disabled. The background image can also be changed.

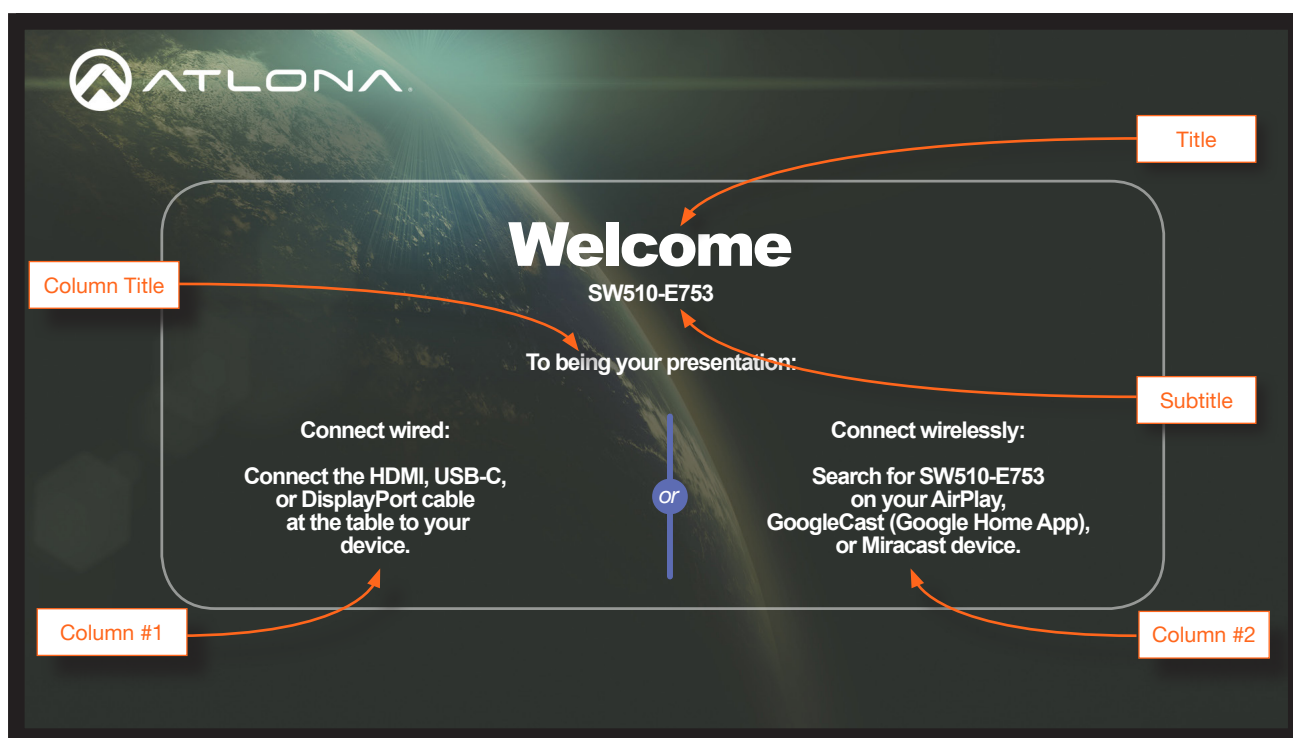


Customizing the Splash Screen

This area displays information on how to connect to the AT-UHD-SW-510W and the name of the unit (subtitle). Each of the above text fields can be modified within the web GUI.

1. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
2. Login to the web GUI. Refer to **Introduction to the Web GUI (page 68)** for more information.
3. Click **Splash Screen** from the menu bar on the left.

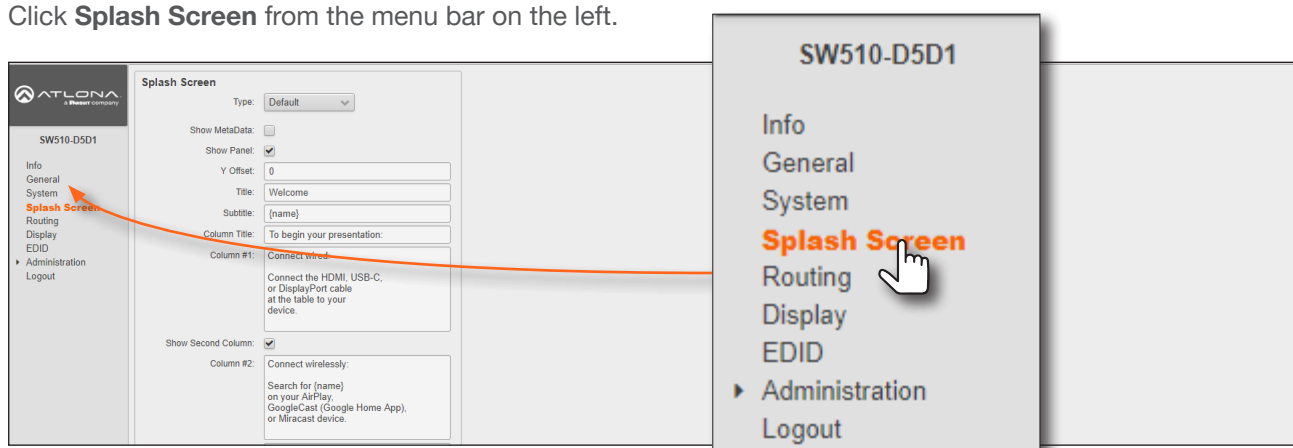

- Make the desired changes to each field, as shown below. Note that the **Subtitle** field is assigned the value **{name}**. This value is a system value, which represents the name of this specific device.

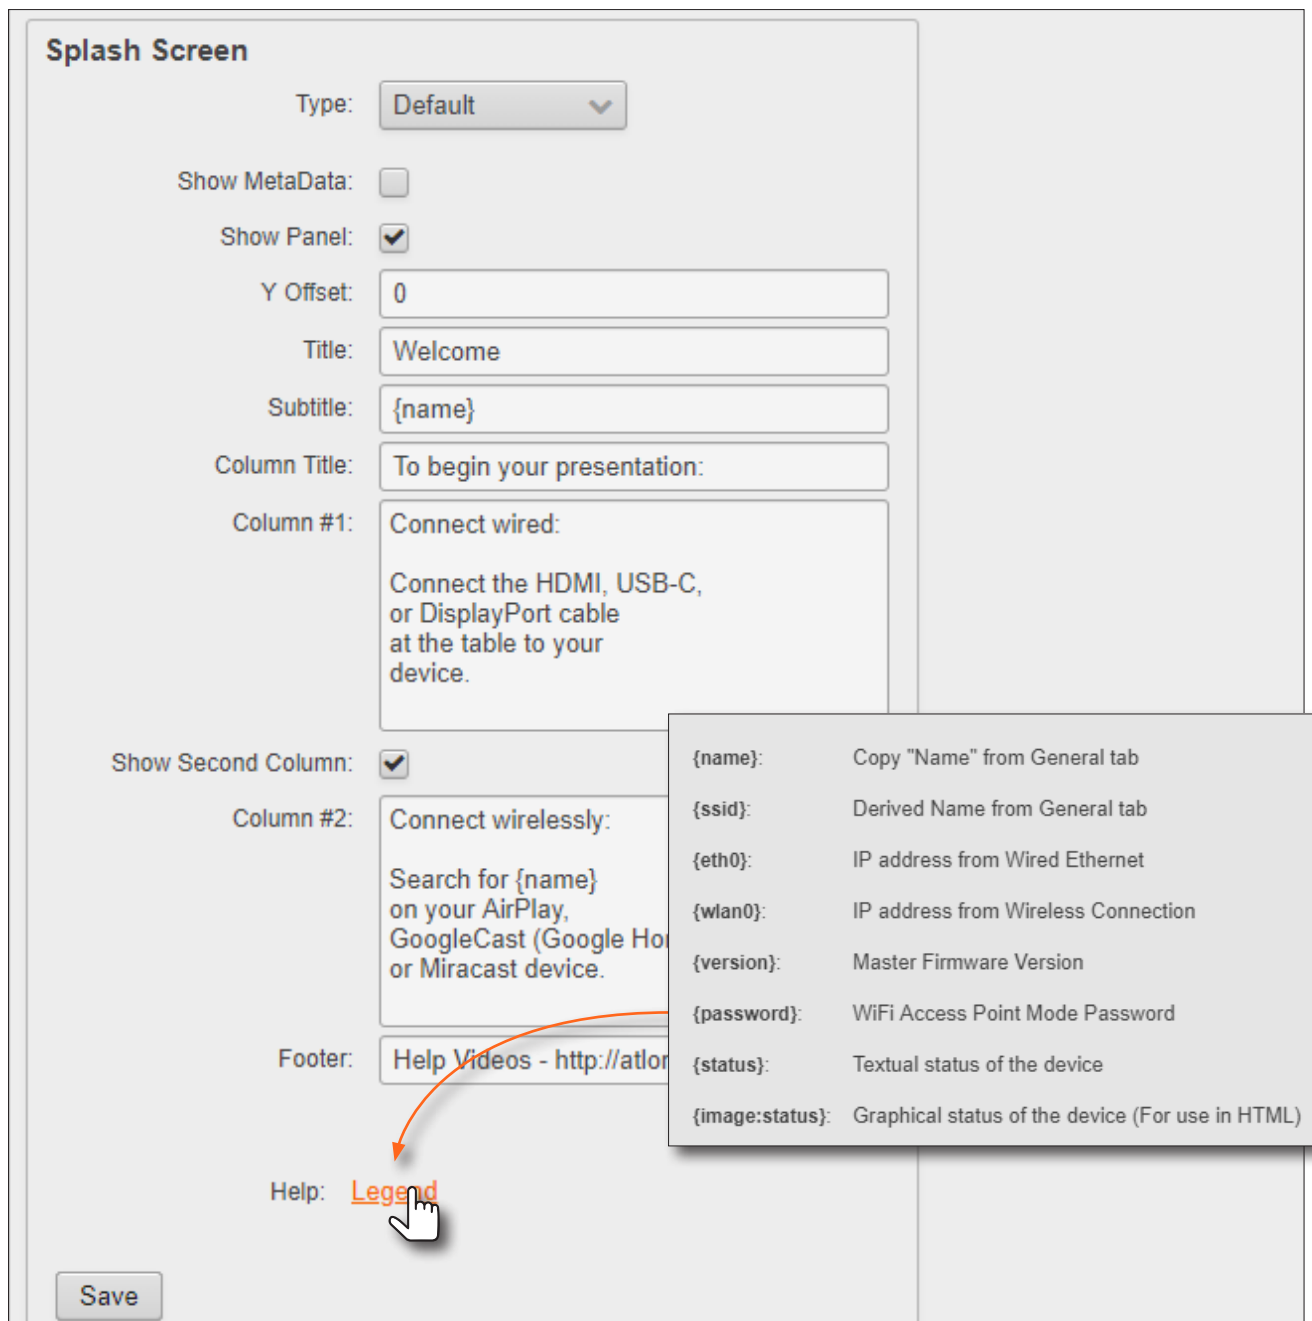

Splash Screen

Type: Default

Show MetaData: ☐

Show Panel: ☒

Y Offset:

Title:

Subtitle:

Column Title:

Column #1:

Show Second Column: ☒

Column #2:

Footer:

Help: Legend

Save

System Values Legend:

- {name}: Copy "Name" from General tab
- {ssid}: Derived Name from General tab
- {eth0}: IP address from Wired Ethernet
- {wlan0}: IP address from Wireless Connection
- {version}: Master Firmware Version
- {password}: WiFi Access Point Mode Password
- {status}: Textual status of the device
- {image:status}: Graphical status of the device (For use in HTML)

Other system values are available and can be placed in any of these fields. To display a list of available system values, click **Legend**. Each tag in the legend is defined as follows:

Tag	Description
{name}	This is the system name, and is usually the conference room/classroom name.
{ssid}	The name of the device when the AT-UHD-SW-510W is configured as an Access Point. Refer to ## for more information.
{eth0}	The IP address of the AT-UHD-SW-510W when connected to a network using an Ethernet cable.

Tag	Description
{wlan0}	The IP address of the AT-UHD-SW-510W when using a wireless connection.
{version}	Displays the Master Firmware version.
{password}	Displays the Access Point password, when the AT-UHD-SW-510W is configured as an Access Point. If configured as an Access Point, this tag will be populated with the selected password. The password can be either static or dynamic. When set to dynamic, this field will be constantly updated. Refer to ## for more information.

Displaying Metadata

Click the **Meta Data** check box to display this information. Metadata includes the name, model, current date, wired IP address, current firmware version, and some image references used by the AT-UHD-SW-510W. The name can be changed under the **General** page (page 71) of the Web GUI. The date (and time) can be set under the **System** page (page 72) of the Web GUI. Refer to **Networking** page (page 86) for information on changing the wired IP address of the AT-UHD-SW-510W.



1. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
2. Login to the web GUI. Refer to **Introduction to the Web GUI** (page 68) for more information.
3. Click **Splash Screen** from the menu bar on the left. Refer to the illustration on the next page, if needed.
4. Click the **Show Meta Data** check box.
5. Click **Save** to commit changes. To hide the metadata, uncheck the **Show Meta Data** check box and click **Save**.

Splash Screen

Type: Default

Show Meta Data: ☒

Show Panel: ☒

Y Offset:

Title:

Subtitle:

Column Title:

Column #1:

Connect wired:

Connect the HDMI, USB-C,
or DisplayPort cable
at the table to your
device.

Show Second Column: ☒

Column #2:

Connect wirelessly:

Search for {name}
on your AirPlay,
GoogleCast (Google Home App),
or Miracast device.

Help: [Legend](#)

Save

Displaying the Wireless Password

This feature is applicable only when the AT-UHD-SW-510W is configured as an Access Point. The wireless password can be displayed as part of any text field on the splash screen. To do this, insert the **{password}** tag as part of a text string. For example:

“To begin your presentation, connect using the SSID and enter the following password: {password}.”

Refer to [The Splash Screen \(page 22\)](#) for more information on the various text fields which can be displayed.

When configured as a Access Point, the wireless password will automatically be displayed by default, at the bottom of the screen, as shown below. In addition to the password, the Name field represents the SSID of the AT-UHD-SW-510W and is used to identify the unit as an available Access Point. Refer to [Wireless Configuration \(page 32\)](#) for information on setting up a Wifi connection.



Changing the Splash Screen Image

The background image can be changed to any of the three included splash screens, shown below. In addition, custom images may be uploaded and used instead of the factory splash screens. Splash screen cycling, which is outlined below, can prevent image persistence which is the equivalent of image burn-in on CRT and plasma computer monitors.

Splash screen #1 (default)



Splash screen #2



Splash screen #3




Automatically cycling through factory splash screen

1. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
2. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
3. Click **Splash Screen** from the menu bar on the left.
4. Click the **Enable Image Rotation** check box.

By default, when **Image Rotation** is enabled, each background will be displayed for five minutes before switching to the next image.

5. Click the **Image Rotation Time** drop-down list to select the desired time interval. Range: 1 - 10 minutes. To disable image cycling, uncheck the **Enable Image Rotation** check box.

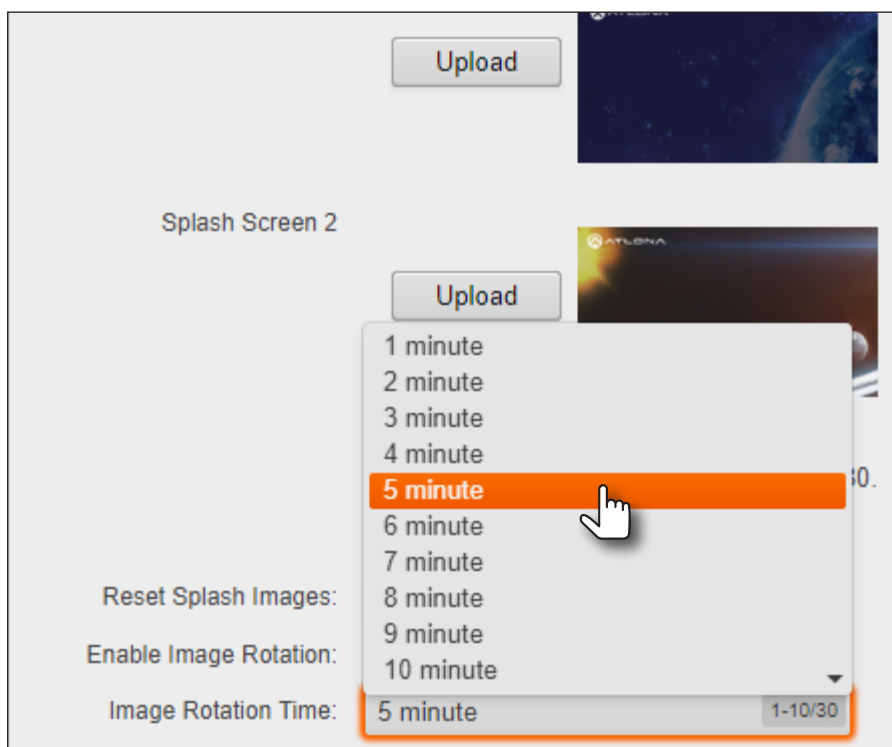

Uploading a custom image

Any one of the splash screens or the loading screen can be replaced with a custom image.


1. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
2. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
3. Click **Splash Screen** from the menu bar on the left.



IMPORTANT: Custom images should not exceed 1920 x 1080. All common image types, such as JPG, BMP, PNG, TIF, GIF, are supported.

4. Click the **Upload** button next to the image to be changed.
5. Select the desired file and click the **Open** button on the dialog box.

If viewing the currently active splash screen, the splash screen will be replaced with the uploaded image.

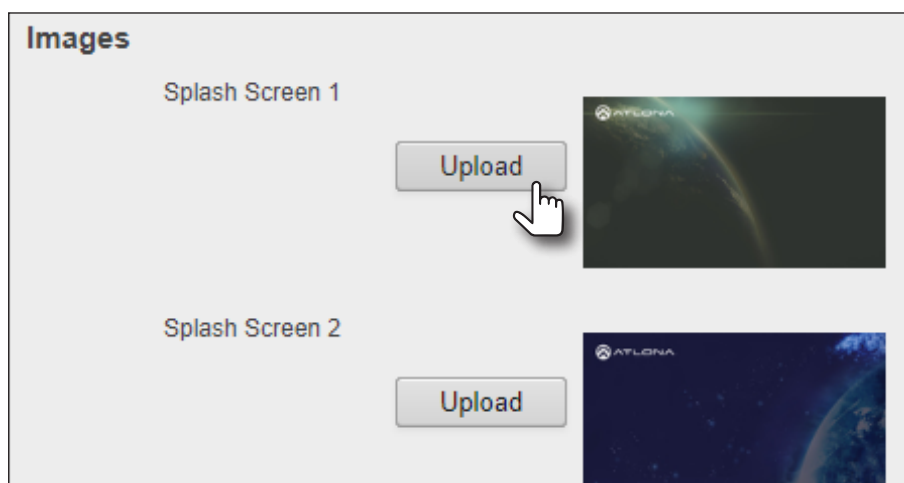


Resetting Splash Screen Images



IMPORTANT: This will restore the splash screen images to the factory-default settings. All custom images that were uploaded to the AT-UHD-SW-510W will be deleted.

1. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
2. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
3. Click **Splash Screen** from the menu bar on the left.
4. Click the **Reset to default** button. The AT-UHD-SW-510W will display a message box to confirm the operation. Click **OK** to proceed or click **Cancel** to abort.

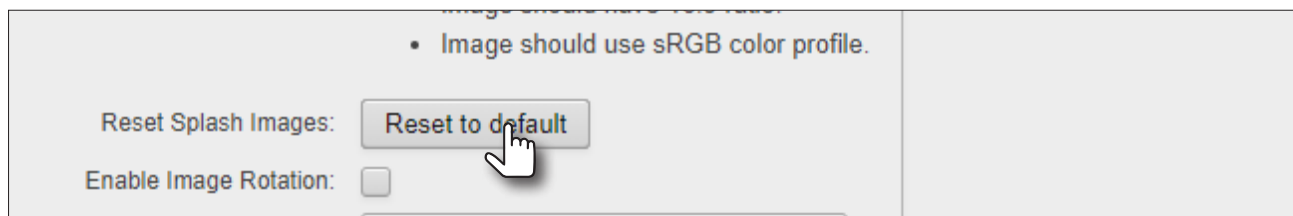

HTML Splash Screens

HTML-based splash screens can be used to create content-rich splash screens. This section provides details on creating and uploading an HTML splash screen. Familiarity with HTML is assumed. The AT-UHD-SW-510W comes a default HTML splash screen, which can be downloaded from the **Resources** tab of the [product page](#) on the web.

The following table provides a list of supported / unsupported features:

Feature	Supported	Not Supported
HTML5	●	---
Relative / absolute references	●	---
Dynamic images (e.g. animated GIF files)*	---	●
CSS	●	---
PHP, JavaScript, ASP (client/server-side processing)	---	●

* If a dynamic image is used, only the first frame of the image will be displayed on the splash screen.

1. Create the HTML file, along with any links to the desired images. The AT-UHD-SW-510W comes with a default HTML file (contained within a .zip file), and can be used as a starting point when creating a custom HTML splash screen. The example below, is a partial listing of the HTML code within the file.



NOTE: When creating an HTML splash screen, it must be designed to fit a 1920 x 1080p display.

```
<HTML>
  <head>
    <style>
      .container {
        position: relative;
      }

      .bottomleft {
        position: absolute;
        bottom: 64px;
        left: 64px;
        font-size: 25px;
      }

      .bottomright {
        position: absolute;
        bottom: 64px;
        right: 64px;
        font-size: 25px;
      }

      .icon {
        width: auto;
        height: 35px;
        vertical-align: middle;
      }

      .OutlineText {
        font: Tahoma, Geneva, sans-serif;
        font-size: 64px;
        color: white;
        text-shadow:
          ...
          ...
      }
    ...
  ...
</HTML>
```

2. Save the file as `index.html_template`. This file name must be used.
3. Combine the `index.html_template` file along with all required external images/files into a `.zip` file called `html.zip`.




IMPORTANT: The `index.html_template` file **must** reside in the root directory, within the `html.zip` file. Other files (`.css`, `images`, etc.) can be placed in folders, if desired, or can also be left in the root directory.

The file structure for the default `html.zip` file, located on the AT-UHD-SW-510W, is as follows:

```
airplay.png
cast.png
chrome.png
devices.png
index.html_template
wifi.png
windows.png
```

4. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
5. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
6. Click **Splash Screen** from the menu bar on the left.
7. Click the **Type** drop-down list and select **HTML**.

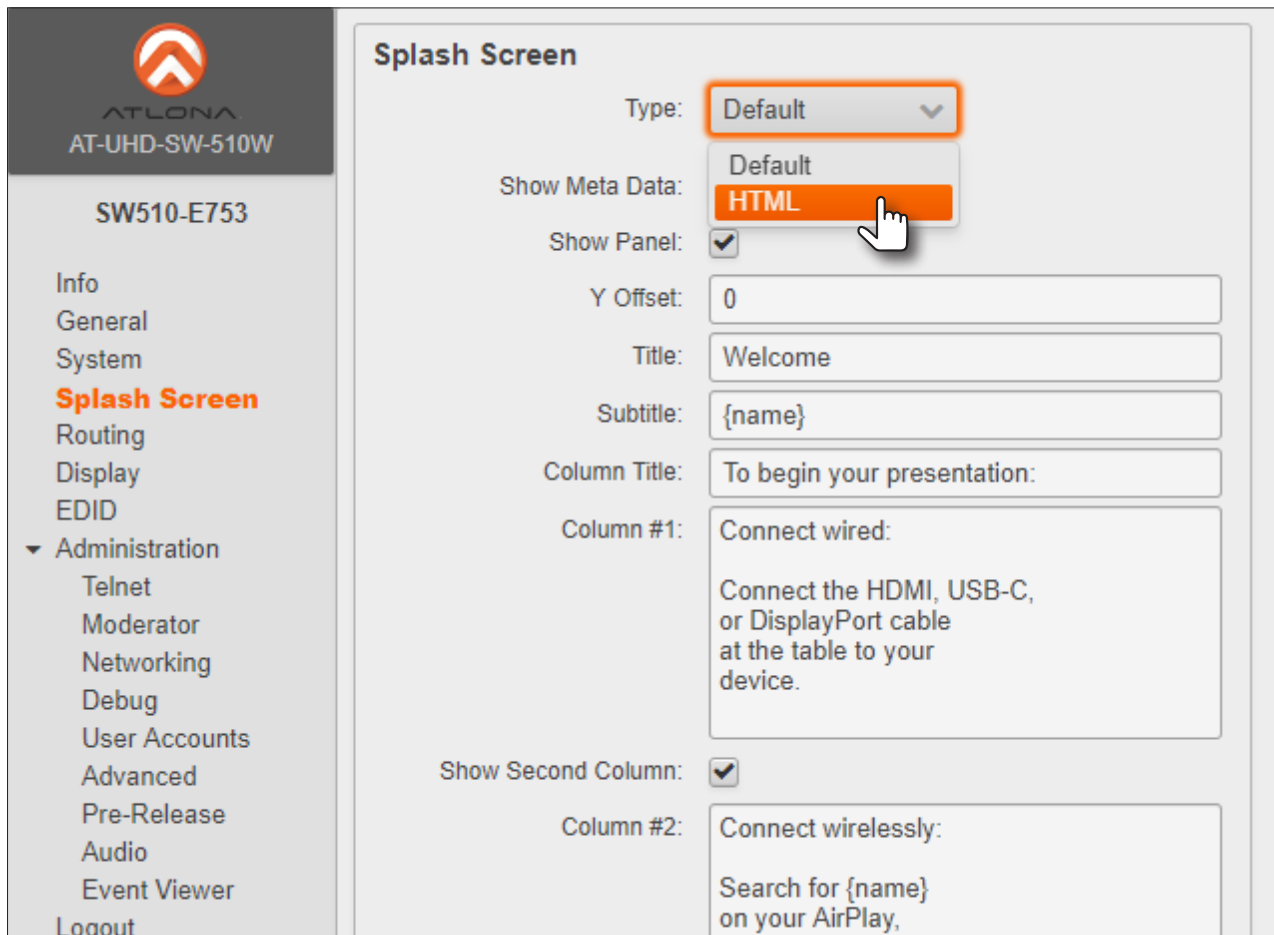

Splash Screen

Type: **Default** ▼

Show Meta Data: **Default**
HTML

Show Panel: ☒

Y Offset:

Title:

Subtitle:


Column Title:

Column #1:
Connect the HDMI, USB-C, or DisplayPort cable at the table to your device.

Show Second Column: ☒

Column #2:
Search for {name} on your AirPlay, or connect via (Gigaset, etc.)

- Click the **Upload** button.

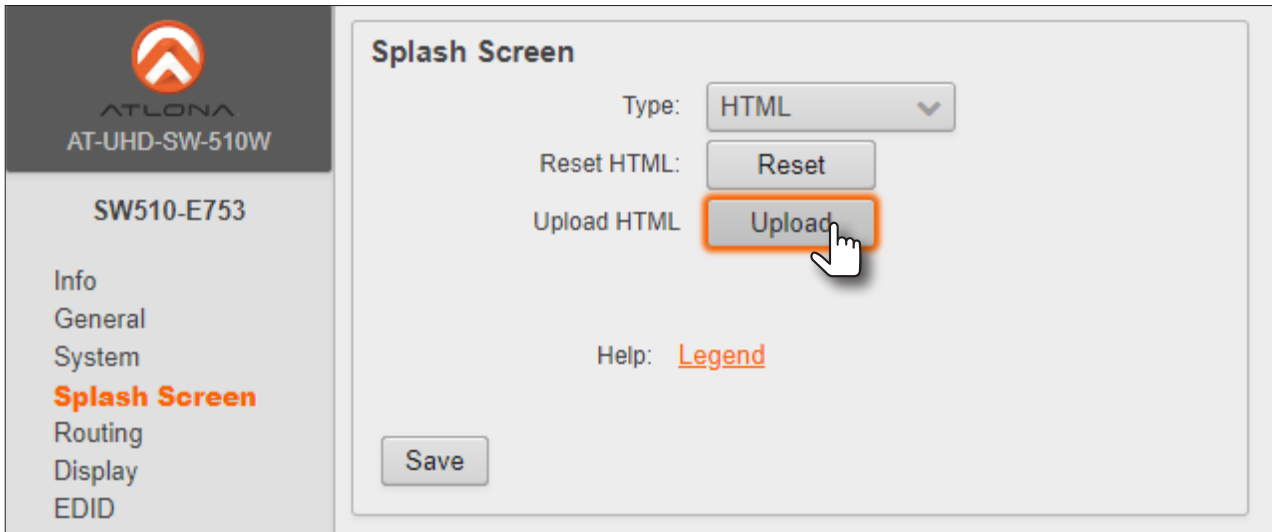


- Select the `html.zip` file, then click **Open**, to upload the file to the AT-UHD-SW-510W.
- Click the **Save** button to commit changes.

Resetting the HTML Splash Screen



IMPORTANT: The Reset (Reset HTML) button will delete any loaded HTML data and replace it with the default HTML page that comes with the AT-UHD-SW-510W.

- Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
- Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
- Click **Splash Screen** from the menu bar on the left.
- Click the **Type** drop-down list and select **HTML**.
- Click the **Reset** button.

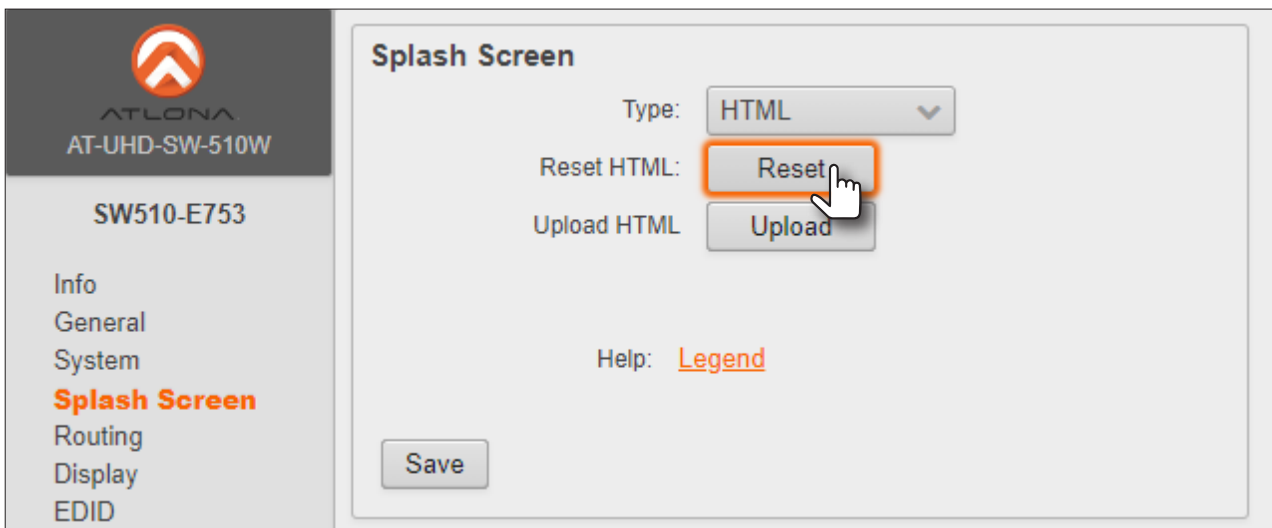


Wireless Configuration

The AT-UHD-SW-510W features a wireless gateway, providing convenient Wi-Fi® connectivity for iOS, Android, Mac, Chromebook, or Windows-based devices, and a built-in web GUI. In addition, the AT-UHD-SW-510W can be configured as a wireless access point (AP). The addition of a built-in firewall provides control of incoming and outgoing network traffic.

Access Point Mode

When configured as an Access Point (AP), users will be able to connect wireless devices to the AT-UHD-SW-510W.

1. Make sure the AT-UHD-SW-510W is configured properly for use on a wired network. Refer to [IP Configuration \(page 16\)](#) for more information.
2. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
3. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
4. Click **Administration > Networking** from the menu bar on the left.
5. Under the **Wifi** tab, select Access Point from the **Mode** drop-down list.

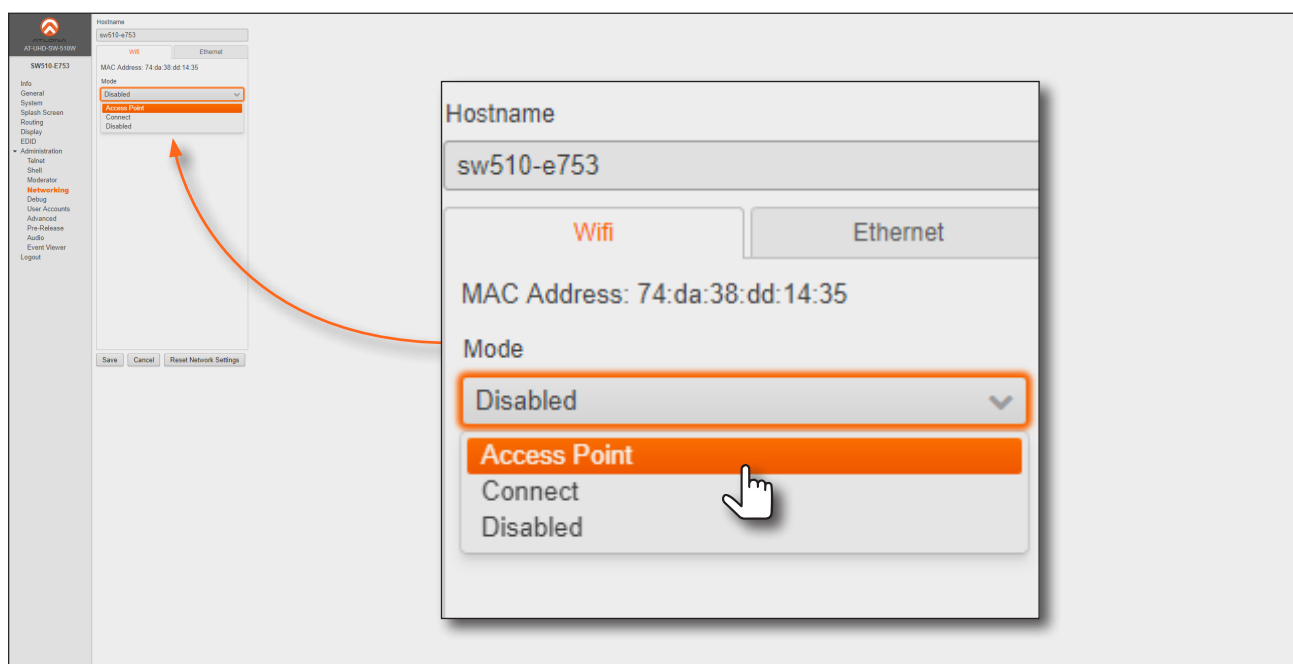

6. The name of the wireless network will appear in the **SSID** field. This name is identical to the text in the **Derived** field, under the [General page \(page 71\)](#). To change the SSID, go to the **General** page and modify the **Name** field.
7. Enter the password in the **Password** field. The password will be required by clients connecting to the AT-UHD-SW-510W. By default, this field is populated by a 256-character hash value. Make sure to clear this value and provide a secure password.
8. Check the **No Password in AP Mode** check box if no password is desired.




IMPORTANT: If no password is supplied in Access Point mode, any client will be able to connect to the AT-UHD-SW-510W without credentials. Make sure this is the desired operation before continuing.

9. Click the **Hide Password on OSD** check box to prevent the password from being displayed.
10. Click the **Rotate WiFi Password** check box to allow the AT-UHD-SW-510W to generate a new random password.

This feature can be used to provide an extra level of security. Dynamically rotating the password decreases the risk that unauthorized clients will not have access to the AT-UHD-SW-510W if the current password is “leaked” or observed on the splash screen outside of a meeting space or other environment. It should be noted that the system will not change the password, once content is being presented, and will wait until the presentation is finished to begin rotating the password.

11. Click the **Password Rotation Interval** drop-down list to select the rotation time interval for new password generation. The default setting is 1 hour.
12. Enter the wireless channel number in the **Channel** field. Contact the network administrator if necessary.
13. If a different set of DNS servers are desired, click the **DNS Mode** drop-down list and select the desired mode:
 - **Use default DNS servers**
Uses the default DNS provided by the DHCP server. This is the default setting.
 - **Inherit from wired Network**
Uses the same DNS provided by the wireless network.
 - **Static**
Enter the primary and secondary DNS addresses in the **DNS Server #1** and **DNS Server #2** fields, respectively.
14. Click the **Save** button to commit changes.

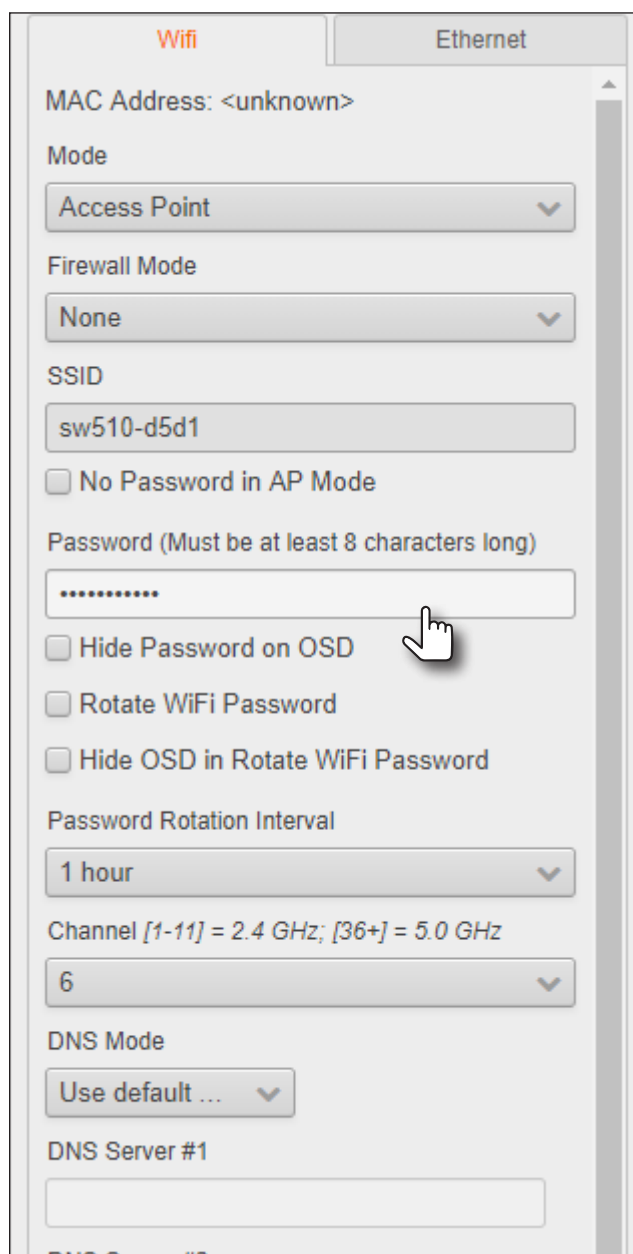


The screenshot displays the configuration interface for the AT-UHD-SW-510W device, specifically the **Wifi** settings tab. The interface is organized into several sections:

- MAC Address:** <unknown>
- Mode:** Access Point (dropdown menu)
- Firewall Mode:** None (dropdown menu)
- SSID:** sw510-d5d1 (text field)
- Password:** (masked with dots, with a note: "Must be at least 8 characters long")
- Checkboxes:**
 - ☐ No Password in AP Mode
 - ☐ Hide Password on OSD
 - ☐ Rotate WiFi Password
 - ☐ Hide OSD in Rotate WiFi Password
- Password Rotation Interval:** 1 hour (dropdown menu)
- Channel:** 6 (dropdown menu, with a note: "[1-11] = 2.4 GHz; [36+] = 5.0 GHz")
- DNS Mode:** Use default ... (dropdown menu)
- DNS Server #1:** (empty text field)
- DNS Server #2:** (empty text field)

Firewall Mode (optional)

This feature allows control of incoming and outgoing network traffic, from/to a network that is connected to the RJ45 connector on the AT-UHD-SW-510W. The AT-UHD-SW-510W provides the following firewall modes: **Block Private Network**, **Block Internet**, **Block All**, and **None**. If this feature is not desired, then the following steps can be skipped. The firewall can be configured or disabled at any time. The default setting is **None**.

1. Click **Firewall Mode** drop-down list and select the desired option.

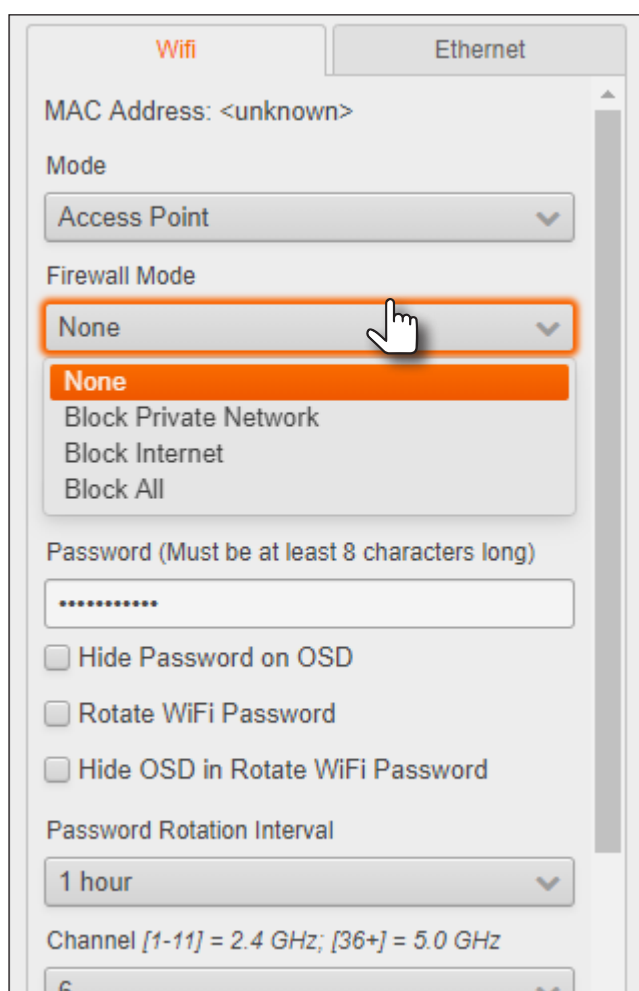

The screenshot shows the configuration interface for the AT-UHD-SW-510W device. The 'Wifi' tab is selected. The 'MAC Address' is shown as '<unknown>'. The 'Mode' is set to 'Access Point'. The 'Firewall Mode' dropdown menu is open, showing the following options: 'None' (highlighted with an orange background and a mouse cursor), 'Block Private Network', 'Block Internet', and 'Block All'. Below the dropdown, there is a 'Password' field (must be at least 8 characters long), a 'Hide Password on OSD' checkbox, a 'Rotate WiFi Password' checkbox, a 'Hide OSD in Rotate WiFi Password' checkbox, a 'Password Rotation Interval' dropdown set to '1 hour', and a 'Channel' dropdown set to '6'.


Setting	Description
None (default)	Select this option to disable the firewall on the AT-UHD-SW-510W and allow all incoming and outgoing network traffic.
Block Private Network	This option prevents unauthorized clients from accessing the AT-UHD-SW-510W, by restricting the subnet of the LAN segment for which the unit is configured.
Block Internet	Allows wireless access to the AT-UHD-SW-510W and communication with the internal network, but prevents Internet access (Google, YouTube, etc).
Block All	All inbound network traffic is blocked. Wireless traffic to the AT-UHD-SW-510W is permitted, but will not pass the AT-UHD-SW-510W to the network.

2. Click the **Save** button to accept and save all changes.


Connect Mode

Use this mode to connect the AT-UHD-SW-510W to another wireless network.


1. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
2. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
3. Click **Administration > Networking** from the menu bar on the left.
4. Under the **Wifi** tab, select Connect from the **Mode** drop-down list.

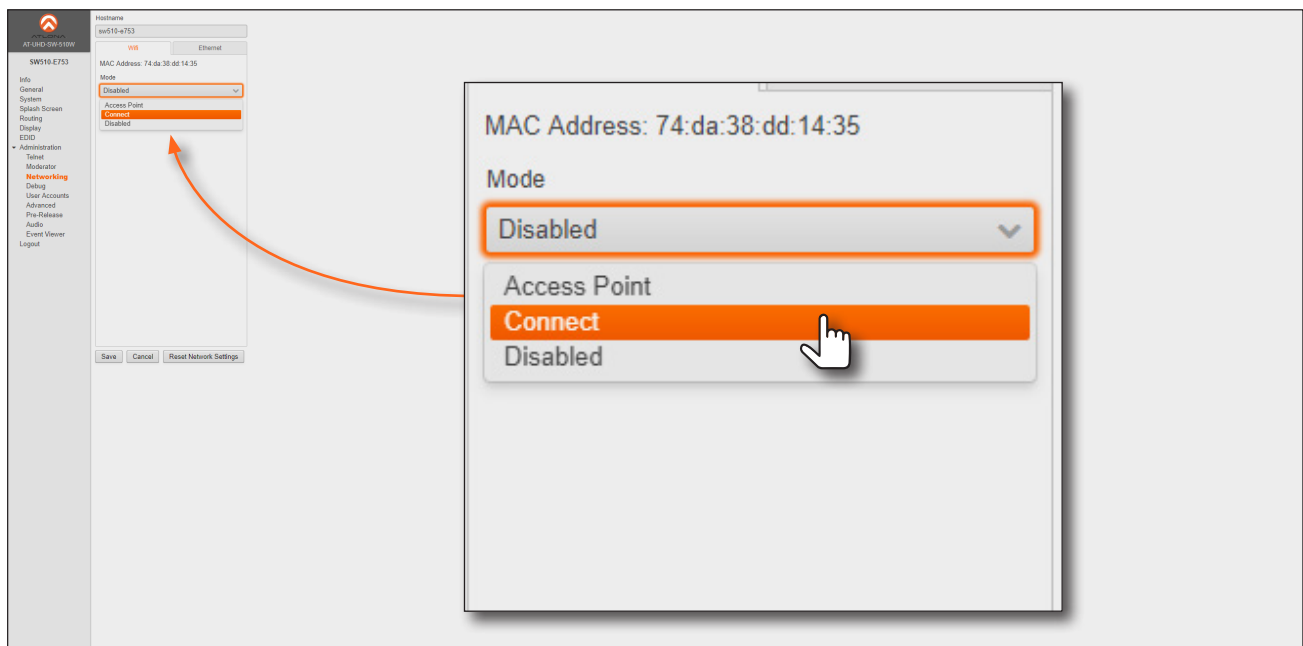


5. Click the **Pick** button.

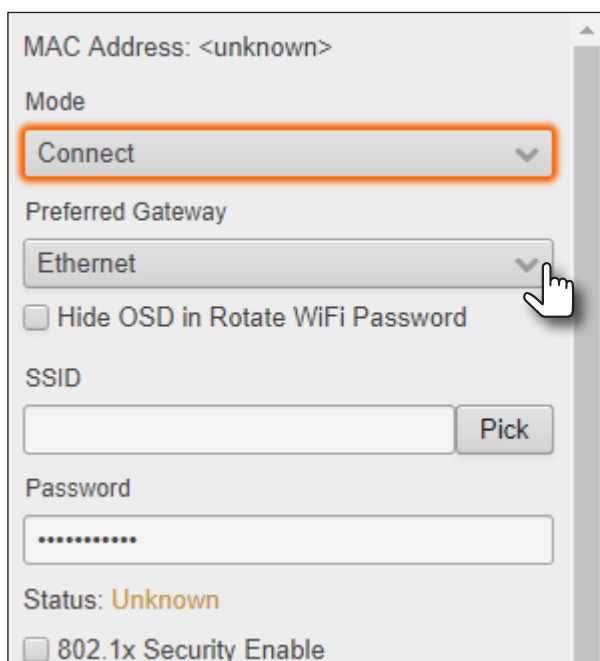


6. Select the desired wireless network from the pop-up dialog box.

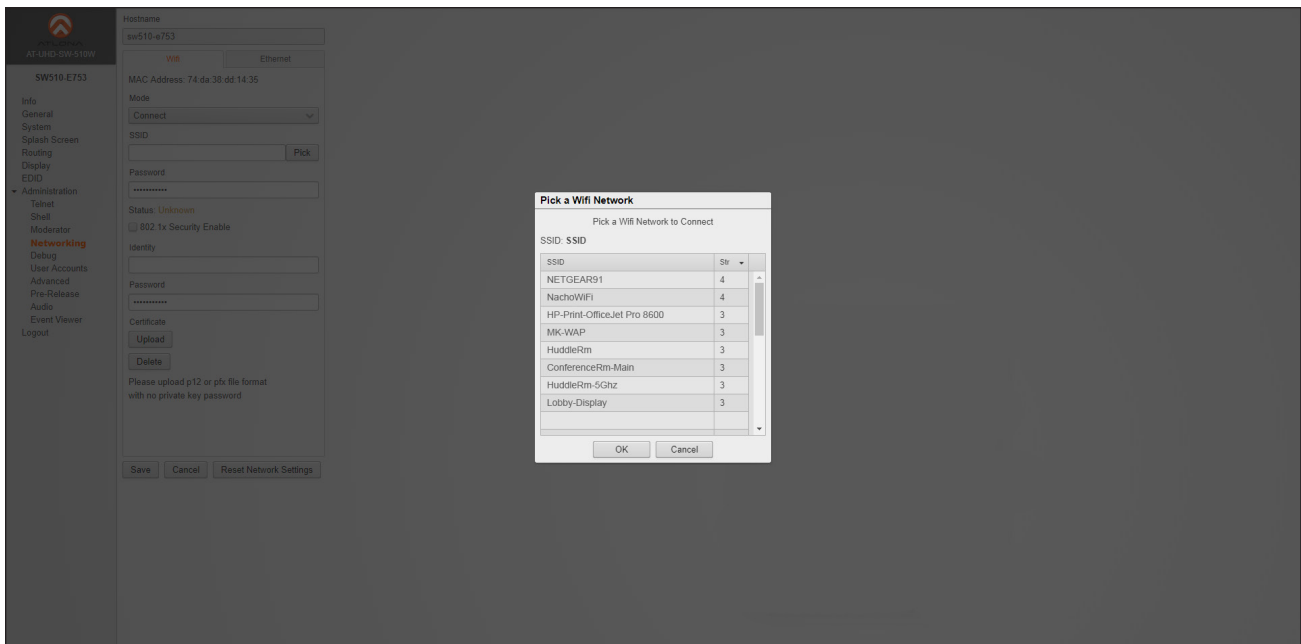


7. Click the **OK** button to accept the selection and dismiss the dialog box. Click the **Cancel** button to return to close the dialog and return the Wifi tab.
8. Enter the password for the wireless network in the **Password** field.

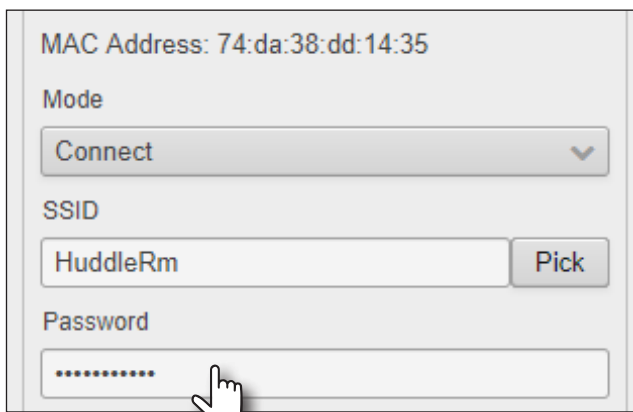

9. Click the **Save** button near the bottom of the screen to commit changes. The system will prompt to be rebooted, as shown below. Click **Yes** to perform a reboot. To reboot at a later time, click the **Later** button.

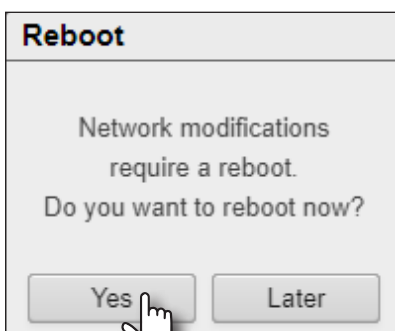

Once a successful connection has been established, the **Status** field will display Connected, as shown below.

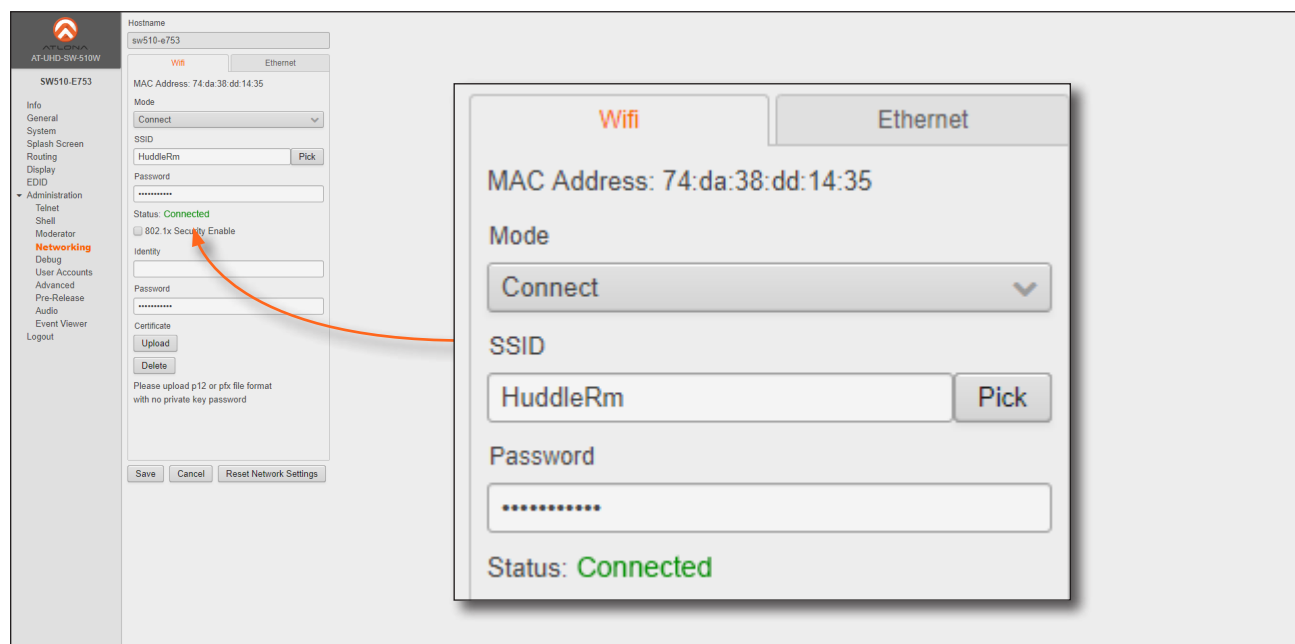

The following table provides a list of possible status messages.

State	Description
Connected	The AT-UHD-SW-510W is connected to the wireless network.
Not Connected	Unsuccessful connection. Check to make sure the password was entered correctly. This state will also occur if the wireless network, to which the AT-UHD-SW-510W is connected, is taken offline.
Unknown	The network state is unknown. This message is displayed if the AT-UHD-SW-510W has not been configured to connect with a wireless network.

Casting

The AT-UHD-SW-510W interface provides the ability to transmit (“cast”) the screen of any iOS®, Android™, macOS®, Chromebook, or Windows device over Wi-Fi, without having to install a separate application or driver. The AT-UHD-SW-510W can serve as an integrated, dual-band access point, or be networked into an existing Wi-Fi installation.





IMPORTANT: Several apps have been known to trigger HDCP, even if the content is unprotected. In these cases, the AT-UHD-SW-510W will be unable to decode and present the content.

iOS Devices

AirPlay® is only supported on iOS 5 or higher.

1. Select the **BYOD** input on the AT-UHD-SW-510W.
2. On the iOS device, go to **Settings > Wi-Fi**.
3. Select the network to which the AT-UHD-SW-510W is connected or join its access point. The example below shows the AT-UHD-SW-510W in **Connect Mode**. Refer to [Connect Mode \(page 35\)](#) for more information.

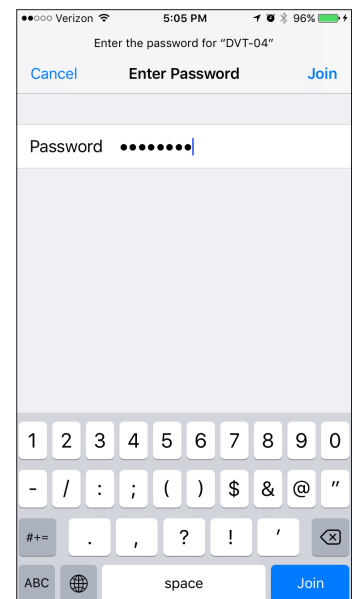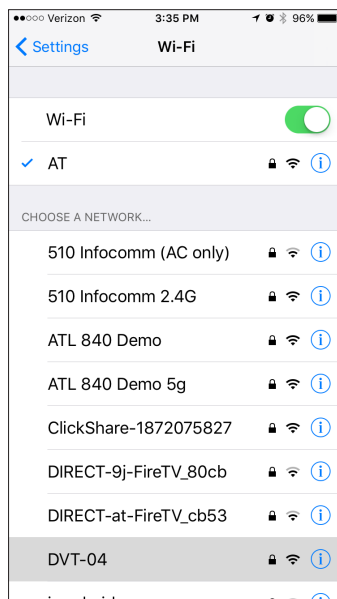


4. Once connected, swipe-up on the bottom of the iOS device to display the **Control Center**.
5. Tap the **AirPlay Mirroring** option to display a list of available AirPlay® devices.

Note that if the iOS device is running 11.0.3 or later, the **AirPlay** option has been changed to **Screen Mirroring**.

iOS 10




iOS 11.0.3 or later

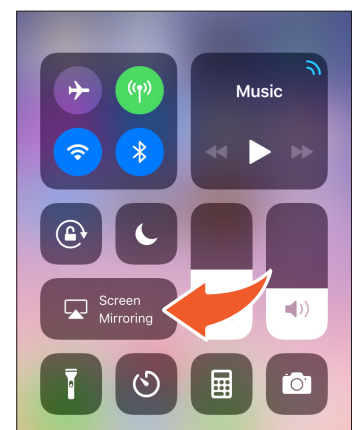

Basic Operation

7. Tap the SSID from the list of devices.
8. Close the **Control Center** by either swiping down or pressing the **Home** button.
9. The image of the iOS device will now appear on the connected display.


Note that depending upon the application, the image on the screen can be rotated. For example, when using the camera app, if the iOS device is rotated 90 degrees, then the image on the screen will also be rotate 90 degrees.

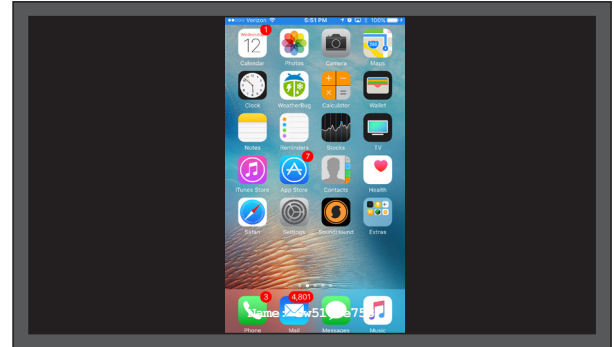

OS X

AirPlay is only supported on Mountain Lion 10.8 or later. To determine if AirPlay is supported on the system being used, click **System Preferences > Displays**. If the “Show mirroring options in the menu bar when available” check box is not displayed, then AirPlay is not supported.

1. Click the **Wi-Fi** icon in the menu bar and select the network to which the AT-UHD-SW-510W is connected.

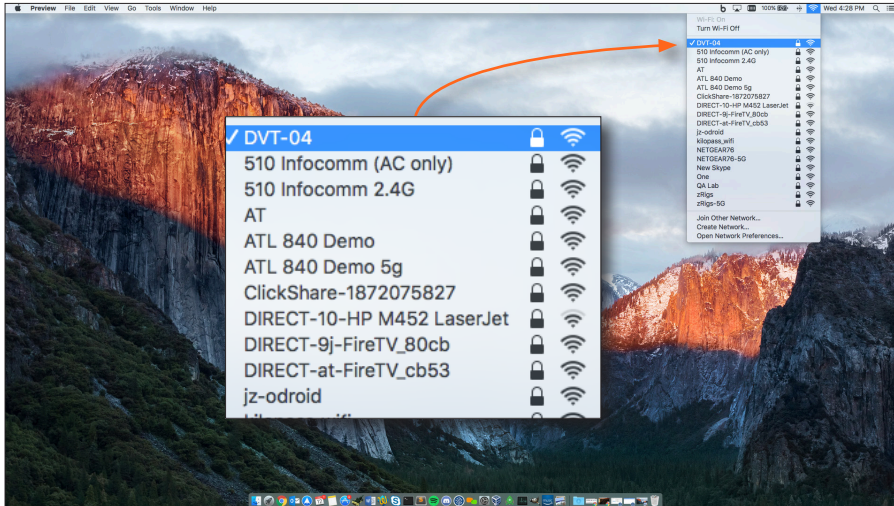


2. Enter the password for the Wi-Fi network, then click the **Join** button.




AirPlay can be used to either mirror or extend the Mac display.

- **Mirroring**
Click the AirPlay icon in the menu bar and select the desired display to be mirrored.
- **Extending**
Click the AirPlay icon and select “Use As Separate Display” from the list of displays, to extend the Desktop to another display.

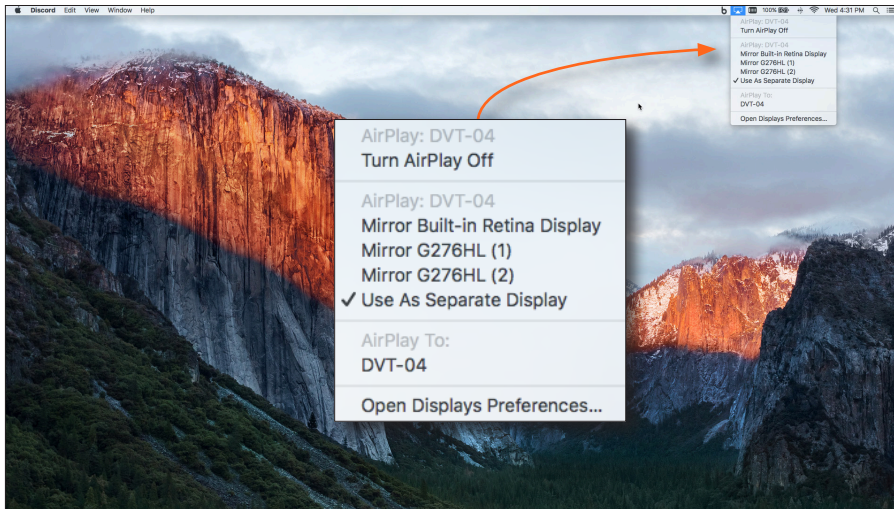

- **Turning Off AirPlay**
Click the AirPlay icon and select “Turn AirPlay Off”.

AirPlay can also be turned off by clicking **System Preferences > Displays**. Click the **AirPlay Display** drop-down list and select “Off”. To re-enable AirPlay, select the device from the drop-down list.

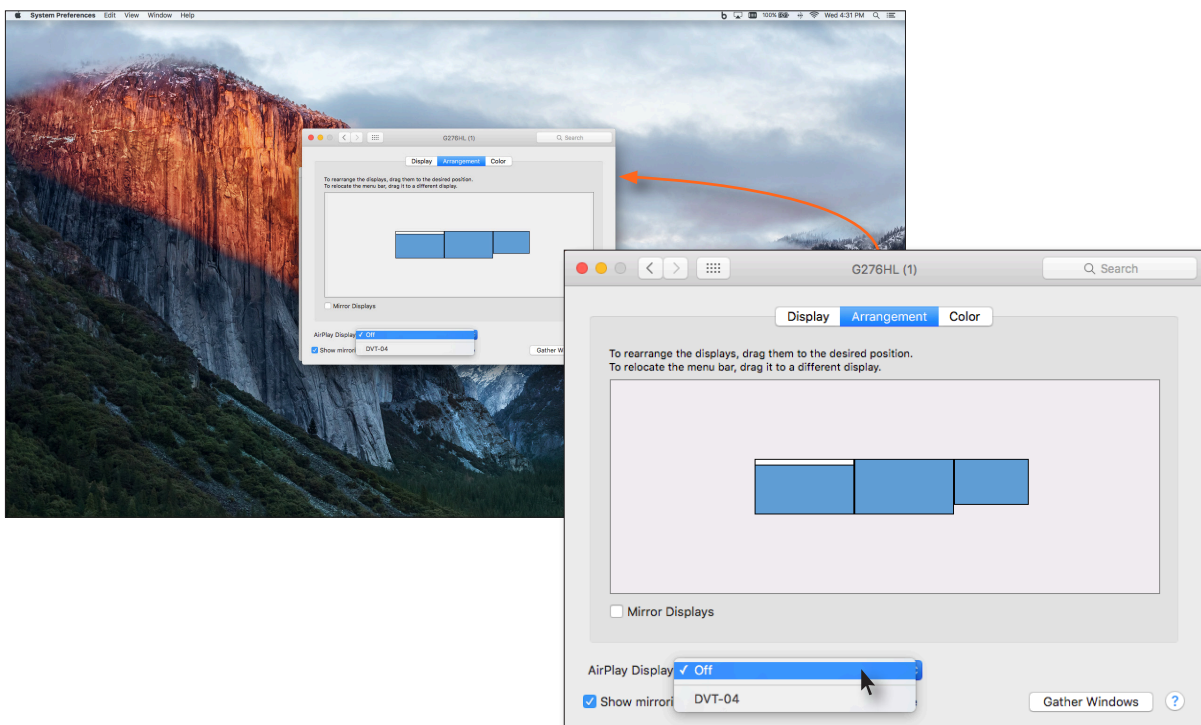



Microsoft Miracast

Miracast is a wireless protocol that allows content to be transmitted from laptops and other mobile devices to displays. The latest release of Microsoft Windows[®] 10 supports Miracast.

Displaying Miracast devices can be done in more than one way. Three methods are discussed below. The first method is the most direct method.


Method 1


1. Press  +  keys, simultaneously.
2. The list of available devices will be displayed on the right-hand side of the screen. Select the AT-UHD-SW-510W hostname from the list.

Method 2


1. Right-click on the Windows Desktop and select **Display Settings** from the pop-up menu.
2. In the right-hand column, scroll down, then click **Connect to a wireless display**.

Google Chrome

1. Make sure both the AT-UHD-SW-510W and the “casting” computer are on the same network.
2. Launch Google Chrome.
3. Click the  icon, in the upper right corner of the Chrome browser.
4. Click the **Cast...** option from the drop-down menu.

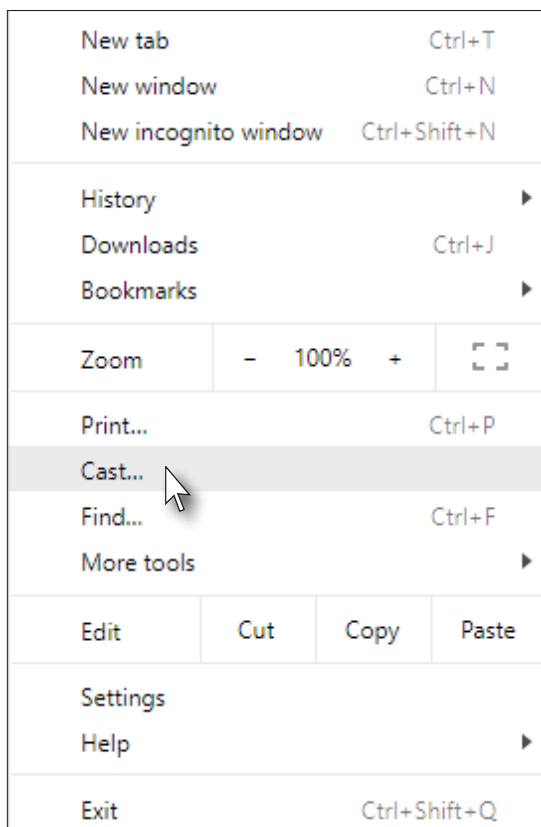


5. Select the hostname of the AT-UHD-SW-510W from the **Cast to** menu.

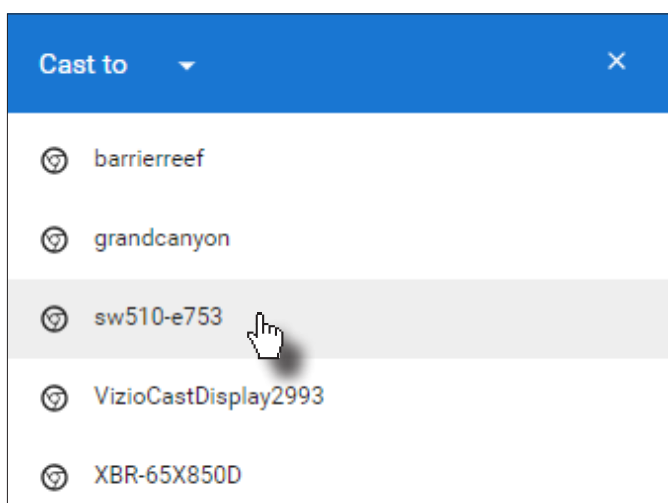


Basic Operation

Chrome will immediately begin casting to the AT-UHD-SW-510W. Note that if Moderator mode is enabled, this cast will be placed in the **Users** table queue. Refer to [Using Moderator Mode \(page 53\)](#) for more information.

- Adjust the volume (if audio is present), by clicking and dragging the slider control. In addition, either **Remote screen** or **Both screens** can be selected from the **Show fullscreen videos on** drop-down list.
- Click the **x** in the upper-right corner of the Casting tab to dismiss this dialog.

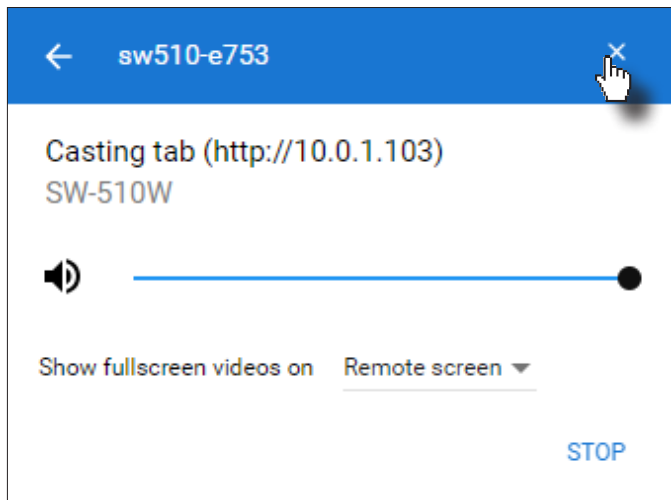

When Chrome is casting, the  icon will appear in the upper-right portion of the menu bar. Clicking this icon will display the Casting tab dialog.

In addition, a blue rectangle will be displayed in the browser tab, which is sharing (“casting”) the content to the AT-UHD-SW-510W. If the browser tab is closed, then the casting process will be terminated.

- Click **STOP** to discontinue casting to the AT-UHD-SW-510W.

Advanced Operation

Matrix Modes

The AT-UHD-SW-510W features two matrix modes: Matrix Mode and Matrix Mode with static route. Enabling matrix mode provides the ability to use AT-UHD-SW-510W in video codec / conference applications, using a dual-presentation mode.


Matrix Mode

This mode allows the AT-UHD-SW-510W to independently switch between any input or both outputs. Following the instructions below to configure Matrix Mode.

1. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
2. Click **Routing** from the menu bar on the left.
3. Click the **Matrix Switch** drop-down list and select **Matrix Mode**.



NOTE: When matrix mode is enabled, both auto-switching and display power control will be disabled.

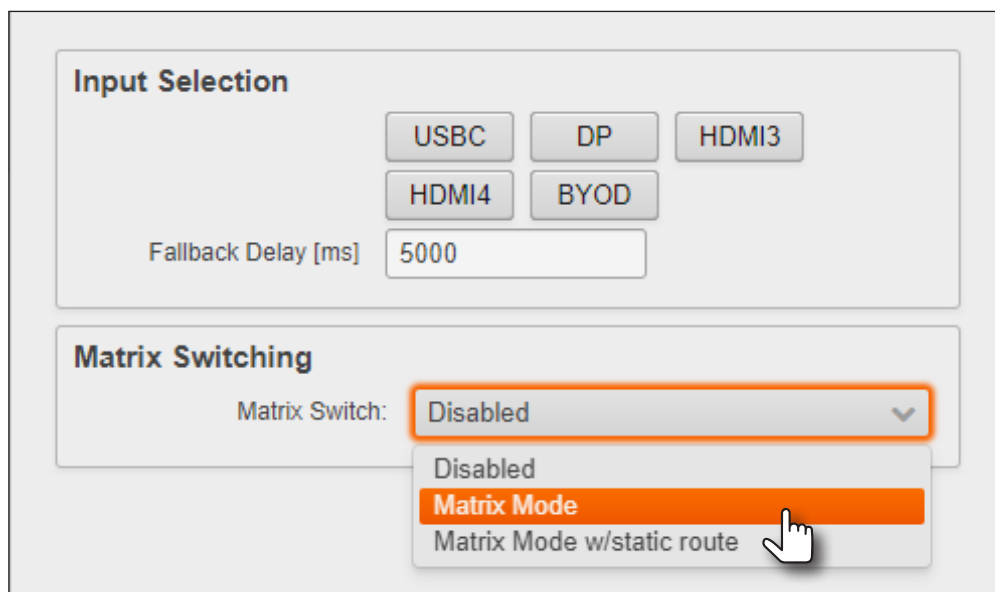

Input Selection

USBC DP HDMI3

HDMI4 BYOD

Fallback Delay [ms] 5000

Matrix Switching


Matrix Switch: Disabled

Disabled

Matrix Mode

Matrix Mode w/static route

4. Click the **Matrix Mode HDMI Source** and **Matrix Mode HDBaseT Source** drop-down lists to select the source devices. Note that the values shown in the illustration below, are arbitrary. Routing is managed using API commands and a control system.

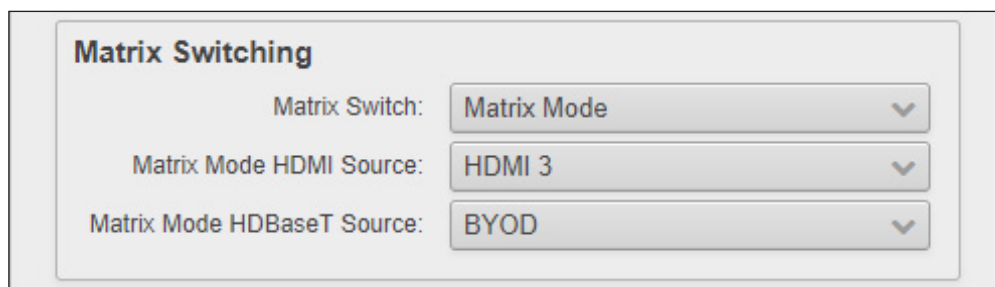

Matrix Switching


Matrix Switch: Matrix Mode

Matrix Mode HDMI Source: HDMI 3

Matrix Mode HDBaseT Source: BYOD

Refer to the illustration on the next page for an example diagram.


Example diagram illustrating a Matrix Mode application.

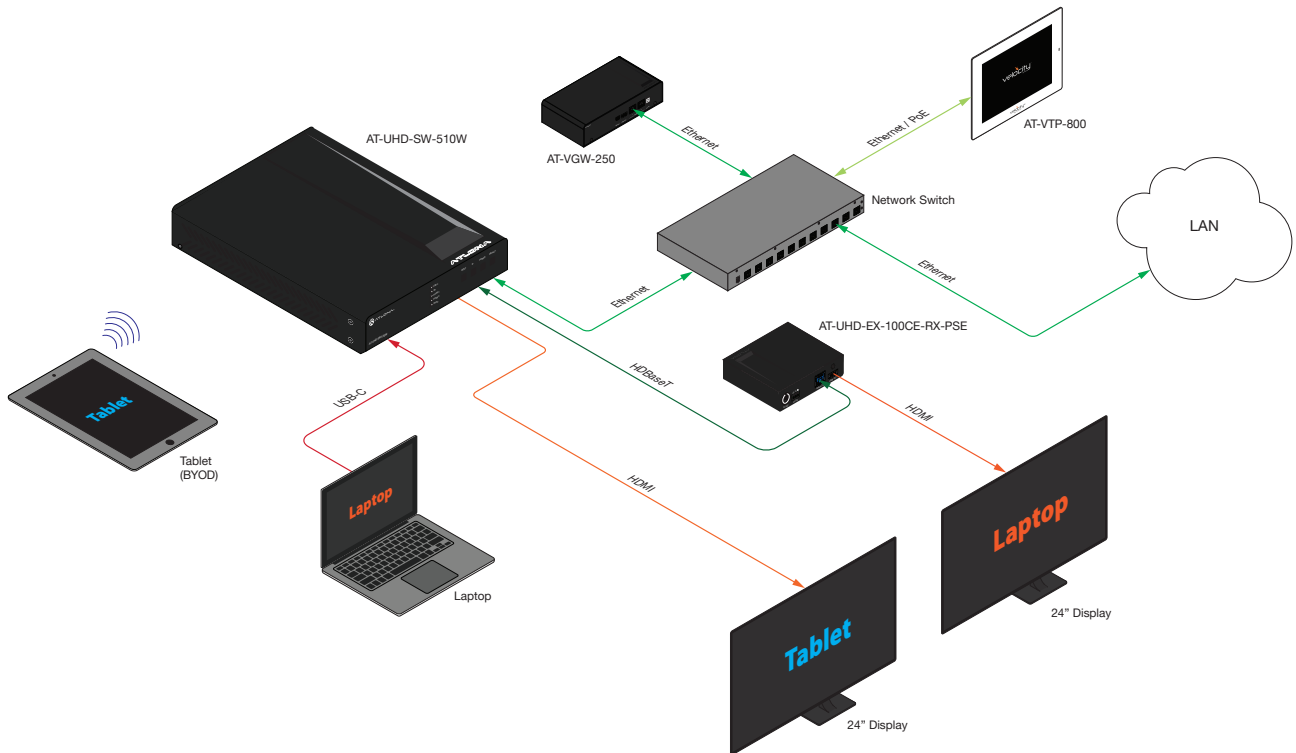

Matrix Mode w/ Static Route

This mode allows the AT-UHD-SW-510W to be integrated with a video conference system. In this mode, both static input and output routing are specified. Auto switching will be enabled. However, the specified static input will be removed from the auto-switching pool. For example, if the **HDMI IN 3** port is specified as a static input, then auto-switching will “skip” this port when auto-switching. The instructions below, provide an example setup.

1. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
2. Click **Routing** from the menu bar on the left.
3. Click the **Matrix Switch** drop-down list and select **Matrix Mode w/static route**.

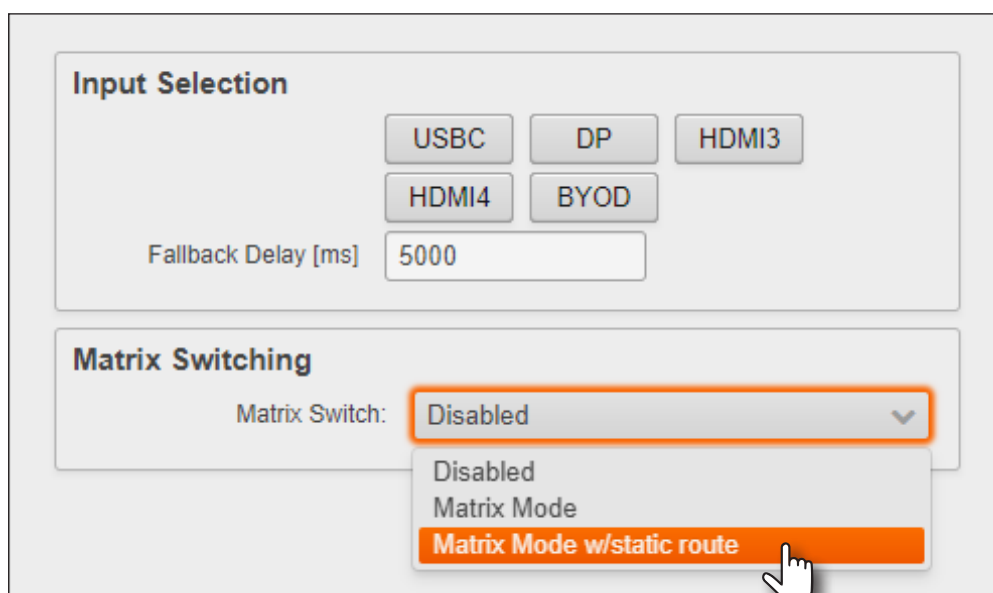

Input Selection

USBC DP HDMI3

HDMI4 BYOD

Fallback Delay [ms] 5000

Matrix Switching


Matrix Switch: Disabled

Disabled

Matrix Mode

Matrix Mode w/static route

4. Click the **Matrix Mode Static Output** and **Matrix Mode Static Source** drop-down lists to select the output and source devices. Note that the values shown in the illustration below, are arbitrary. Routing is managed using API commands and a control system.

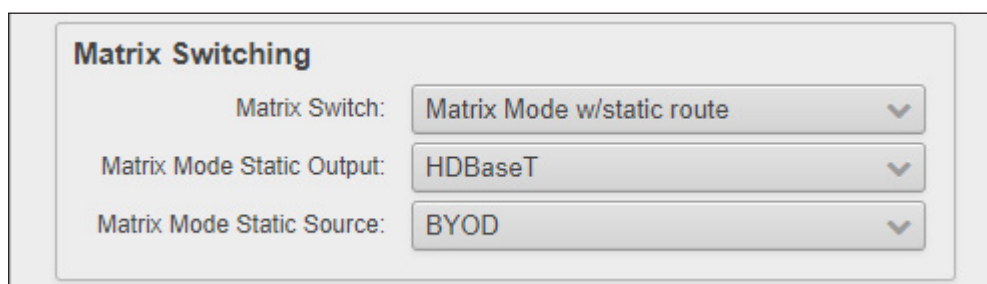

Matrix Switching


Matrix Switch: Matrix Mode w/static route

Matrix Mode Static Output: HDBaseT

Matrix Mode Static Source: BYOD

Refer to the illustration on the next page for an example diagram.


Example diagram illustrating a Matrix Mode application.

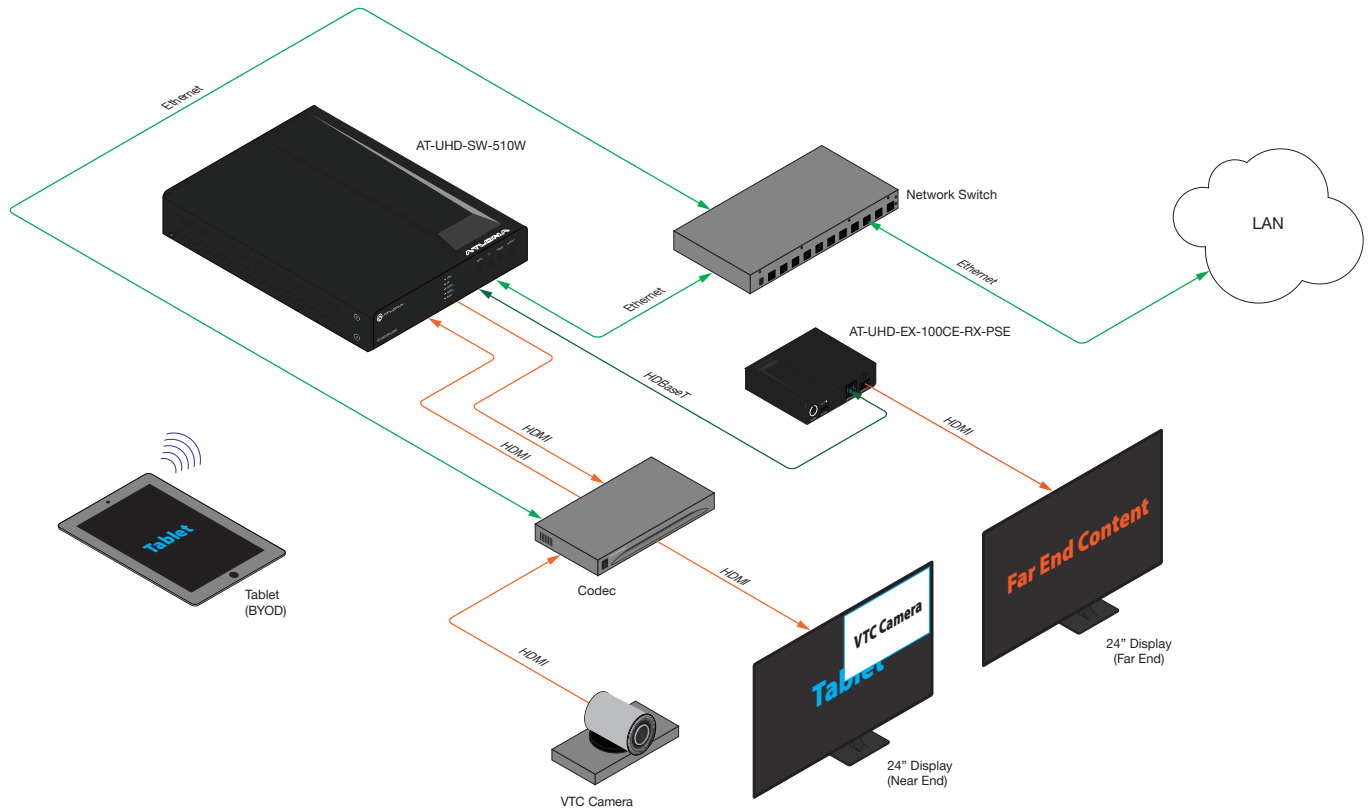

Selecting the Audio Input


By default, the AT-UHD-SW-510W will use the digital audio (if present) from the **USB-C IN**, **DP IN**, or **HDMI IN** ports and output the audio over the **HDMI OUT** and/or **HDBaseT OUT** ports. However, an external analog source can also be used. When configured, the analog audio source will replace the digital audio on the selected input, and will be heard on the **HDMI OUT** and/or **HDBaseT OUT** ports.

1. Connect an unbalanced audio source to the **AUDIO IN** port on the rear panel. This port accepts a 3.5 mm mini-stereo cable.

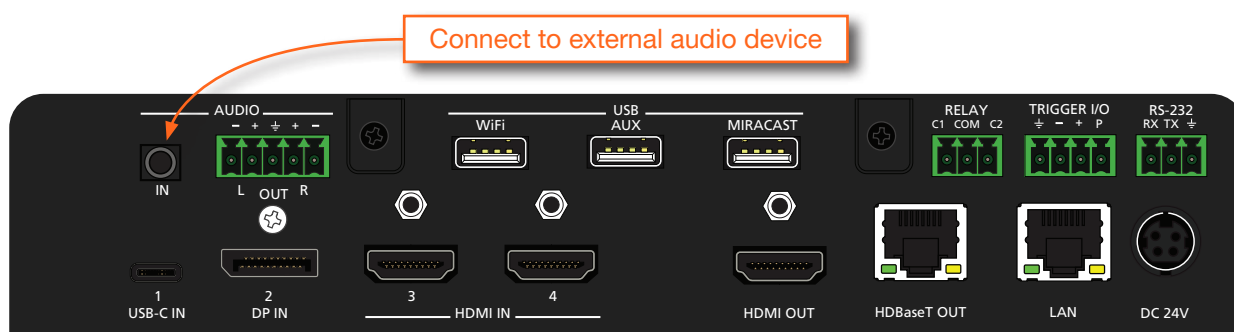

2. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
3. Click **Administration** > **Audio** from the menu bar on the left.
4. Click the drop-down list of the desired input and select the audio input. In the example below, **Analog** is being selected from the **HDMI 4** drop-down list.

To use the digital audio from the HDMI source, select **Digital** from the **HDMI 4** drop-down list.

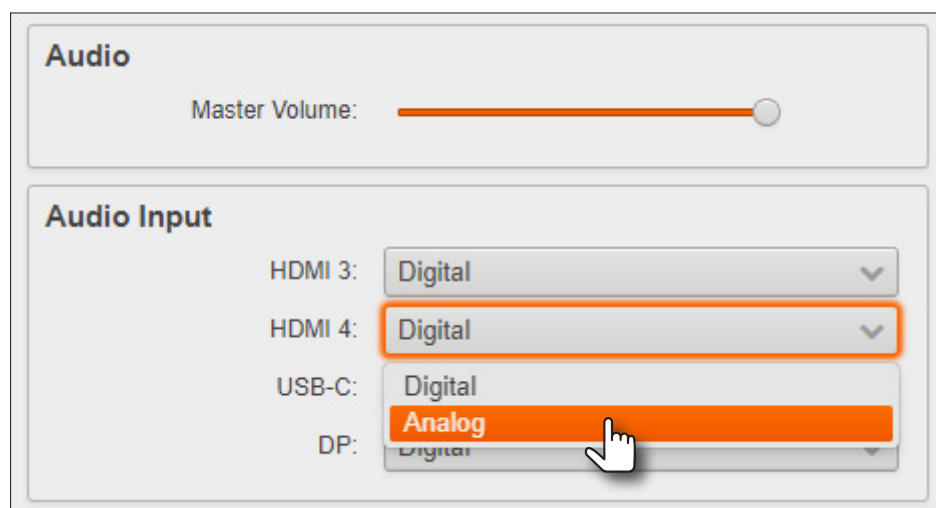


AirPlay Bluetooth Discovery

The AT-UHD-SW-510W supports Bluetooth®-assisted device discovery. An *optional* Bluetooth adapter is required, but not included. Atlona recommends Plugable and Kinivo Bluetooth 4.0 adapters.



IMPORTANT: Bluetooth discovery is applicable only to Apple devices and is used for device discovery on networks, such as corporate networks, where mDNS is not permitted. Bluetooth discovery behaves as a type of “beacon”, indicating the available AT-UHD-SW-510W units within the local vicinity of an AirPlay device.

1. Connect the Bluetooth adapter to the **AUX** port on the AT-UHD-SW-510W.
2. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
3. Click **Administration > Advanced** from the menu bar on the left.

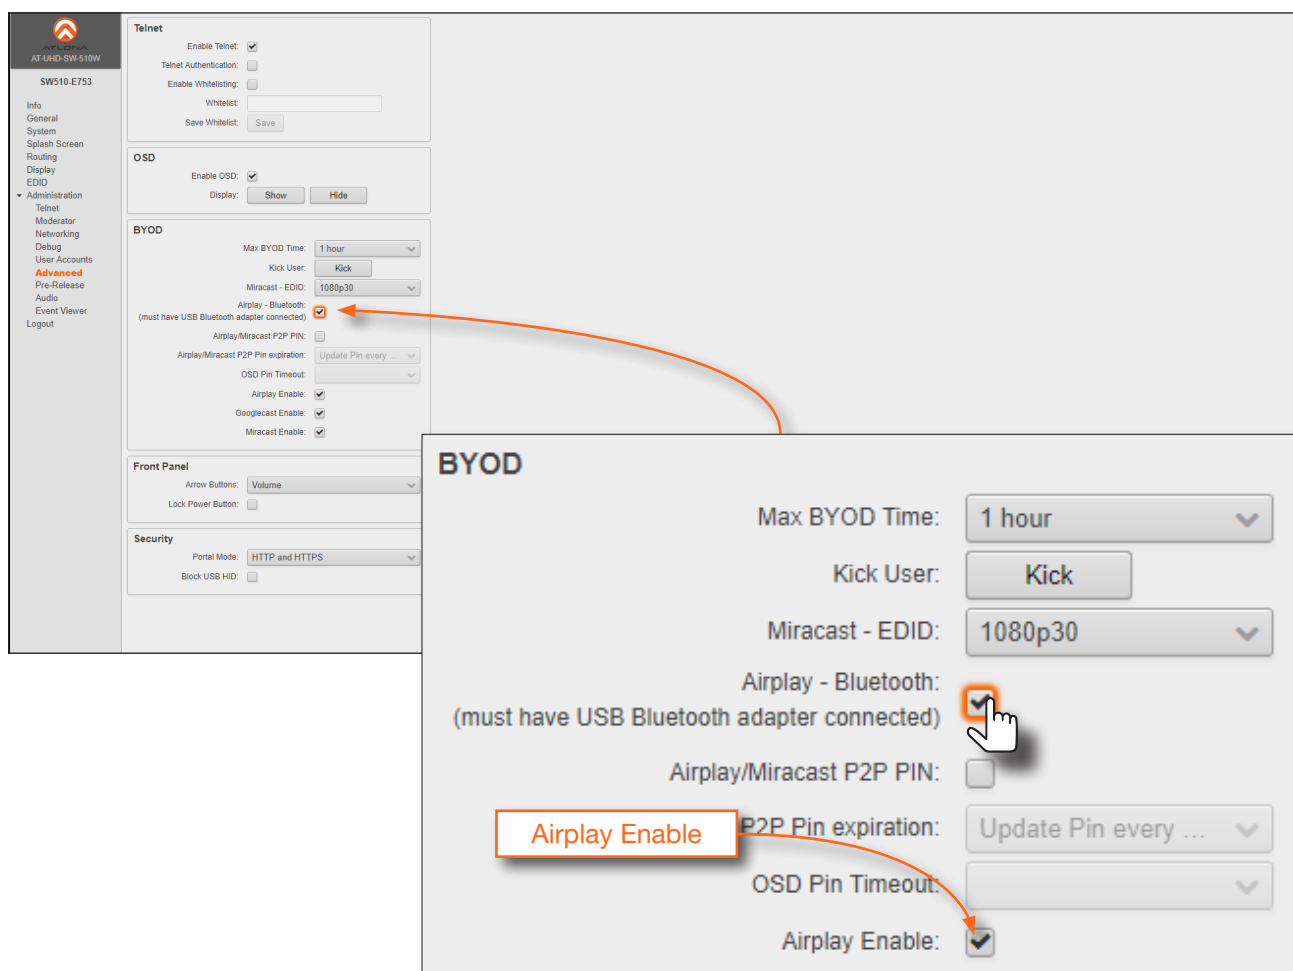

5. Click the **Airplay - Bluetooth** check box under the **BYOD** section. If this check box has a check mark in it, then the feature is enabled. Also, make sure that **Airplay Enable** is checked.
6. Go to the AirPlay device and activate Screen Mirroring. The AT-UHD-SW-510W will now be displayed in the device list.

Note that if the AT-UHD-SW-510W, which is configured for Bluetooth discovery, is beyond the range defined by the Bluetooth specification, then the device will not be displayed in the Screen Mirroring list.

AirPlay / Miracast P2P PIN Codes

The AT-UHD-SW-510W can be configured to prompt for a PIN code, before a BYOD device connects with either AirPlay or Miracast P2P. When this option is enabled, a PIN code will be displayed on the screen when an AirPlay or Miracast device attempts to connect to the AT-UHD-SW-510W.




NOTE: The PIN code will randomly change every five minutes, by default. This value can be set from 10 seconds to five hours. This provides a level of security, preventing unauthorized users from accessing the AT-UHD-SW-510W.


1. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
2. Click **Administration** > **Advanced** from the menu bar on the left.
3. Click the **AirPlay/Miracast P2P PIN** checkbox to enable or disable this option. If a check mark appears in this box, then the feature is enabled.
4. Click the **Airplay Enable** and **Miracast Enable** checkboxes, as required by the casting device.



NOTE: Android™ devices do not support PIN code security.

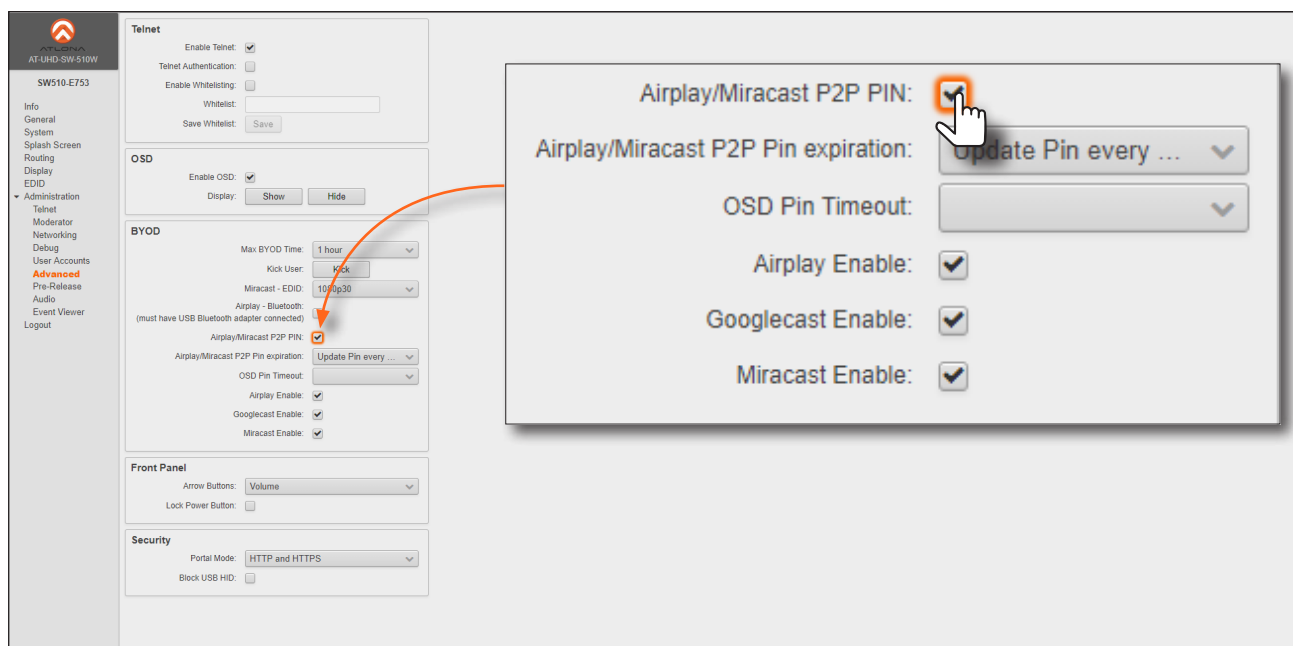

When this checkbox is clicked, the following message box will be displayed. Restart the services, as directed, then click **OK** to dismiss the message box.

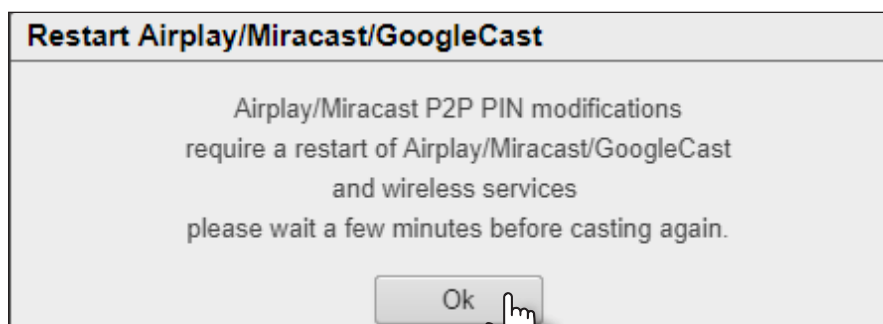


Advanced Operation

5. Connect the AirPlay/Miracast P2P device to the AT-UHD-SW-510W. Refer to [Wireless Configuration \(page 32\)](#) for more information.
6. Begin casting to the AT-UHD-SW-510W. When the device attempts to connect to the AT-UHD-SW-510W, a PIN code will be displayed on the screen that is connected to the device. Refer to the illustration on the next page, if necessary.



6. Enter the four-digit PIN code in the dialog box on the device and press **OK**. The PIN code will be displayed only for about 10 seconds. If the PIN code is not entered within the time interval, then the PIN code will be removed from the screen. The example below, shows an AirPlay device prompting for the PIN code. Clicking **Cancel** in the AirPlay Code dialog box will reconnect the AirPlay device to the AT-UHD-SW-510W and generate a new PIN code.

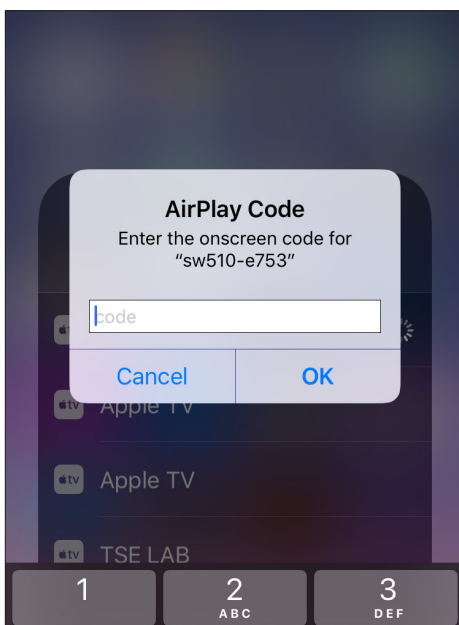


Changing the PIN Timeout

By default, the AT-UHD-SW-510W will automatically generate a new PIN code for each new Wifi connection that is attempted. However, this value can also be set to regenerate every 15 minutes or 60 minutes.



NOTE: The AT-UHD-SW-510W requires a minimum of 20 seconds to elapse before another PIN code is generated. For example, if another connection is made, within 20 seconds after the nth connection, then the same PIN code will be used to connect to the system.

1. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
2. Click **Administration** > **Advanced** from the menu bar on the left.
3. Click the **AirPlay/Miracast P2P PIN** checkbox to enable this option.
4. Click the **AirPlay/Miracast P2P Pin expiration** drop-down list and select the desired time interval.

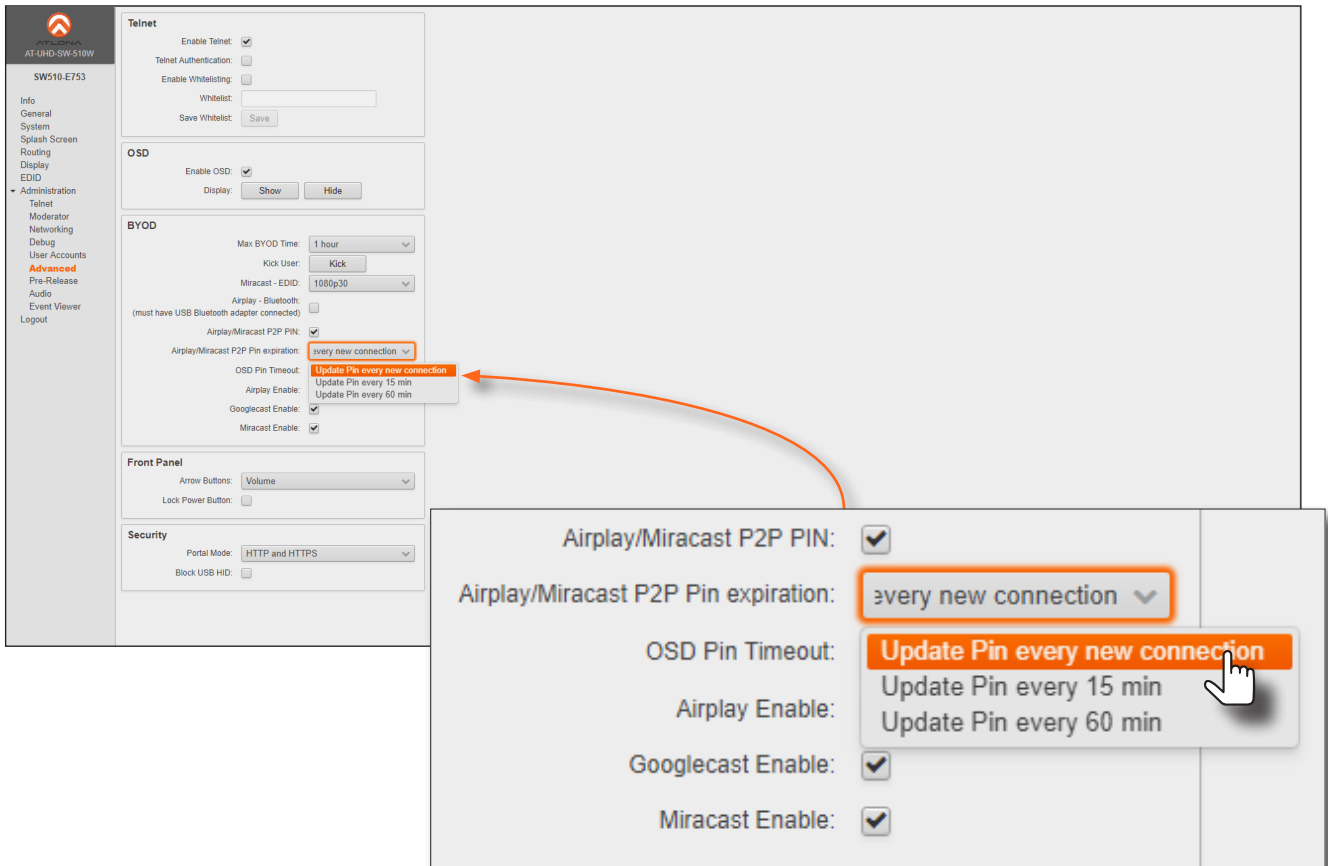


The screenshot displays the web GUI for the AT-UHD-SW-510W device. The left sidebar contains a menu with 'Administration' expanded and 'Advanced' selected. The main panel shows the 'BYOD' section with the 'Airplay/Miracast P2P PIN' checkbox checked. The 'Airplay/Miracast P2P Pin expiration' dropdown menu is open, showing options: 'every new connection', 'Update Pin every new connection', 'Update Pin every 15 min', and 'Update Pin every 60 min'. A red arrow points from the dropdown in the main panel to a larger, detailed view of the dropdown options on the right. In this detailed view, the 'Update Pin every new connection' option is highlighted in orange, and a mouse cursor is shown clicking on it.

Using Moderator Mode

Moderator mode provides a layer of control when multiple clients are casting through the AT-UHD-SW-510W. The “moderator” can either *allow* or *kick* (remove) a client from casting content. Up to four users can be hosted in the **Users** table. However, only one device may cast at a time.




NOTE: In order to monitor which devices are allowed to display content, Moderator mode must be enabled before a device begins casting. If a device is already casting, without Moderator mode enabled, then enabling this feature will have no effect.

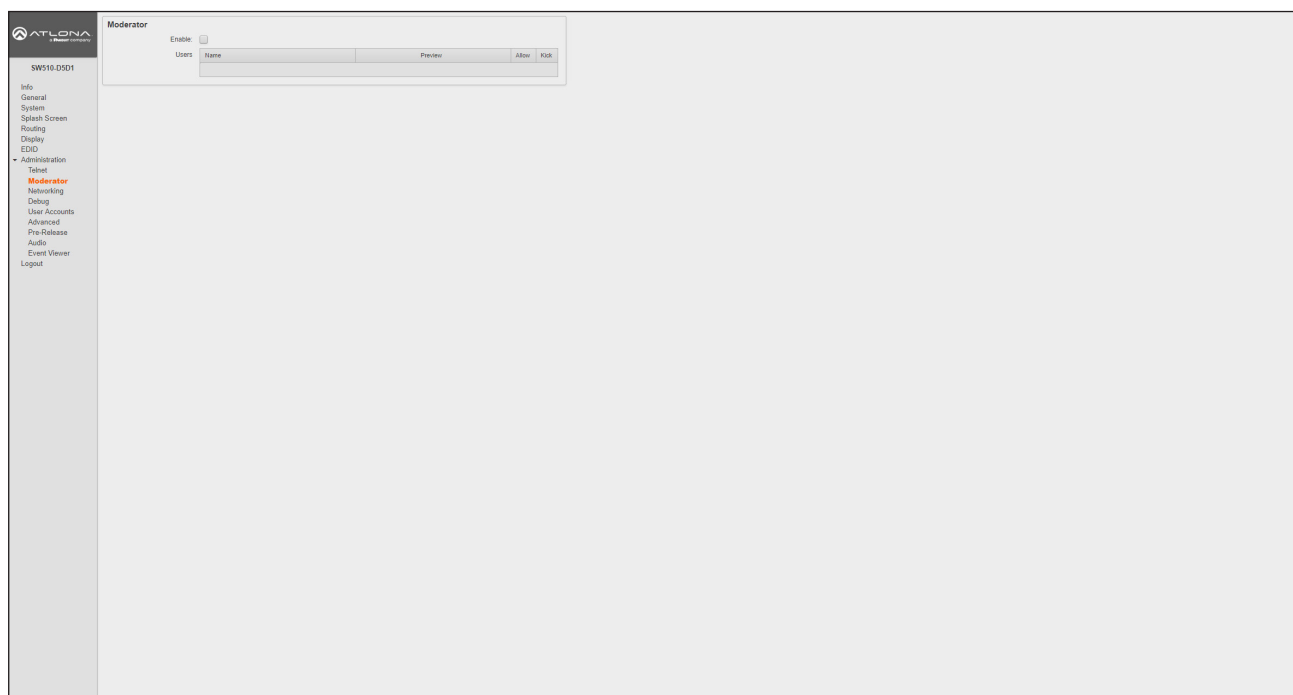

1. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
2. Set the WiFi mode to either **Access Point** or **Connect**. Refer to [Networking page \(page 86\)](#) for more information.
3. Click the **Enable** check box on the Moderator page.


In order to monitor which devices are allowed to display content, this box must be checked before a device begins casting. If a device is already casting, then enabling this feature will have no effect.


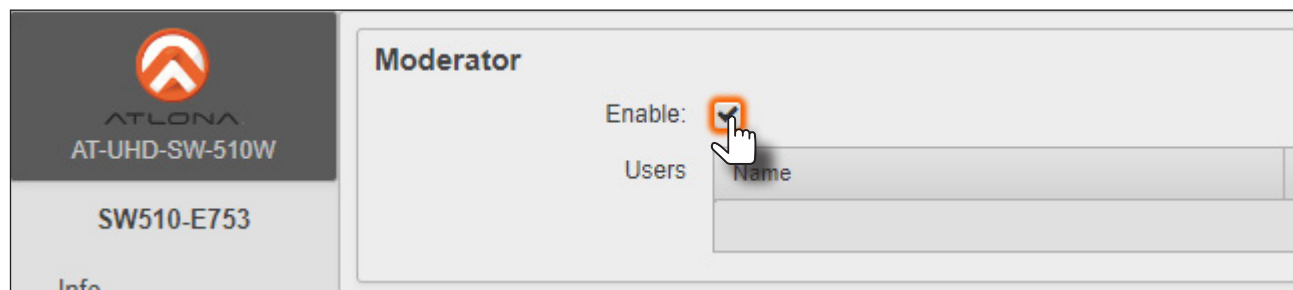


4. Connect the BYOD devices to the AT-UHD-SW-510W. Once connected, the device can begin casting. Refer to [Casting \(page 38\)](#) for more information on how to configure devices for casting.


Once the devices have started casting, they will be displayed in the **Users** table, as shown in the example below. Devices will only appear in this table when they are casting. When devices are displayed in this table, an **Allow** and **Kick** button will also be available for each device.



- Click the **Allow** button to permit a device to begin casting to the display device.

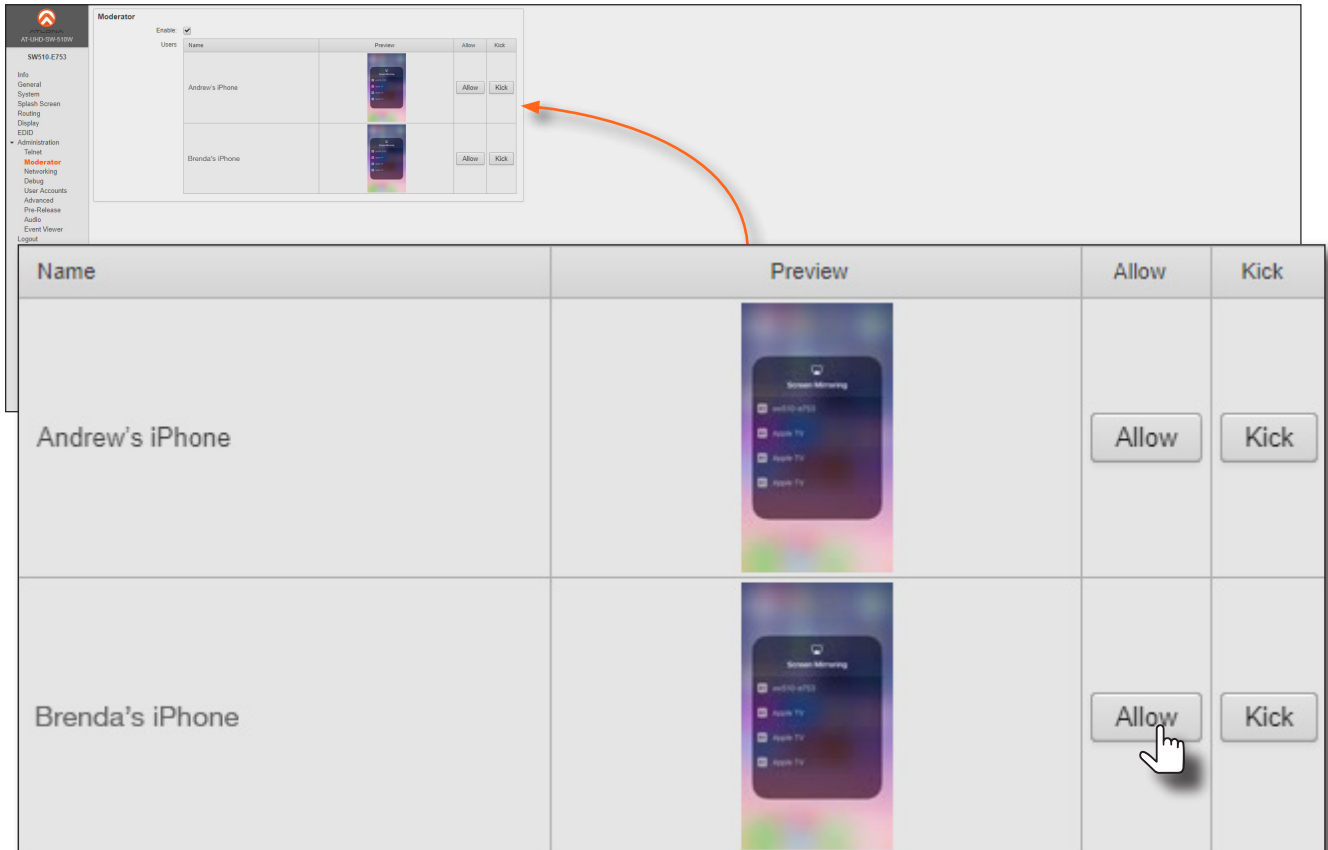

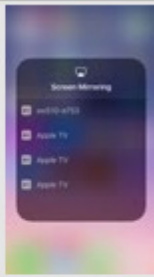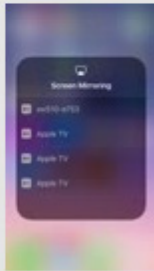Name	Preview	Allow	Kick
Andrew's iPhone		<button>Allow</button>	<button>Kick</button>
Brenda's iPhone		<button>Allow</button>	<button>Kick</button>

Once the selected device is allowed to cast to the connected display device, the **Allow** button will be disabled. In the example below, *Brenda's iPhone* is now the active casting device and shown on the display device.

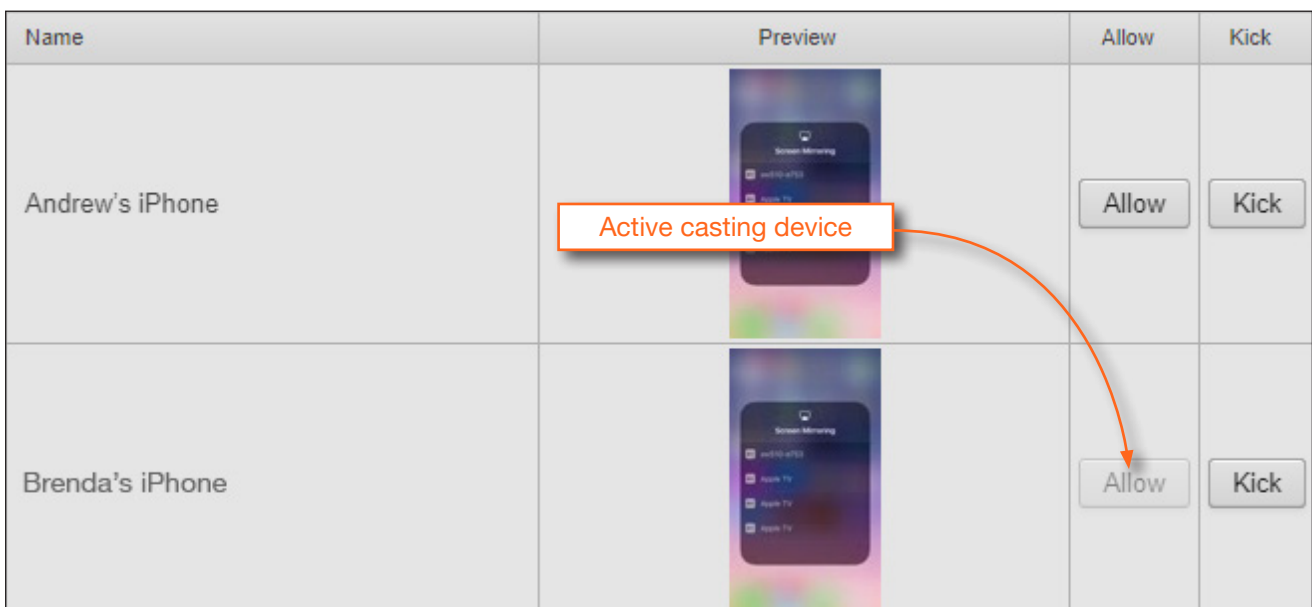

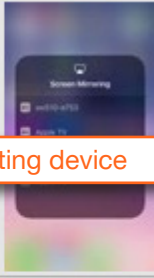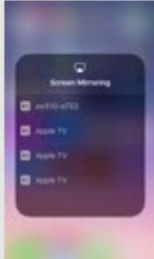Name	Preview	Allow	Kick
Andrew's iPhone		<button>Allow</button>	<button>Kick</button>
Brenda's iPhone		<button>Allow</button>	<button>Kick</button>



Advanced Operation

- Click the **Allow** button, on another connected device, to make that device the active casting device. It may take a few moments before the new casting device appears on the screen.




NOTE: When an alternate device is selected to cast, by clicking the **Allow** button, the currently active casting device will be removed (“kicked”) from the **Users** table.

- Click the **Kick** button to explicitly disconnect a casting device from the AT-UHD-SW-510W.

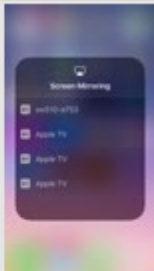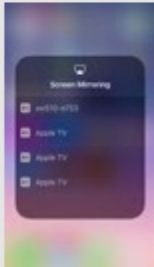Name	Preview	Allow	Kick
Andrew's iPhone		<button>Allow</button>	<button>Kick</button>
Brenda's iPhone		<button>Allow</button>	<button>Kick</button>



Once a device has been “kicked”, it will no longer appear in the **Users** table. In the example below, *Brenda's iPhone* has been removed.

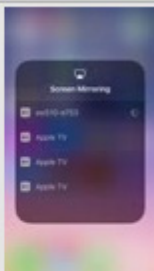
Name	Preview	Allow	Kick
Andrew's iPhone		<button>Allow</button>	<button>Kick</button>

To reconnect a device that has been “kicked”, select the hostname of the AT-UHD-SW-510W from the cast menu of the BYOD device.

Scheduling Display Operation Times

The AT-UHD-SW-510W can be configured to automatically power-on or power-off a display during specified times and days of the week. Note that discrete calendar dates cannot be specified.

1. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
2. Click **Display** from the menu bar on the left.
3. Click the **Display Auto Power** check box.
4. Click the **Enable Time Display Control** check box.
5. Click drop-down lists, next to **Start Time**, to set the hour and minute when the display will be powered-on. Time is specified in 24-hour format.

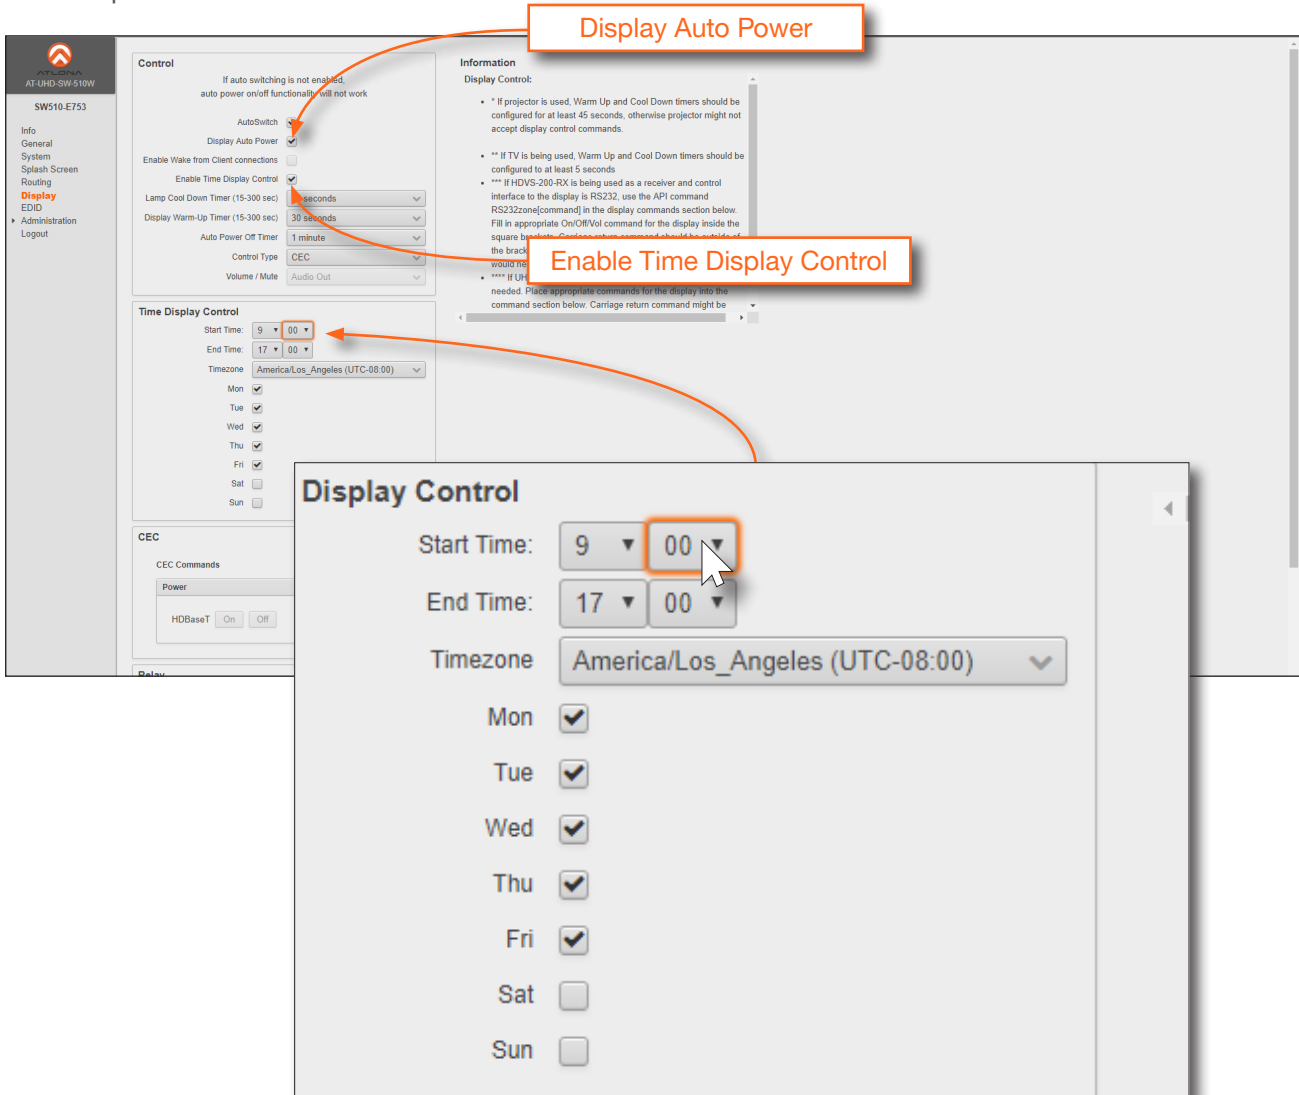


The screenshot shows the web GUI for the AT-UHD-SW-510W device. The left sidebar contains a menu with options: Info, General, System, Splash Screen, Routing, **Display**, EDID, Administration, and Logout. The main content area is divided into sections: Control, Information, and Time Display Control. In the Control section, the 'Display Auto Power' checkbox is checked. In the Time Display Control section, the 'Enable Time Display Control' checkbox is checked. The 'Start Time' is set to 9:00, the 'End Time' is set to 17:00, and the 'Timezone' is set to America/Los_Angeles (UTC-08:00). The days of the week are Mon, Tue, Wed, Thu, and Fri are checked. A callout box titled 'Display Control' shows a detailed view of the time settings, with the 'Start Time' dropdown menu open, showing the hour and minute selection.

6. Click the **End Time** drop-down lists, for both hour and minute, to specify the display power-off time. Time is specified in 24-hour format.
7. Click the **Timezone** drop-down list to set the proper time zone.
8. Click the desired checkbox(s) to specify which day(s) that the unit will power-on and power-off the connected display.

802.1X Authentication

802.1X is a server-based port authentication which restricts unauthorized (rogue) clients from connecting to a Local Area Network through a public port. In its simplest form, 802.1X usually involves three parties: supplicant (client device), authenticator (Ethernet switch or WAP), and an authentication server. Before the device is permitted on the network, port communication is restricted to Extensible Authentication Protocol over LAN (EAPOL) traffic. If the device passes the authentication process, the authentication server notifies the switch, allowing the client to access the LAN. The illustration below shows the basic architecture.

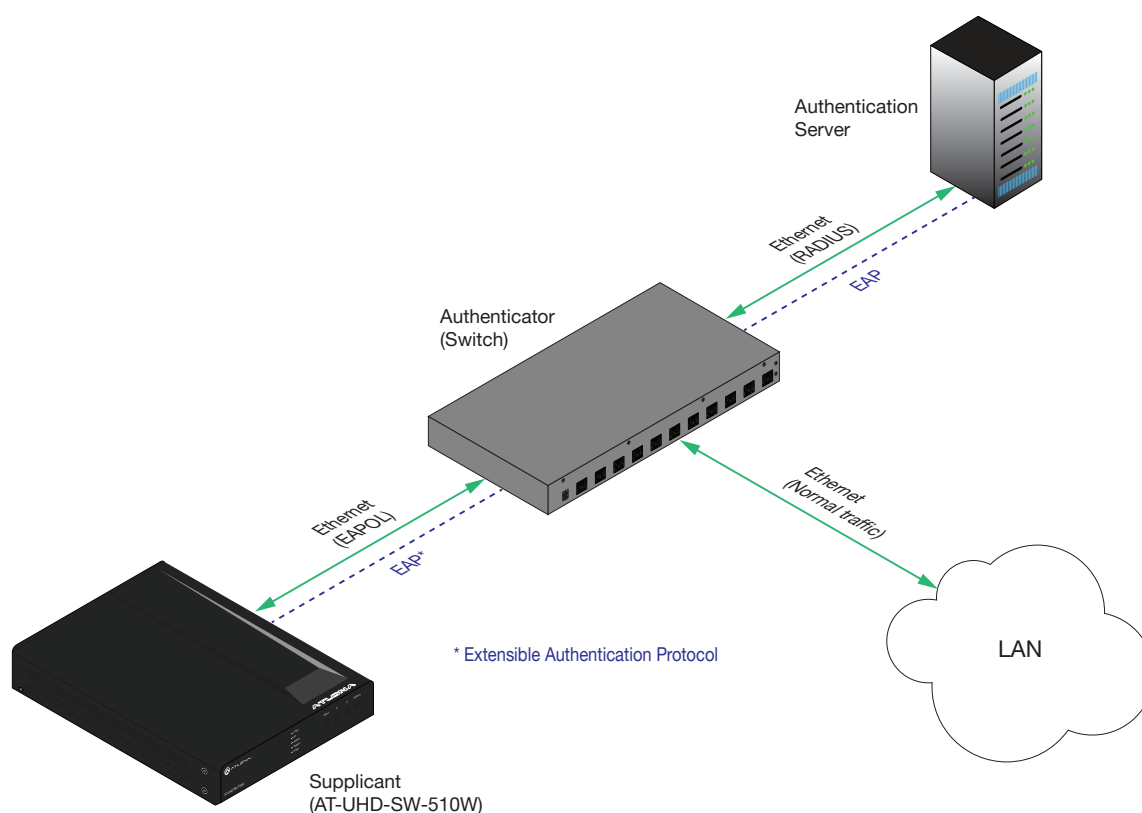

Using Wifi

1. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
2. Click **Administration** > **Networking** from the menu bar on the left.
3. Under the **Wifi** tab, click the **Mode** drop-down list and select **Connect**.


The screenshot shows the web GUI configuration page for the device. The 'Wifi' tab is selected, and the 'Mode' dropdown menu is open, showing 'Connect' as the selected option. A hand cursor is pointing at the 'Connect' option.

Hostname: sw510-e753

MAC Address: 74:da:38:dd:14:35

Mode: Connect

- Click the **802.1x Enable** checkbox.

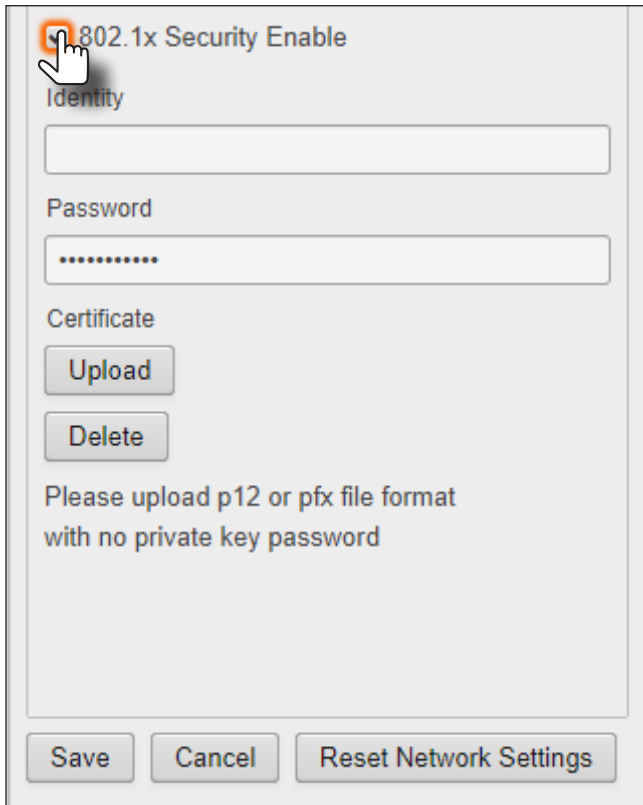


The image shows a configuration window titled "802.1x Security Enable". At the top left, there is a checkbox labeled "802.1x Security Enable" which is checked, and a mouse cursor is pointing at it. Below the checkbox are three input fields: "Identity" (empty), "Password" (filled with dots), and "Certificate" (empty). Below the "Certificate" field are two buttons: "Upload" and "Delete". Below these buttons is a text instruction: "Please upload p12 or pfx file format with no private key password". At the bottom of the window are three buttons: "Save", "Cancel", and "Reset Network Settings".

- Enter the required credentials in the **Identity** and **Password** fields.
- Click the **Upload** button to upload the required certificate to the AT-UHD-SW-510W. Note that the PKCS#12 file (.pfx file) should not include a private key. To delete an existing certificate, click the **Delete** button.
- Click the **Pick** button and select the desired wireless network to which the AT-UHD-SW-510W will be connected.
- Click **Save** to commit all changes or click **Cancel** to abort changes.

Using Ethernet

1. Login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information.
2. Click **Administration** > **Networking** from the menu bar on the left.
3. Under the **Ethernet** tab. Make sure the proper network mode is set: **DHCP**, **Static IP**, or **Factory Static**. Refer to [IP Configuration \(page 16\)](#) for more information.
4. Click the **802.1x Enable** checkbox.

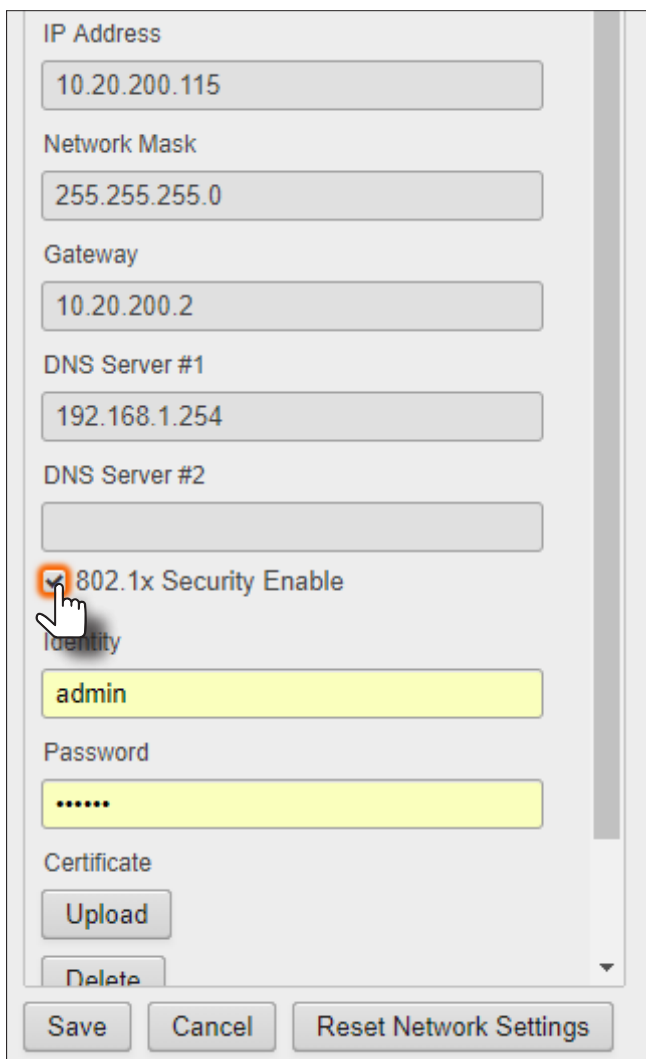

IP Address
10.20.200.115

Network Mask
255.255.255.0

Gateway
10.20.200.2

DNS Server #1
192.168.1.254

DNS Server #2

☒ 802.1x Security Enable

Identity
admin

Password
.....

Certificate
Upload
Delete

Save Cancel Reset Network Settings

5. Enter the required credentials in the **Identity** and **Password** fields.
6. Click the **Upload** button to upload the required certificate to the AT-UHD-SW-510W. Note that the PKCS#12 file (.pfx file) should not include a private key. To delete an existing certificate, click the **Delete** button.
7. Click **Save** to commit all changes or click **Cancel** to abort changes.



RS-232 Control



NOTE: If the AT-UHD-SW-510W will be controlled from a computer running a terminal program, a DB-9-to-USB cable should be purchased/obtained.

The AT-UHD-SW-510W provides an RS-232, allowing the unit to be managed using a control system.

RS-232 is serial data protocol that allows Data Terminal Equipment (DTE) devices, such as a computer or control system, to communicate with Data Communication Equipment (DCE) devices, such as the AT-UHD-SW-510W or a display. Although IP control is available, RS-232 still plays an integral part of many control systems. Although the 25-pin D-type connector (DB-25) was defined as the RS-232 standard, it is now commonly implemented in a nine-pin (DE-9) connector package. Each pin is numbered, as shown below.

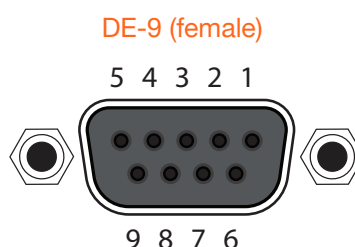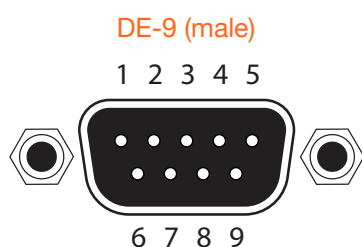

DTE Pin Descriptions

Pin	Signal	Description
1	DCD	Data Carrier Detect
2	RxD	Receive Data
3	TxD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	Ground (Signal)
6	DSR	Data Set Ready
7	RTS	Request to Send
8	CTS	Clear to Send
9	RI	Ring Indicator

DCE Pin Descriptions

Pin	Signal	Description
1	DCD	Data Carrier Detect
2	TxD	Transmit Data
3	RxD	Receive Data
4	DSR	Data Set Ready
5	GND	Ground (Signal)
6	DTR	Data Terminal Ready
7	CTS	Clear to Send
8	RTS	Ready to Send
9	RI	Ring Indicator


Determining the Port Type

Most DTE devices provide a male connector, while DCE devices have a female connector. However, this is not always the case. If the port type is unknown, then a multimeter can be used to determine whether the port is DTE or DCE:

1. Turn on the multimeter and set it to measure DC voltage.
2. Connect the positive and negative leads to pins 3 and 5, respectively.
3. Check the voltage reading:

If the voltage is between -3 V DC and -15 V DC, then the device is DTE. Otherwise, it is DCE.

Voltage levels between -3 V and -15 V DC represent a logic "1".
 Voltage levels between +3 V and +15 V DC represent a logic "0".

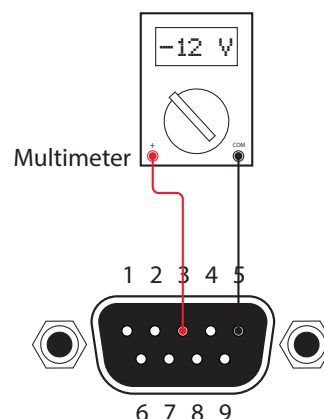



Cable Assembly

When connecting a DTE device to a DCE device, a *straight-through* cable should be used. A straight-through cable is wired in such a way that the pins on one side of the cable are connected to the corresponding pins on the opposite side of the cable, as shown in the table below. However, the AT-UHD-SW-510W will use only TxD, RxD, and GND signals when communicating with a control system or computer.

Straight-Through Cable

Pin	Signal		Signal	Pin
1	DCD	←→	DCD	1
2	RxD	←→	TxD	2
3	TxD	←→	RxD	3
4	DTR	←→	DSR	4
5	GND	←→	GND	5
6	DSR	←→	DTR	6
7	RTS	←→	CTS	7
8	CTS	←→	RTS	8
9	RI	←→	RI	9

1. Identify the DE-9 connector that will be attached to the control system or computer (DCE) equipment.
2. Remove the DE-9 connector at the opposite end of the cable with wire cutters.
3. Remove at least 1" of the cable insulation to expose each of the nine wires.
4. Locate a multimeter and set it to the "continuity" function.
5. Attach one of the leads from the multimeter to pin 2 on the DE-9 connector.
6. Take the other lead and probe each of the wires on the opposite end of the cable. When the wire connected to that pin is detected, the multimeter will emit an audible tone. Once this occurs, identify the current wire, and move it to the side.
7. Repeat step 6 for pin 3 and pin 5 on the DE-9 connector.
8. Group the remaining wires and pull them aside. Electrical tape can be use to secure the wires to the outside of the RS-232 cable.
9. Remove at least 3/16" (5 mm) of insulation from the TxD, RxD, and GND wires.

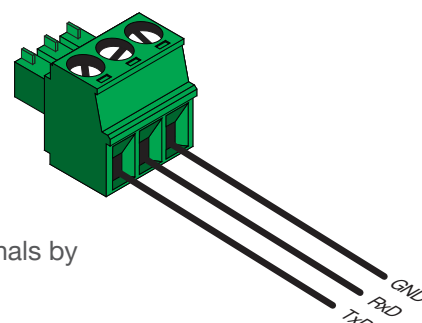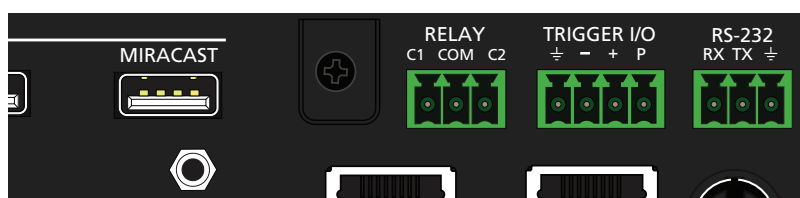

10. Locate the included 4-pin captive screw block and open each of the terminals by turning the screws counter-clockwise, using a small regular screwdriver.
11. Insert the TxD, RxD, and GND wires into correct terminal, as shown, and tighten the screws to secure each wire. Do not overtighten.
12. Connect the captive screw connector to the **RS-232** port on the AT-UHD-SW-510W.


Pass-through mode

In pass-through mode, RS-232 commands are sent to the AT-UHD-SW-510W and then transmitted over HDBaseT to a receiver unit, and then to the display (sink) device.

1. Connect the RS-232 cable between the control system and the RS-232 port on the AT-UHD-SW-510W. Refer to [Cable Assembly \(page 61\)](#) for instructions on preparing the cable.
2. Connect an Ethernet cable from the **HDBaseT OUT** port to a receiver. In this example, the Ethernet cable is connected to an AT-UHD-100CE-RX-PSE receiver.



IMPORTANT: The AT-UHD-SW-510W does not supply PoE over HDBaseT. The receiver *must* be powered using a local power supply.

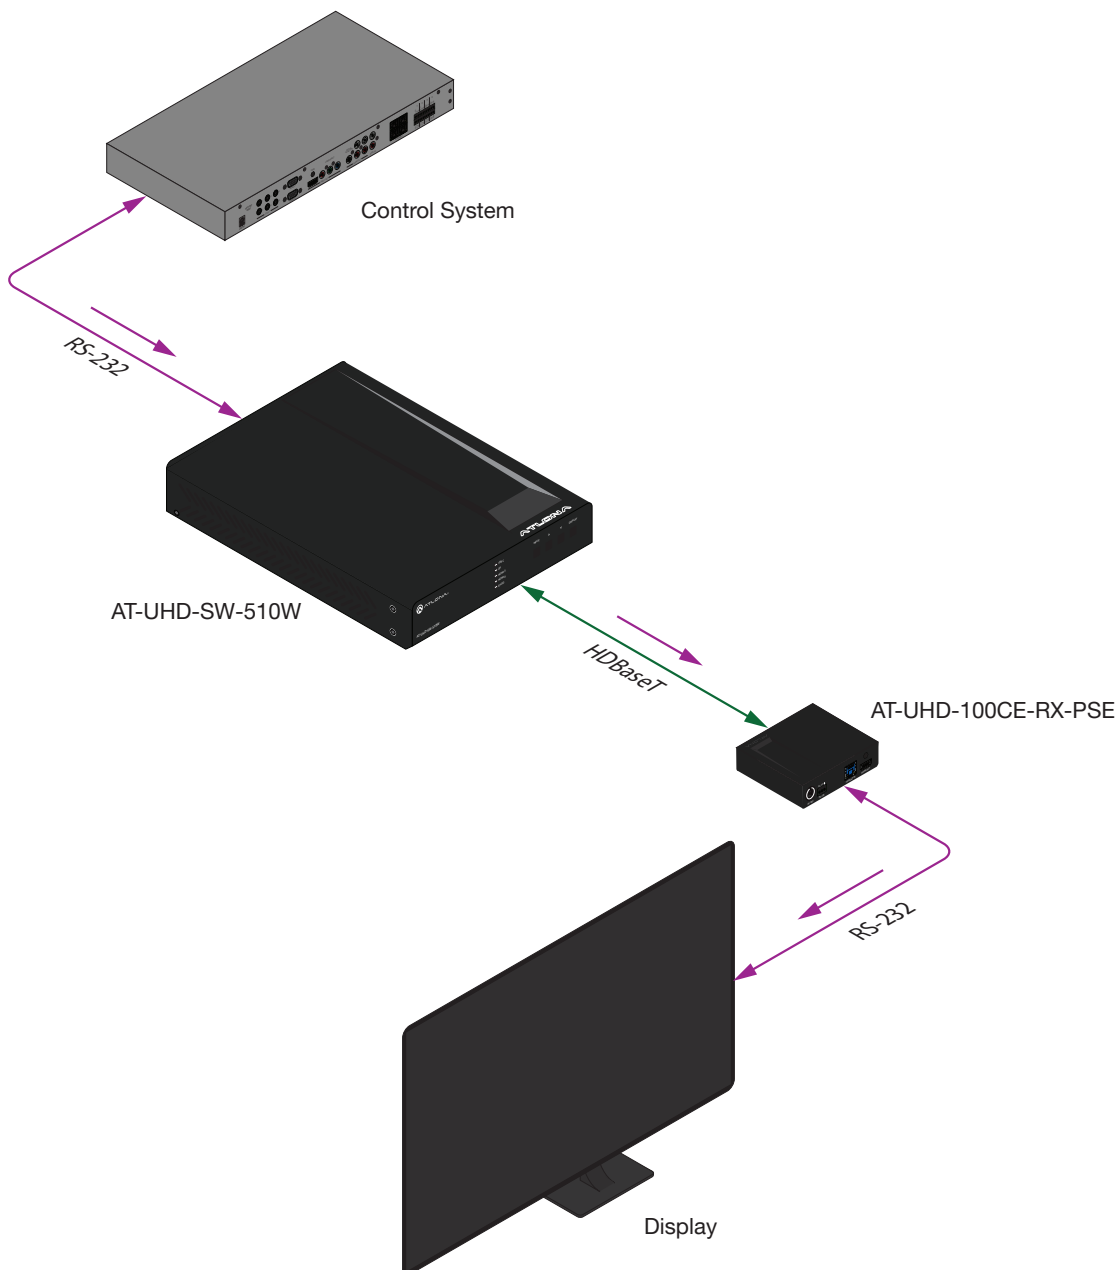


3. Connect an RS-232 cable between the display (sink) and the receiver.
4. Launch a web browser and login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information. The factory-default username and password are listed below:


Username: admin

Password: Atlona


5. Click **Display** in the menu on the left side of the window.
6. Click the **Control Type** drop-down list and select **RS-232**.

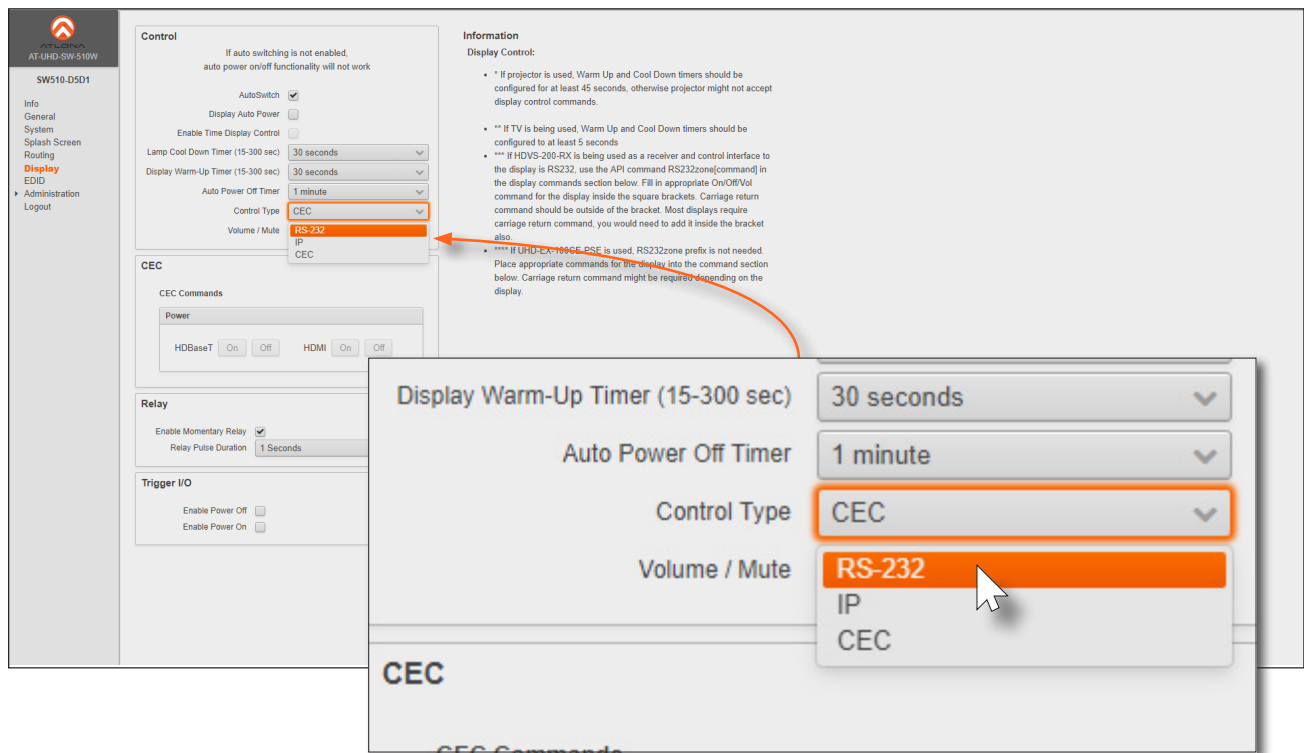

7. Scroll down and locate the **RS-232** section. Click the **RS232 Mode** drop-down list and select **HDBaseT RS232 Only**. The **RS-232** section is available only if the **Control Type** is set to **RS-232**.

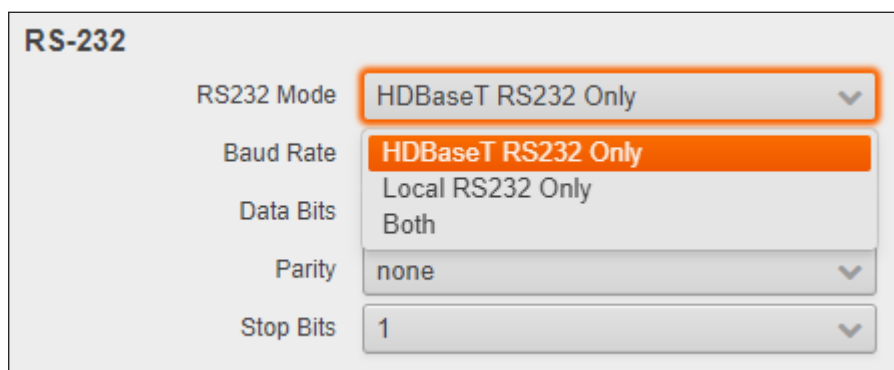


- Click the **Baud Rate**, **Data Bits**, **Parity**, and **Stop Bits** drop-down list to set the values required by the control system. If these values do not match the RS-232 settings of the control system, then RS-232 control will not function properly.

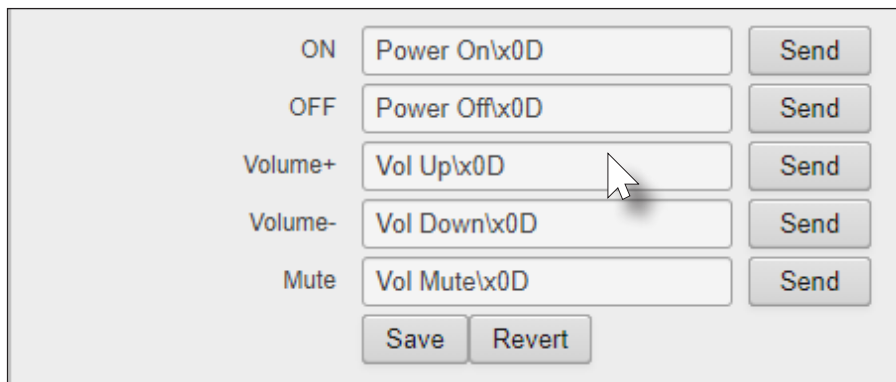

ON	Power On\x0D	Send
OFF	Power Off\x0D	Send
Volume+	Vol Up\x0D	Send
Volume-	Vol Down\x0D	Send
Mute	Vol Mute\x0D	Send
Save Revert		

- Click the **Manufacturer** drop-down list to select the manufacturer of the device that is being controlled.

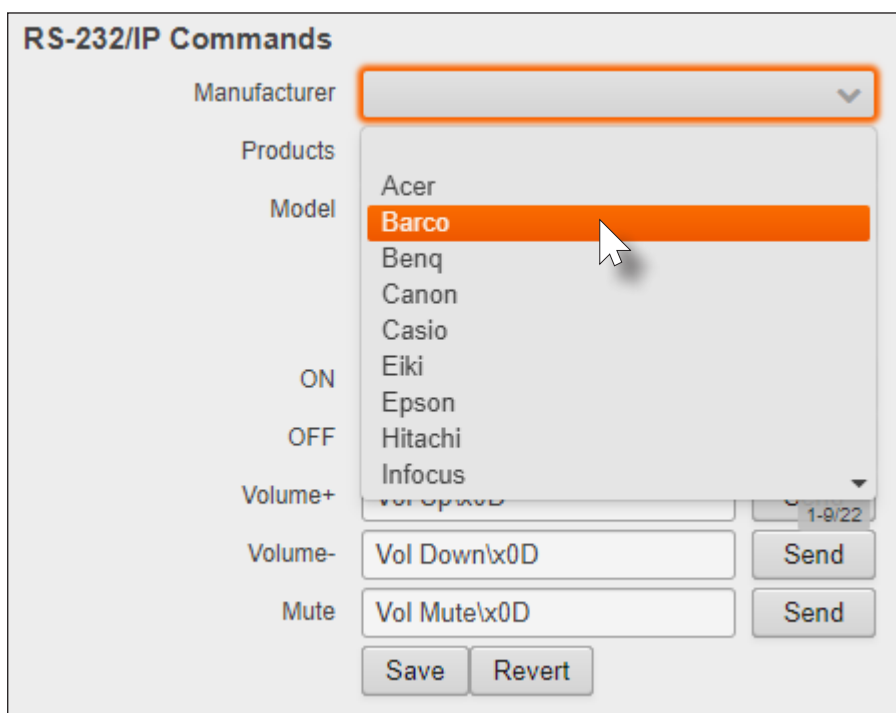

RS-232/IP Commands

Manufacturer: [Dropdown Menu]

Products: [Dropdown Menu]

Model: [Dropdown Menu]

ON: [Field] [Send]

OFF: [Field] [Send]

Volume+: [Field] [Send]

Volume-: [Field] [Send]

Mute: [Field] [Send]

Save Revert

- Continue fine-tuning the device selection by clicking the **Products** and **Model** drop-down lists. Once all fields have been set to the proper values, the AT-UHD-SW-510W will populate the **ON**, **OFF**, **Volume+**, **Volume-**, and **Mute** fields with the commands used by that device.



NOTE: If the manufacturer/model is not listed in the drop-down lists, then commands for the **ON**, **OFF**, **Volume+**, **Volume-**, and **Mute** fields can be entered manually. Consult the User Manual for the sink device to obtain the correct command format.

- Click the **Send** button to test each command.


Control mode

In control mode, RS-232 commands are sent from a computer or control system (DTE) to the AT-UHD-SW-510W (DCE). This method allows direct control of the switcher for routing, IP configuration, powering-on / powering-off and other functions.



NOTE: The **RS-232** port on the AT-UHD-SW-510W runs at a baud rate of 115200. The control unit must be set to the same baud rate, in order to communicate with the AT-UHD-SW-510W.

1. Connect the RS-232 cable between the control system and the AT-UHD-SW-510W. Refer to [Cable Assembly \(page 61\)](#) for instructions on preparing the cable.

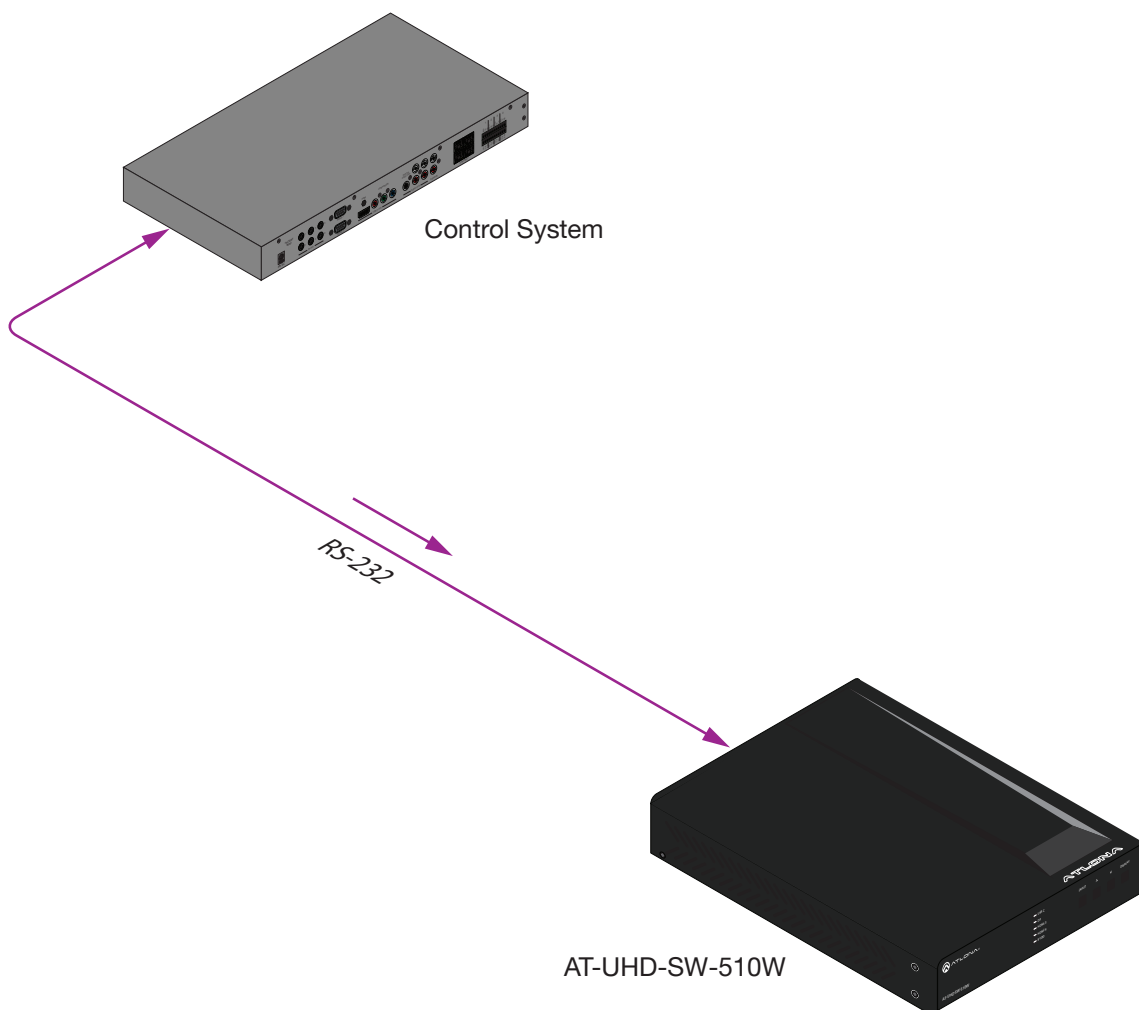


2. Launch a web browser and login to the web GUI. Refer to [Introduction to the Web GUI \(page 68\)](#) for more information. The factory-default username and password are listed below:

Username: admin


Password: Atlona

3. Click **Display** in the menu on the left side of the window.


- Click the **Control Type** drop-down list and select **RS-232**.

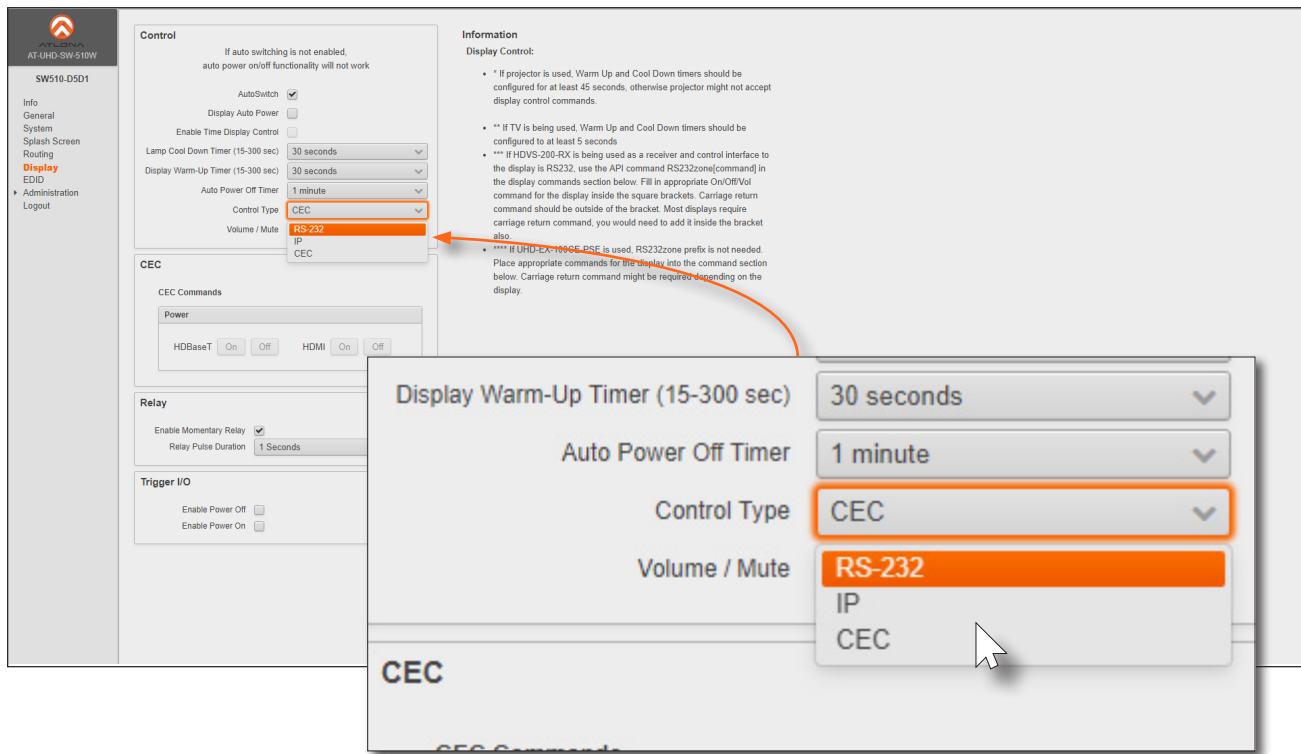


- Scroll down and locate the **RS-232** section. Click the **RS232 Mode** drop-down list and select **Local RS232 Only**. The **RS-232** section is available only if the **Control Type** is set to **RS-232**.

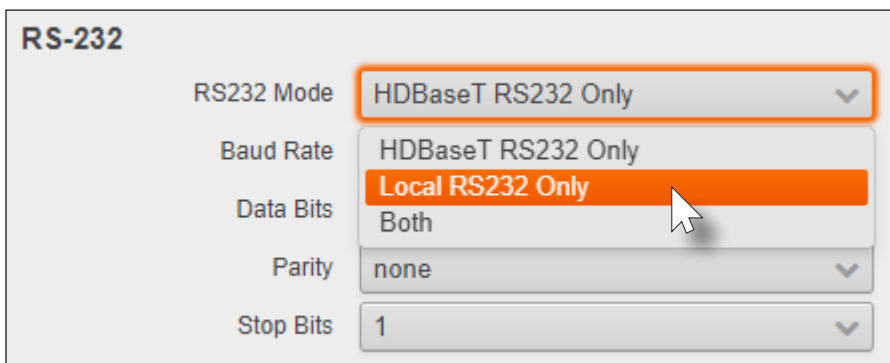

- Click the **Baud Rate**, **Data Bits**, **Parity**, and **Stop Bits** drop-down lists and set each field to the following values: Baud Rate: 115200, Data Bits: 8, Parity: none, Stop Bits: 1.

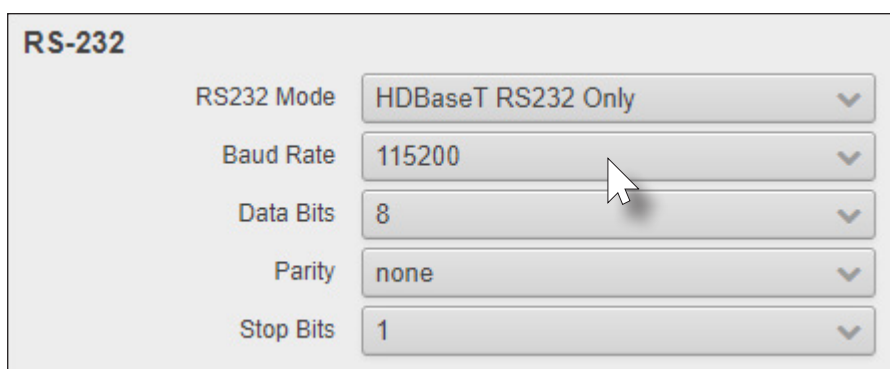

- Click the **Manufacturer** drop-down list to select the manufacturer of the device that is being controlled.

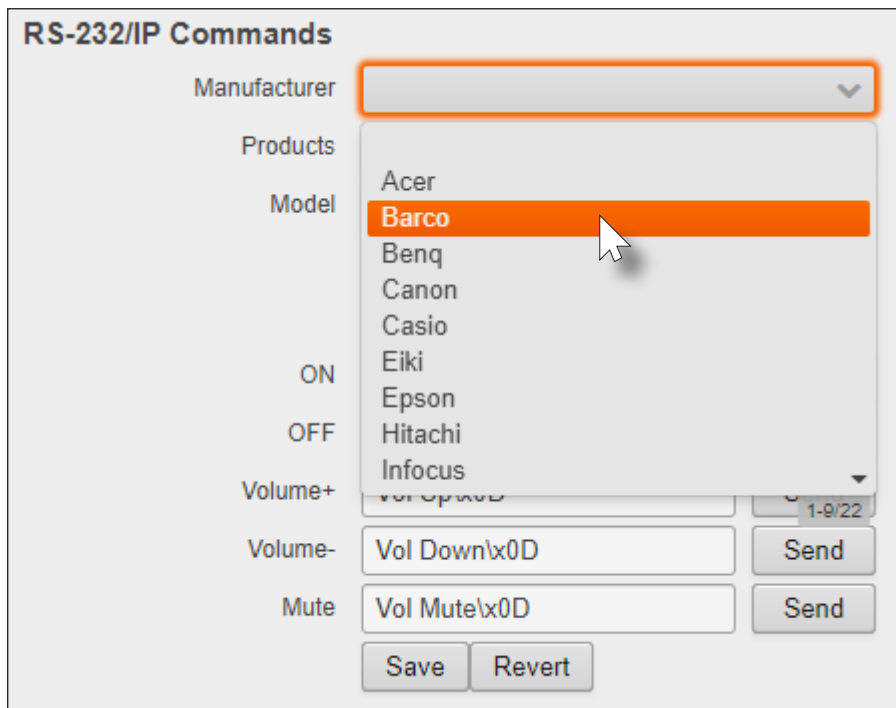

The screenshot shows the 'RS-232/IP Commands' window. The 'Manufacturer' drop-down list is open, showing a list of manufacturers: Acer, Barco, Benq, Canon, Casio, Eiki, Epson, Hitachi, and Infocus. 'Barco' is highlighted. The 'Products' and 'Model' fields are empty. The 'ON' field is empty, and the 'OFF' field is empty. The 'Volume+' field is empty, and the 'Volume-' field contains 'Vol Down\x0D'. The 'Mute' field contains 'Vol Mute\x0D'. There are 'Send' buttons next to the 'Volume-' and 'Mute' fields. At the bottom, there are 'Save' and 'Revert' buttons.

- Continue fine-tuning the device selection by clicking the **Products** and **Model** drop-down lists. Once all fields have been set to the proper values, the AT-UHD-SW-510W will populate the **ON**, **OFF**, **Volume+**, **Volume-**, and **Mute** fields with the commands used by that device.



NOTE: If the manufacturer/model is not listed in the drop-down lists, then commands for the **ON**, **OFF**, **Volume+**, **Volume-**, and **Mute** fields can be entered manually. Consult the User Manual for the sink device to obtain the correct command format.


- Click the **Send** button to test each command.

The Web GUI

Introduction to the Web GUI

The AT-UHD-SW-510W includes a built-in web GUI. Atlona recommends that the web GUI be used to set up the AT-UHD-SW-510W, as it provides intuitive management of all features. Follow the instructions below to access the webGUI.


1. Make sure that an Ethernet cable is connected between the LAN port on the AT-UHD-SW-510W and the network.
2. Launch a web browser and enter the IP address of the unit. If the default static IP address is being used, enter 192.168.1.254.
3. The AT-UHD-SW-510W **Login** page will be displayed.

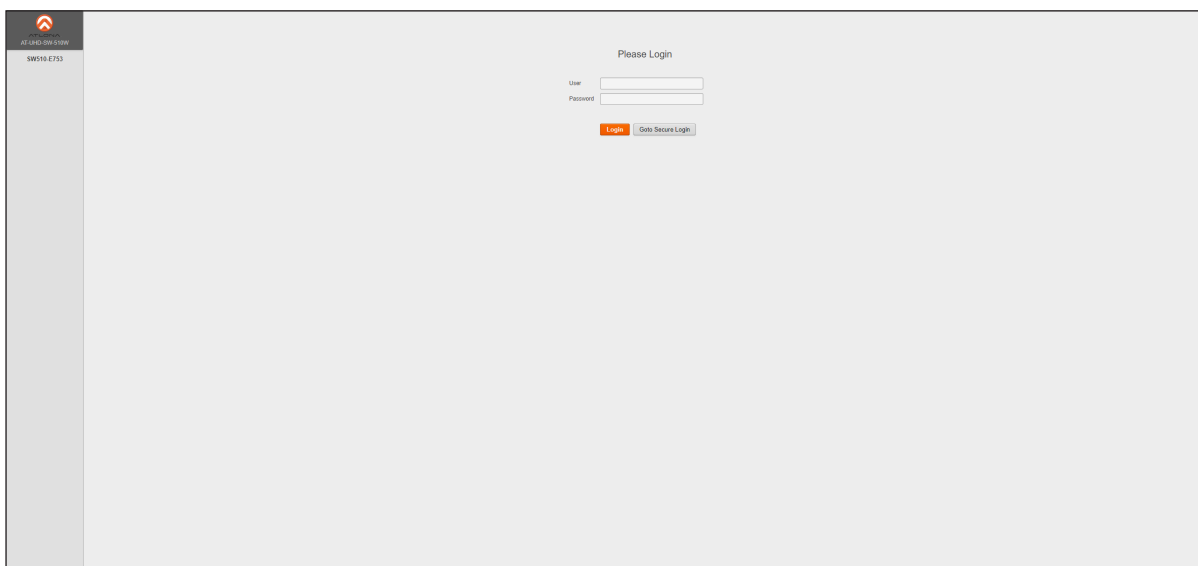


4. Type admin, using lower-case characters, in the **User** field.
5. Type Atlona in the **Password** field. This is the default password. The password field is case-sensitive. When the password is entered, it will be masked.
6. Click the **Login** button or press the ENTER key on the keyboard.



NOTE: If using a secure connection, click the **Goto Secure Login** button.

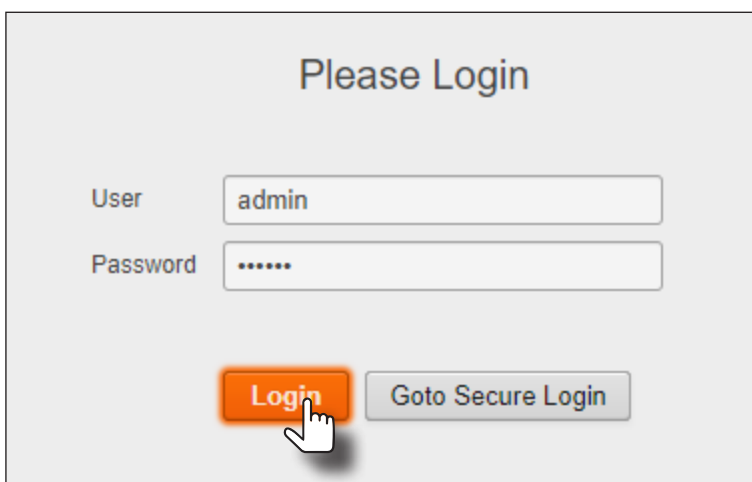

7. The **Info** page will be displayed.

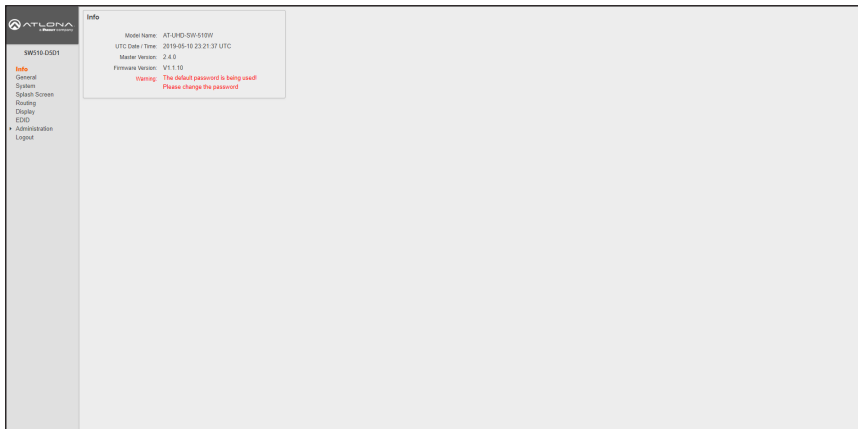


Menu Bar

The window on the left side of the screen is the menu bar and lists all available menus. Click on the desired menu item to open that page.




In this example, clicking **Display**, in the menu bar, will display the **Display** page.

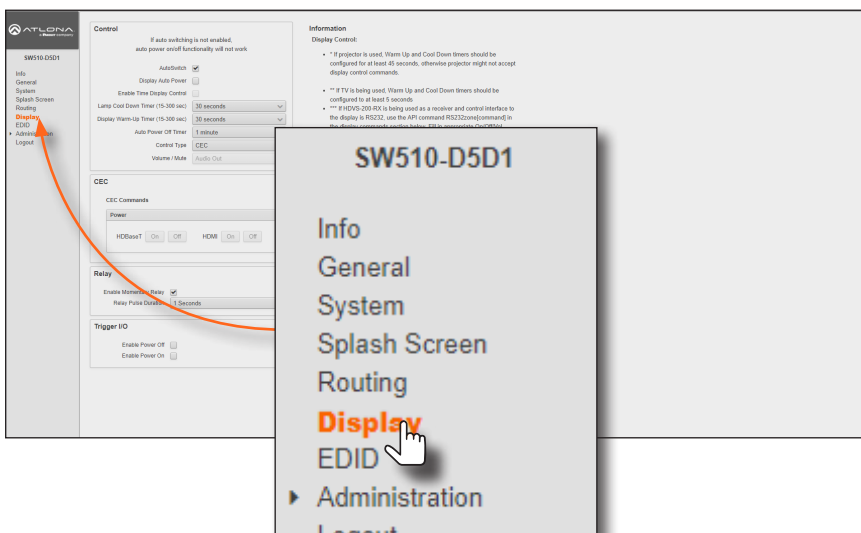

Info

After logging in, the Info page will be displayed. The **Info** page provides basic information about the receiver, including the model name, software version, input video timing, and the device being using as the transmitter.

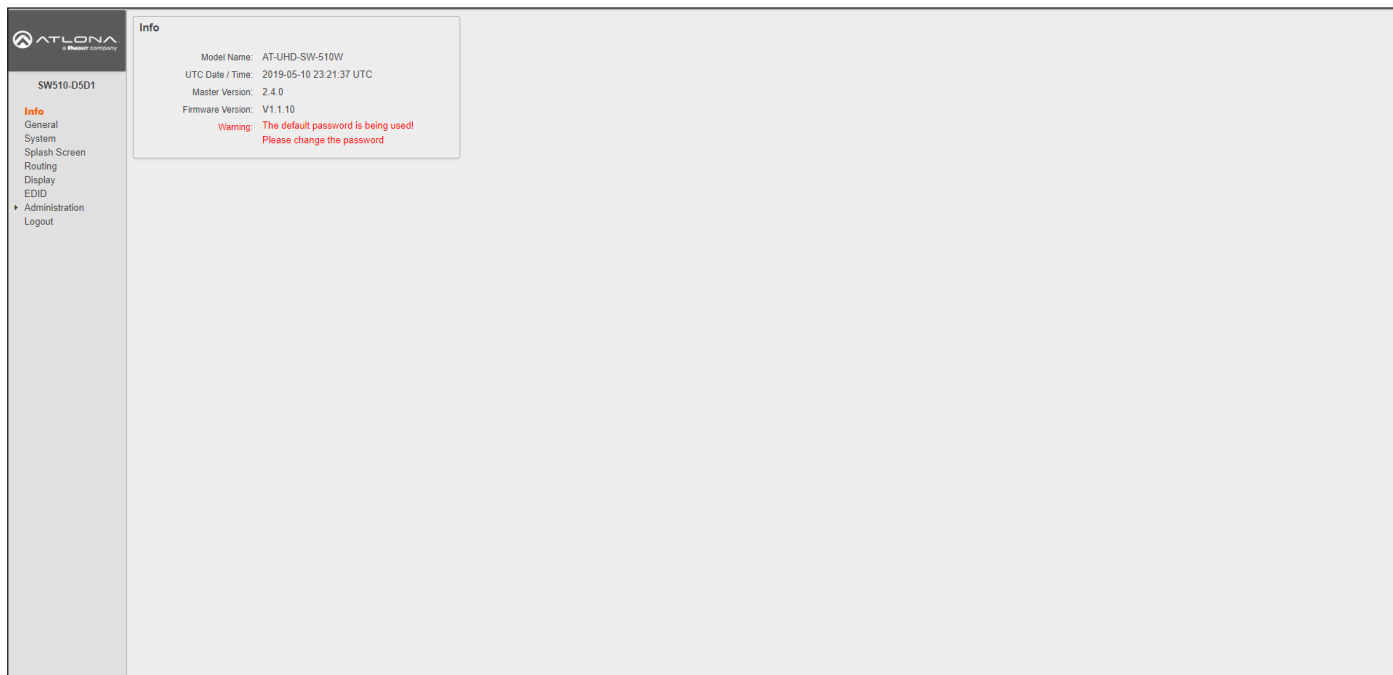

Model Name

The model SKU of this product.

UTC Date / Time

The current time and date, in Universal Coordinated Time (UTC).

Master Version

The version of firmware.

Firmware Version

The version of firmware that the AT-UHD-SW-510W is running. Always make sure to check the AT-UHD-SW-510W product page, on the Atlona web site, for the latest version of firmware.




NOTE: When the default password is used as part of the login credentials, the following message will be displayed in the Info box:

The default password is being used!
Please change the password.

To change the password, refer to the [User Accounts page \(page 96\)](#).

General page

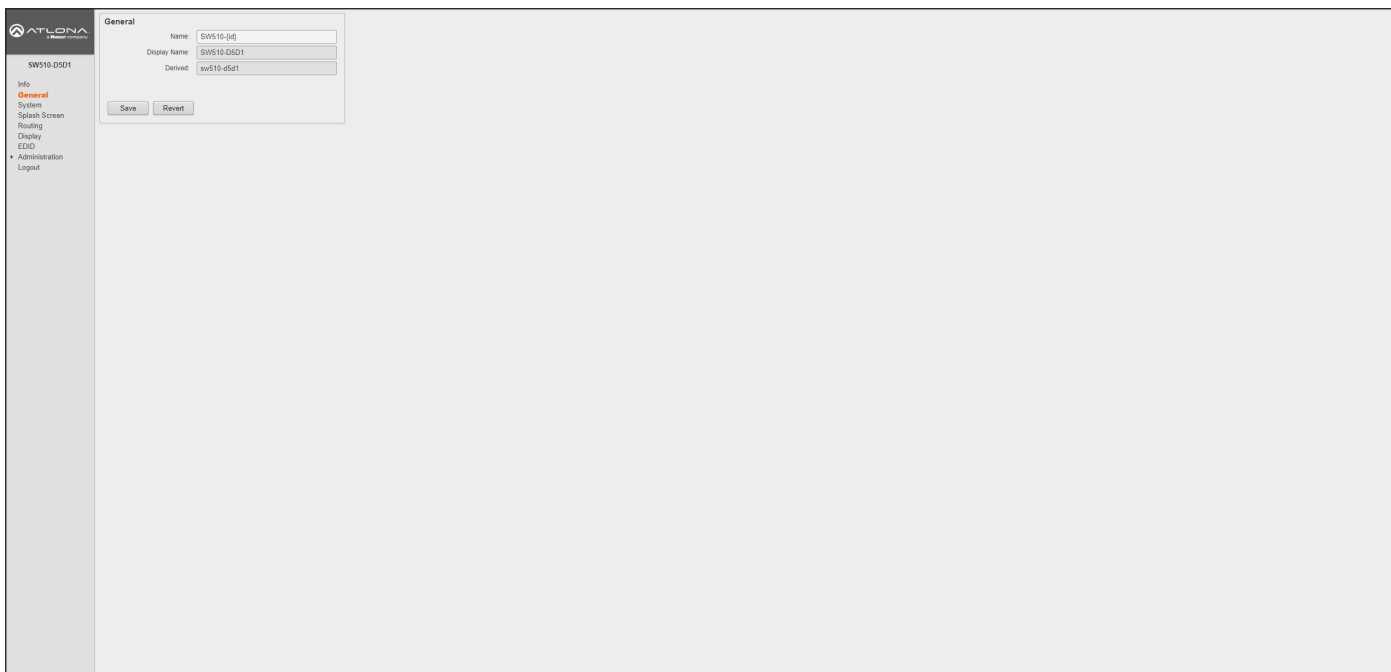**Name**

Enter the desired name of the AT-UHD-SW-510W in this text field. Include the {id} tag to use the last four digits of the hardware MAC address.



NOTE: The hardware MAC address differs from the MAC address of the unit, which is found on an adhesive label applied to the bottom of the unit.

Display Name

The name based on the information provided in the **Name** field. This name is used by the AT-UHD-SW-510W to identify it within the OSD.

Derived

This field will automatically be populated by the AT-UHD-SW-510W, based on the information provided in the **Name** field. This field provides a “computer-friendly” name used by the SSID. If special characters and/or spaces are included in the **Name** field, then these are removed when populating this field.


Save

Click this button to accept all changes.

Revert

Click this button to abort changes and reset the previous text in the **Name** field.

System page

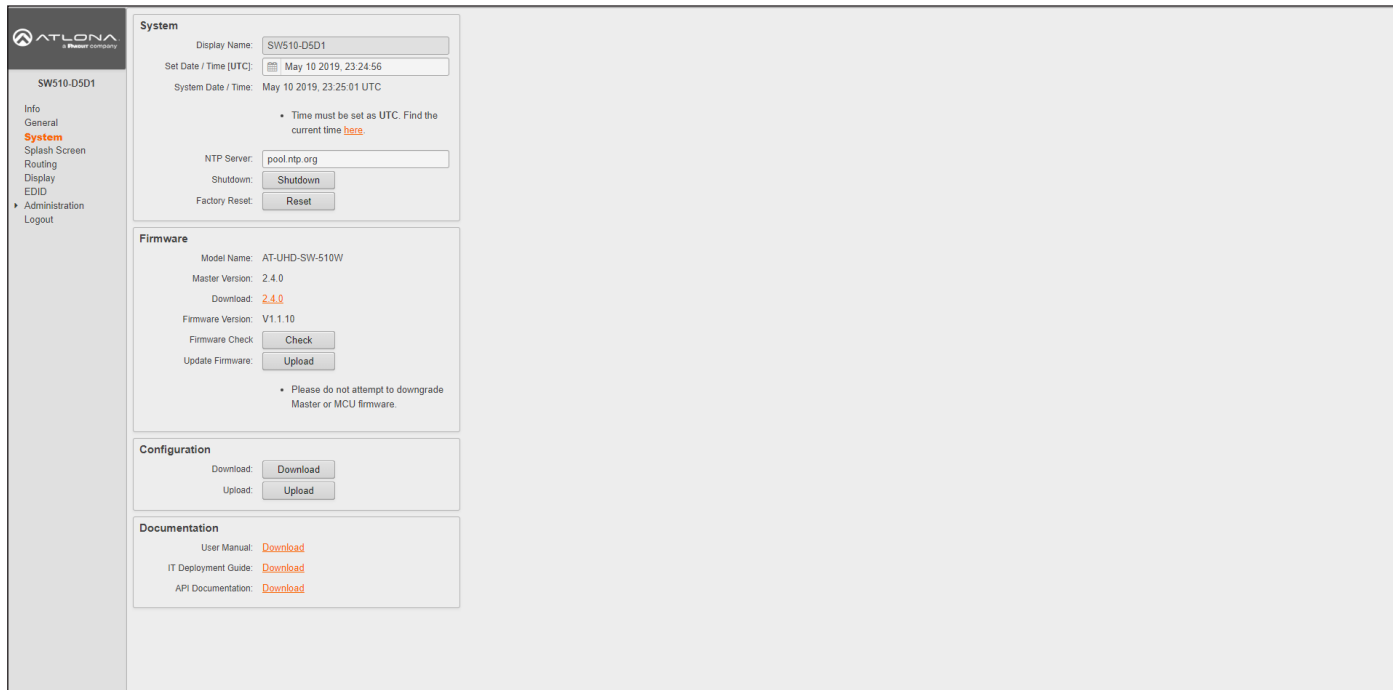

The screenshot shows the 'System' page of the Atlona web GUI. On the left is a sidebar menu with options: Info, General, System (highlighted), Splash Screen, Routing, Display, EDID, Administration, and Logout. The main content area is divided into four sections:

- System:** Contains a 'Display Name' field with 'SW510-D5D1', a 'Set Date / Time [UTC]' field with 'May 10 2019, 23:24:56', and a 'System Date / Time' field with 'May 10 2019, 23:25:01 UTC'. A note states 'Time must be set as UTC. Find the current time [here](#)'. Below are an 'NTP Server' field with 'pool.ntp.org', a 'Shutdown' button, and a 'Factory Reset' button with a 'Reset' sub-button.
- Firmware:** Contains a 'Model Name' field with 'AT-UHD-SW-510W', a 'Master Version' field with '2.4.0', a 'Download' button, a 'Firmware Version' field with 'V1.1.10', a 'Firmware Check' button, and an 'Update Firmware' button with an 'Upload' sub-button. A note states 'Please do not attempt to downgrade Master or MCU firmware.'
- Configuration:** Contains a 'Download' button and an 'Upload' button.
- Documentation:** Contains links for 'User Manual: [Download](#)', 'IT Deployment Guide: [Download](#)', and 'API Documentation: [Download](#)'.

Display name

The name of the display, provided in the **Name** field of the **General** tab. Refer to [General page \(page 71\)](#) for more information.

Set Date / Time [UTC]

Displays and allows modification of the time and date, in Universal Coordinated Time (UTC). UTC must be used when setting the date and time. Refer to [Setting the System Date and Time \(page 21\)](#) for more information.

System Date / Time

Displays the current time and date, in Universal Coordinated Time (UTC). UTC must be used when setting the date and time.

NTP Server

Enter the Network Time Protocol (NTP) server URL in this field.

Shutdown

Click this button to shut down the AT-UHD-SW-510W. This should always be performed before disconnecting power from the unit.

Factory Reset

Click the **Reset** button to reset the AT-UHD-SW-510W to factory-default settings. Resetting to factory-default setting may take up to five minutes to complete. Refer to [Default Settings \(page 109\)](#) for the list of default settings.

Model Name

The SKU of the product: AT-UHD-SW-510W.

Master Version

The master version of firmware. Always make sure to check the AT-UHD-SW-510W product page, on the Atlona web site, for the latest version of firmware.

Download

Click this link to download the latest firmware. The most recent firmware version is listed.

Firmware Version

The version of (MCU) firmware that the AT-UHD-SW-510W is running. Always make sure to check the AT-UHD-SW-510W product page, on the Atlona web site, for the latest version of firmware.

Firmware Check

Click the **Check** button to check for the latest version of firmware. Each time the unit is rebooted, this feature is performed, automatically. The AT-UHD-SW-510W must be connected to the Internet to use this feature.

Update Firmware

Click this button to upload the firmware file to the AT-UHD-SW-510W. Refer to [Updating the Firmware \(page 104\)](#) for more information.

Download

Click this button to save the current configuration to a file on the connected computer.


Upload

Click this button to upload a configuration file to the AT-UHD-SW-510W. Uploading a new configuration file will overwrite the current configuration settings.

Documentation

Click each of these links to access the latest version of the User Manual, IT Deployment Guide, or API Documentation.

Splash Screen page

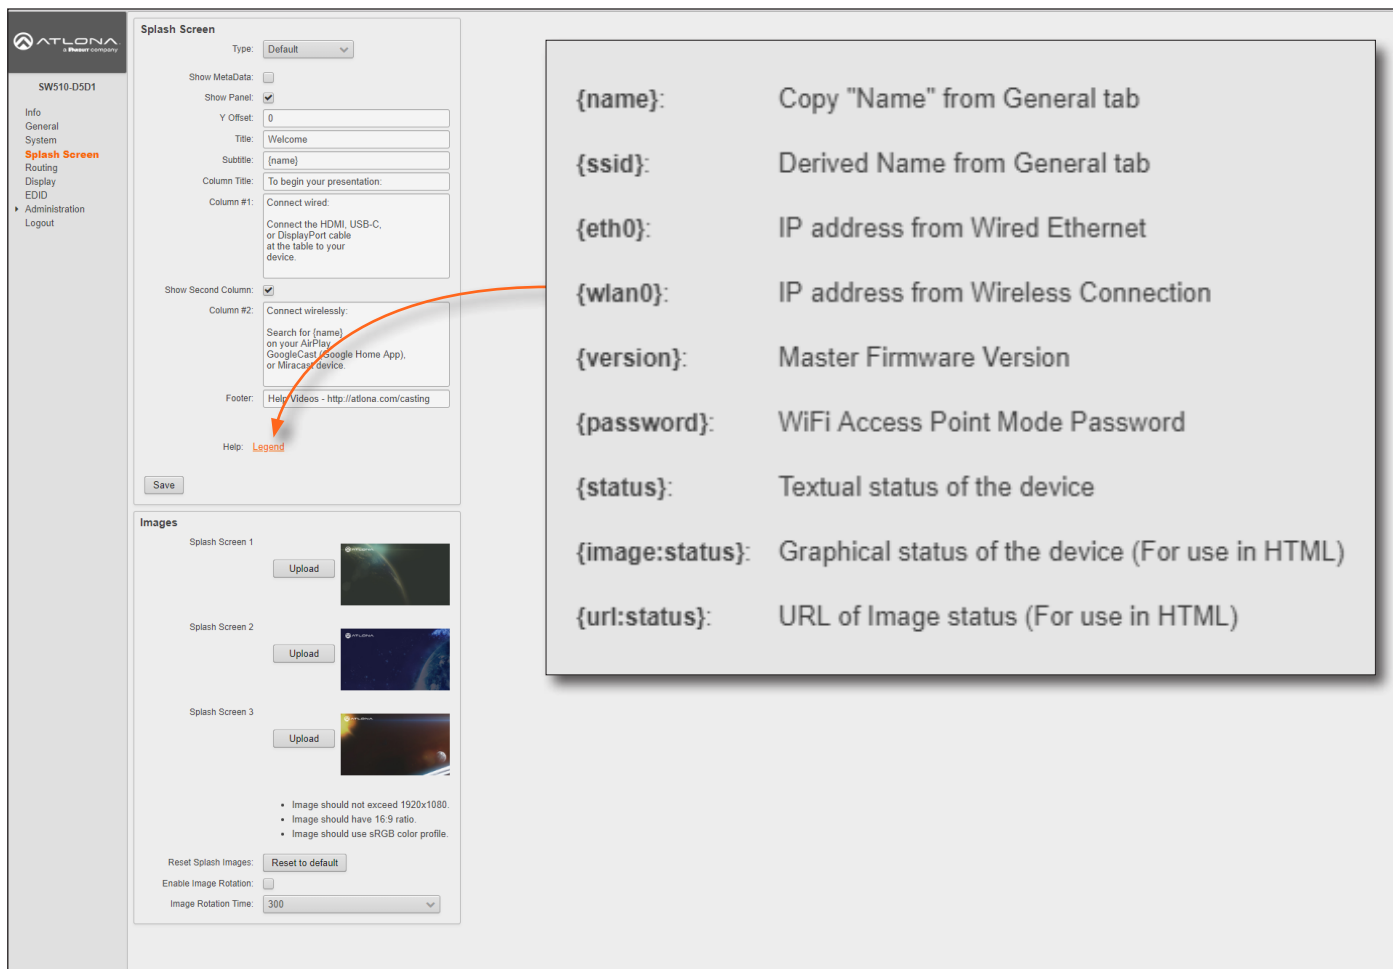

Splash Screen

Type: **Default**

Show MetaData: ☐

Show Panel: ☒

Y Offset:

Title:

Subtitle:

Column Title:

Column #1:

Show Second Column: ☒

Column #2:

Footer:

Help: [Legend](#)

Images

Splash Screen 1

Splash Screen 2

Splash Screen 3

- Image should not exceed 1920x1080.
- Image should have 16:9 ratio.
- Image should use sRGB color profile.

Reset Splash Images:

Enable Image Rotation: ☐

Image Rotation Time:

Legend

- {name}:** Copy "Name" from General tab
- {ssid}:** Derived Name from General tab
- {eth0}:** IP address from Wired Ethernet
- {wlan0}:** IP address from Wireless Connection
- {version}:** Master Firmware Version
- {password}:** WiFi Access Point Mode Password
- {status}:** Textual status of the device
- {image:status}:** Graphical status of the device (For use in HTML)
- {url:status}:** URL of Image status (For use in HTML)

Splash Screen

Type

Click this drop-down list to select the type of splash screen.

Show Meta Data

Click this check box to display metadata on the splash screen.

Show Panel

Check (enable) this box to display the panel, containing connection instructions and other information.

Y Offset

Sets the up-and-down position of the overlay panel, on the screen. A value of 0 vertically positions the panel in the center of the screen. Positive values move the panel down. Negative values move the panel up.

Title

The title of the overlay panel. The default value is "Welcome".

Subtitle

The text directly under the text in the **Title** field. The default text contains the name of the unit.

Column Title

The title text for the centered text, above both instruction columns. The default text is "To begin your presentation".

Column #1

The text positioned in the left column. The default text is "Connect wired: Connect the HDMI, USB-C, or DisplayPort cable at the table to your device".

Show Second Column

Check this box to display the second (right-hand) column. Uncheck this box to hide the text in this column.

Column #2

The text positioned in the right-hand column. The default text is “Connect wirelessly: Connect the Wi-Fi network”, entercode, and enable AirPlay, GoogleCast, or Miracast”.

Footer

By default, this field provides a link to how casting works on different operating systems (www.atlona.com/casting). This field can be modified to contain a different URL, if desired. This link will be displayed on the default splash screen.

Legend

Click this link to display a list of available tags that can be used in any of the text fields. Refer to the illustration above.

Save

Click this button to commit all changes on this page.

Images

Refer to [The Splash Screen \(page 22\)](#) for more information on using the following features.

Upload

Click this button to upload overwrite the currently selected image with custom image.

Reset Splash Images

Click the **Reset** button to set the splash screen images to the default images.


Enable Image Rotation

Click this check box to instruct the AT-UHD-SW-510W to cycle through the splash screen images.

Image Rotation Time

Click this drop-down list to select the image rotation interval.

Routing page

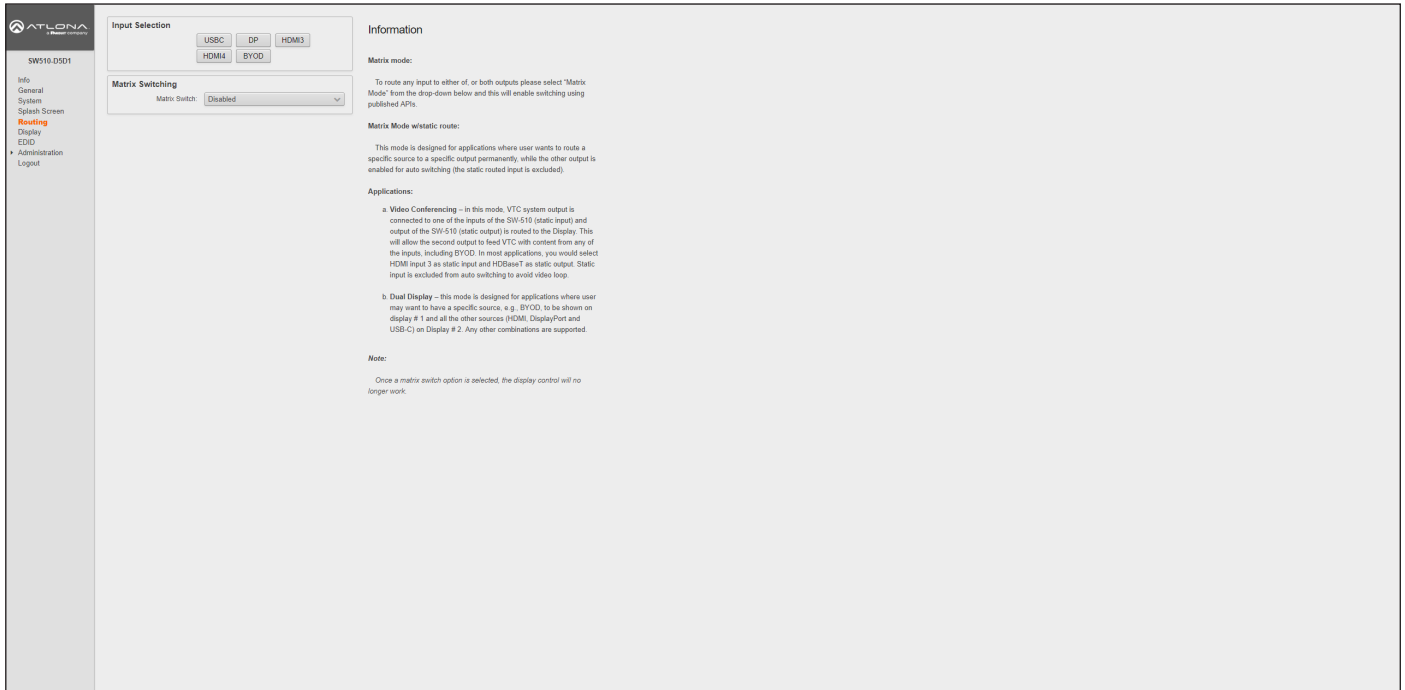

Input Selection

Matrix Switching

Matrix Switch: Disabled

Information

Matrix mode:

To route any input to either of, or both outputs please select "Matrix Mode" from the drop-down below and this will enable switching using published APIs.

Matrix Mode w/static route:

This mode is designed for applications where user wants to route a specific source to a specific output permanently, while the other output is enabled for auto switching (the static routed input is excluded).

Applications:

a. **Video Conferencing** – In this mode, VTC system output is connected to one of the inputs of the SW-510 (static input) and output of the SW-510 (static output) is routed to the Display. This will allow the second output to feed VTC with content from any of the inputs, including BYOD. In most applications, you would select HDMI input 3 as static input and HDMI1 as static output. Static input is excluded from auto switching to avoid video loop.

b. **Dual Display** – This mode is designed for applications where user may want to have a specific source, e.g., BYOD, to be shown on display # 1 and all the other sources (HDMI, DisplayPort and USB-C) on Display # 2. Any other combinations are supported.

Note:

Once a matrix switch option is selected, the display control will no longer work.

Input Selection

USB-C, DP, HDMI3, HDMI1, BYOD

Click the desired button to set the auto-switch input.


Matrix Switching

Matrix Switch

Click this drop-down list to select the desired matrix mode. Refer to [Matrix Modes \(page 44\)](#) for more information.

Modes	Description
Disabled	Matrix mode is disabled (default setting).
Matrix Mode	Allows the AT-UHD-SW-510W to independently switch between any input or both outputs.
Matrix Mode w/ Static Route	Use this mode when integrating the AT-UHD-SW-510W with a video conference system.

Display page

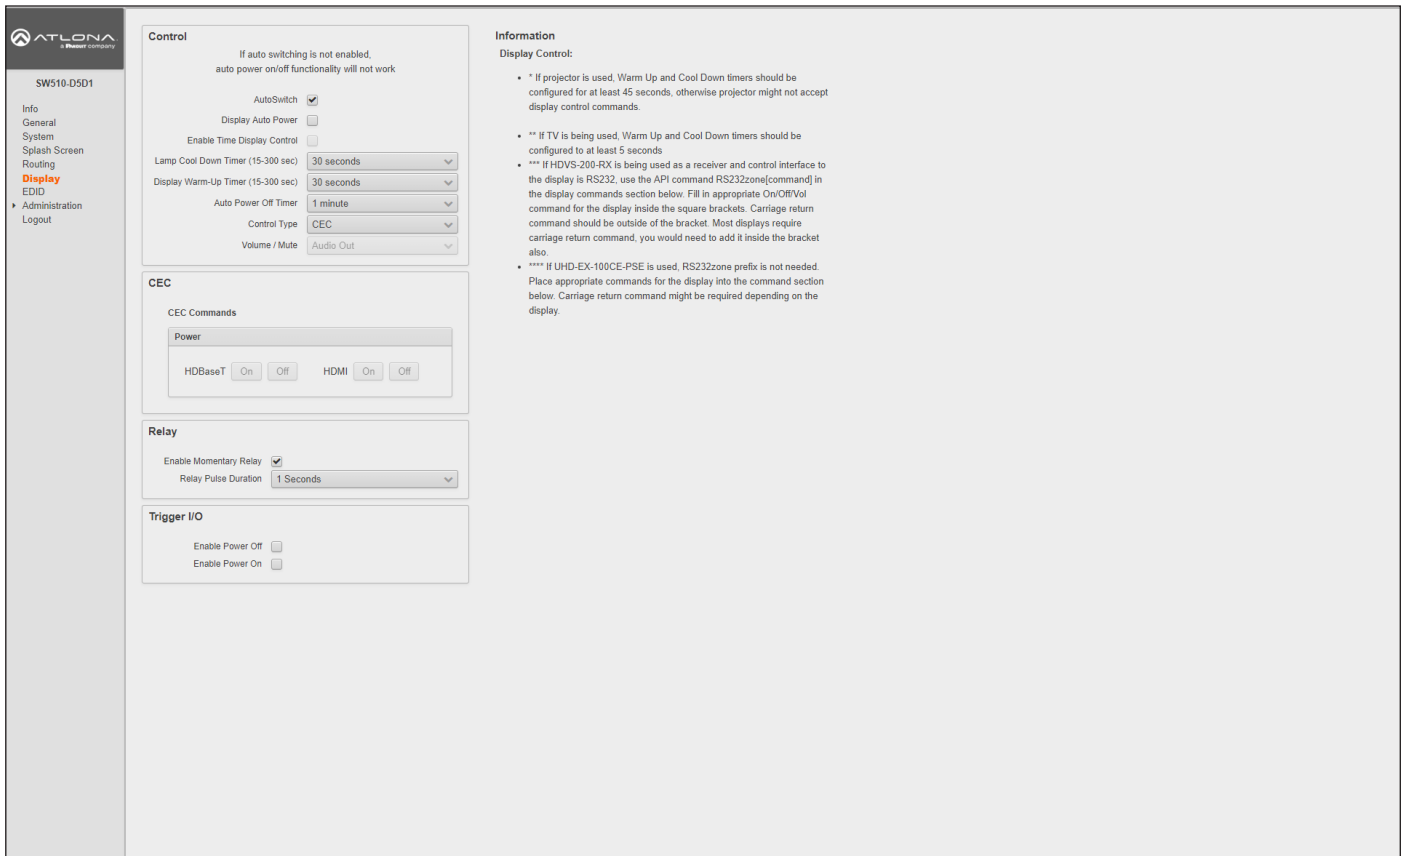

Control

If auto switching is not enabled, auto power on/off functionality will not work

AutoSwitch ☒

Display Auto Power ☐

Enable Time Display Control ☐

Lamp Cool Down Timer (15-300 sec) 30 seconds

Display Warm-Up Timer (15-300 sec) 30 seconds

Auto Power Off Timer 1 minute

Control Type CEC

Volume / Mute Audio Out

CEC

CEC Commands

Power

HDBaseT On Off HDMI On Off

Relay

Enable Momentary Relay ☒

Relay Pulse Duration 1 Seconds

Trigger I/O

Enable Power Off ☐

Enable Power On ☐

Information

Display Control:

- * If projector is used, Warm Up and Cool Down timers should be configured for at least 45 seconds, otherwise projector might not accept display control commands.
- ** If TV is being used, Warm Up and Cool Down timers should be configured to at least 5 seconds
- *** If HDV5-200-RX is being used as a receiver and control interface to the display is RS232, use the API command RS232zone[command] in the display commands section below. Fill in appropriate On/Off/Vol command for the display inside the square brackets. Carriage return command should be outside of the bracket. Most displays require carriage return command, you would need to add it inside the bracket also.
- **** If UHD-EX-100CE-PSE is used, RS232zone prefix is not needed. Place appropriate commands for the display into the command section below. Carriage return command might be required depending on the display

Control

AutoSwitch

Click this box to enable or disable auto-switching. When this box is checked, the AT-UHD-SW-510W will automatically switch inputs when the new device is connected. To disable auto-switching, uncheck this box.

Display Auto Power

Click this check box to use the AT-UHD-SW-510W to send the power-on command to the display when an A/V signal is detected. When the AV signal is no longer present, then the AT-UHD-SW-510W will send the power-off command to the display. If this feature is not desired, then uncheck this box. This feature is disabled by default.

Enable Time Display Control

Click this check box to enable the options in the Time Display Control section. This feature is disabled, by default. Refer to [Scheduling Display Operation Times \(page 56\)](#) for more information.

Lamp Cool Down Timer (15 - 300 sec)

Click this drop-down list to select the lamp cool down timer interval. This value is the cool-down interval, in seconds, before the projector can be powered-off. During this time, the projector will not accept any “power on” or “power off” commands until the last “power off” command has been processed and the projector lamp has completed the cool-down cycle. Range: 15 to 300. The default value is 30 seconds.

Display Warm-Up Timer (15 - 300 sec)

Click this drop-down list to select the display warm-up time interval. Range: 15 to 300. The default value is 30 seconds.

Auto Power Off Timer

Click this drop-down list to set the time interval, in seconds, between when the loss of A/V signal is detected and when the “Display Off” command is sent to the display. Range: 15 seconds to 1 minute. The default value is 1 minute.

Control Type

Click this drop-down list to select the control method for sending commands.

Setting	Description
RS-232	RS-232 is used to send commands.
IP	Commands are sent over IP.
CEC	Uses CEC to send commands.



NOTE: If **Control Type** is set to **CEC**, then the **Volume / Mute** drop-down list will be disabled. Refer to the [CEC \(page 46\)](#) section for more information.

Volume Mute

This option is only available when **Control Type** is set to **RS-232** or **IP**.

Setting	Description
RS-232	Audio is controlled using RS-232
IP	Audio volume/muting is controlled using IP
Audio Out	Audio is controlled using the web GUI or front panel buttons

CEC

Power

When a display is connected to the AT-UHD-SW-510W, power-on and power-off control of the display using the CEC protocol. The power-on and power-off command can also be sent over HDBaseT or HDMI. These buttons will only be enabled if a device is connected to the AT-UHD-SW-510W, using the correct cable. For example, the HDMI ON / OFF buttons will only be enabled when an HDMI cable is connected from the AT-UHD-SW-510W to a display.

Consumer Electronics Control (CEC): Atlona has confirmed proper CEC functionality with several current models of Samsung, Panasonic, and Sony displays. However, it is not guaranteed that CEC will work with all displays. Many manufacturers do not support the CEC “off” command, and older displays use proprietary commands. Atlona only supports displays that use the CEC command structure defined in HDMI 1.2a. It is recommended that dealers request an evaluation product from Atlona, before designing a system using the CEC protocol. If this is not possible, then other control methods will need to be considered, in order to control displays using Atlona products.

Relay

Enable Momentary Relay

When enabled, the **RELAY** port can be used to control screens, curtains, and other devices. Use a 48 V DC relay with no more than 1 A current draw. This feature is enabled, by default. Refer to [Relay \(page 13\)](#) for wiring information.

Relay Pulse Duration

Click this drop-down list to select the desired pulse duration for the relay. Some devices may require different time intervals, to recognize a state change. Range: 1 to 10 seconds.


Trigger I/O

This section defines how the **TRIGGER** port will respond to varying voltage levels. Either or both of the following conditions can be enabled or disabled.

- **Enable Power Off**
Check this box to enable a *power-off* state when the trigger voltage is pulled from low to high. Uncheck this box to disable this function.
- **Enable Power On**
Check this box to enable a *power-on* state when the trigger voltage is pulled from low to high. Uncheck this box to disable this function.

Control Type : RS-232

When **RS-232** is selected from the **Control Type** drop-down, both the **HDBaseT RS-232** and **RS-232/IP Commands** section is displayed.

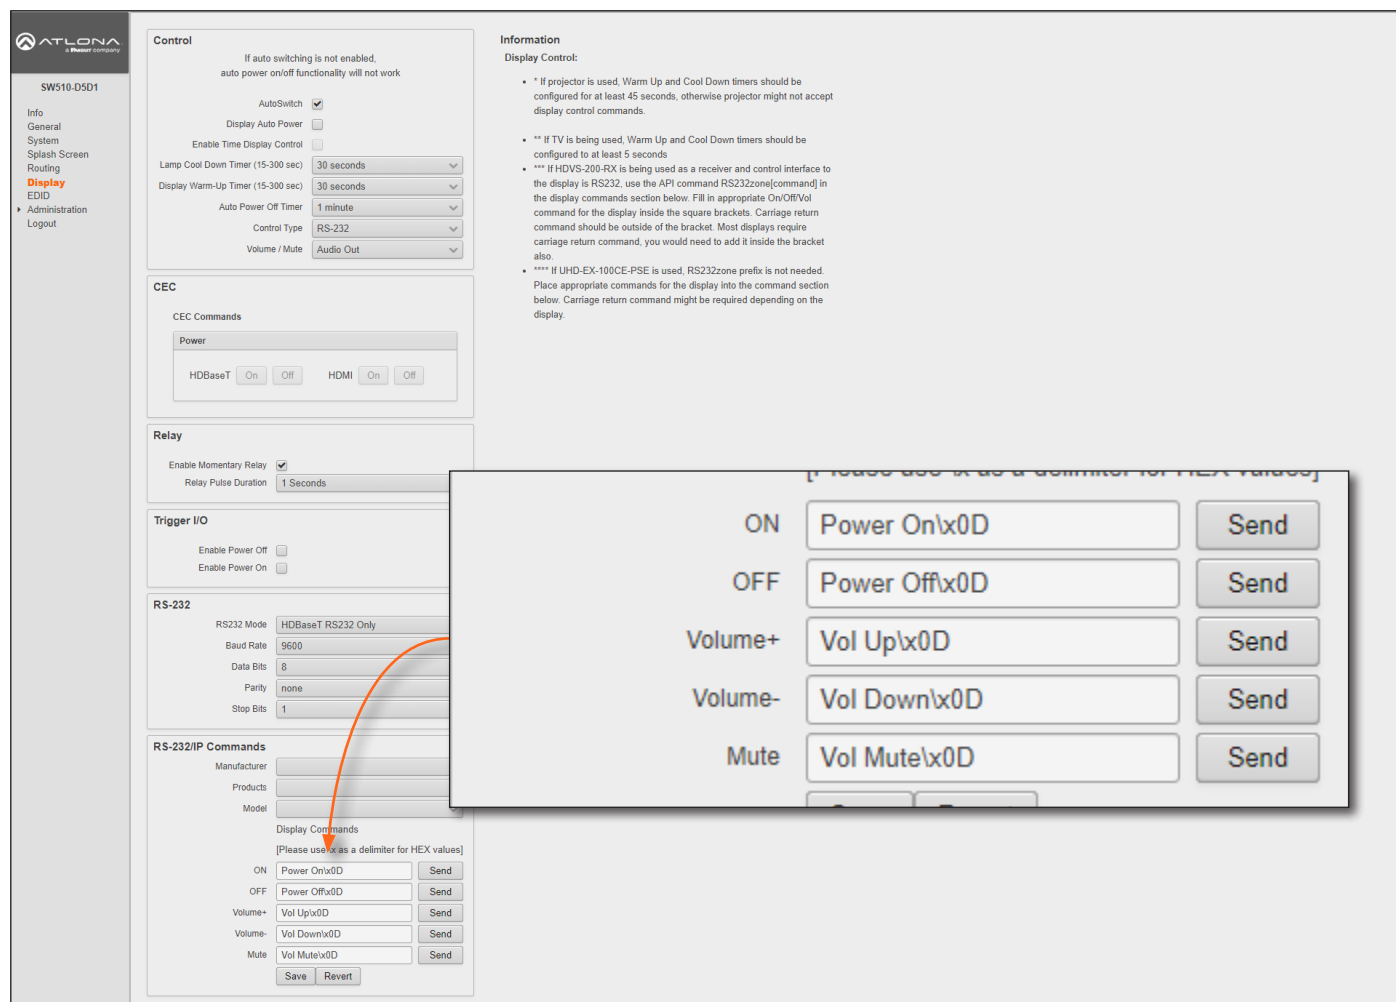

The screenshot shows the ATLONA web GUI interface. On the left is a navigation menu with options like Info, General, System, Splash Screen, Routing, Display, EDID, Administration, and Logout. The main area is divided into sections: Control, CEC, Relay, Trigger I/O, RS-232, and RS-232/IP Commands. The Control Type dropdown is set to RS-232. The RS-232 Mode dropdown is highlighted with a red arrow, pointing to a modal window that lists commands: Power On (Power On\x0D), Power Off (Power Off\x0D), Volume+ (Vol Up\x0D), Volume- (Vol Down\x0D), and Mute (Vol Mute\x0D). Each command has a corresponding Send button.

RS232 Mode

Click this drop-down list to select the RS-232 mode that will be affected by the **Baud Rate**, **Data Bits**, **Parity**, and **Stop Bits** settings.

Setting	Description
HDBaseT RS232 Only	Assigns settings for RS-232 settings over HDBaseT OUT . RS-232 commands will only be transmitted over the HDBaseT OUT port.
Local RS232 Only	Affects the settings for the RS-232 port. RS-232 commands will be transmitted to/from the RS-232 port to the control system.
Both	Both HDBaseT OUT and the RS-232 port are used. Note that when using both ports, the RS-232 settings must be identical.

Baud Rate, Data Bits, Parity, and Stop Bits

The RS-232 settings for the selected RS-232 mode.

Setting	Description
Baud rate	Sets the baud rate. The following options are available: 9600, 14400, 19200, 38400, 57600, 115200.
Data bit	Sets the number of data bits used to represent each character of data. The following options are available: 7 or 8.
Parity	Sets the parity bit, which can be included with each character to detect errors during the transmission of data. The following options are available: None, Odd, or Even.
Stop bit	Sets the stop bit. Stop bits are sent at the end of each character, allowing the client to detect the end of a character stream. The following options are available: 1 or 2.

RS-232/IP Commands

Click the **Manufacturer**, **Products**, and **Model** drop-down lists to select the desired product. Note that only a minimal set of devices have been included. Once a device is selected, the **ON**, **OFF**, **Volume+**, **Volume-**, and **Mute** fields will be populated with the correct information for that device. If a device is not listed, enter the appropriate commands the device in each field. Commands can be either ASCII or hexadecimal. If hexadecimal values are used, then use the /x delimiter at the end of the string.

RS-232/IP Commands

Manufacturer
Products
Model

Display Commands
[Please use \x as a delimiter for HEX values]

ON
Power On\x0D
Send

OFF
Power Off\x0D
Send

Volume+
Vol Up\x0D
Send

Volume-
Vol Down\x0D
Send

Mute
Vol Mute\x0D
Send

Save
Revert

Save

Click this button to commit all changes.

Revert

Click this button to undo all changes.

Control Type : IP

When **IP** is selected from the **Control Type** drop-down, both the **IP** and **RS-232/IP Commands** section is displayed.

IP Address

Enter the IP address of the remote device.

Port [0 - 65535]

Enter the listening port for the remote device. Values from 0 through 65535 are valid.

IP

IP address

Port [0-65535]

RS-232/IP Commands

Click the **Manufacturer**, **Products**, and **Model** drop-down lists to select the desired product. Note that only a minimal set of devices have been included. Once a device is selected, the **ON**, **OFF**, **Volume+**, **Volume-**, and **Mute** fields will be populated with the correct information for that device. If a device is not listed, enter the appropriate commands the device in each field. Commands can be either ASCII or hexadecimal. If hexadecimal values are used, then use the /x delimiter at the end of the string.

RS-232/IP Commands

Manufacturer

Products

Model

Display Commands

[Please use \x as a delimiter for HEX values]

ON

OFF

Volume+

Volume-

Mute


Save

Click this button to commit all changes.

Revert

Click this button to undo all changes.

EDID page

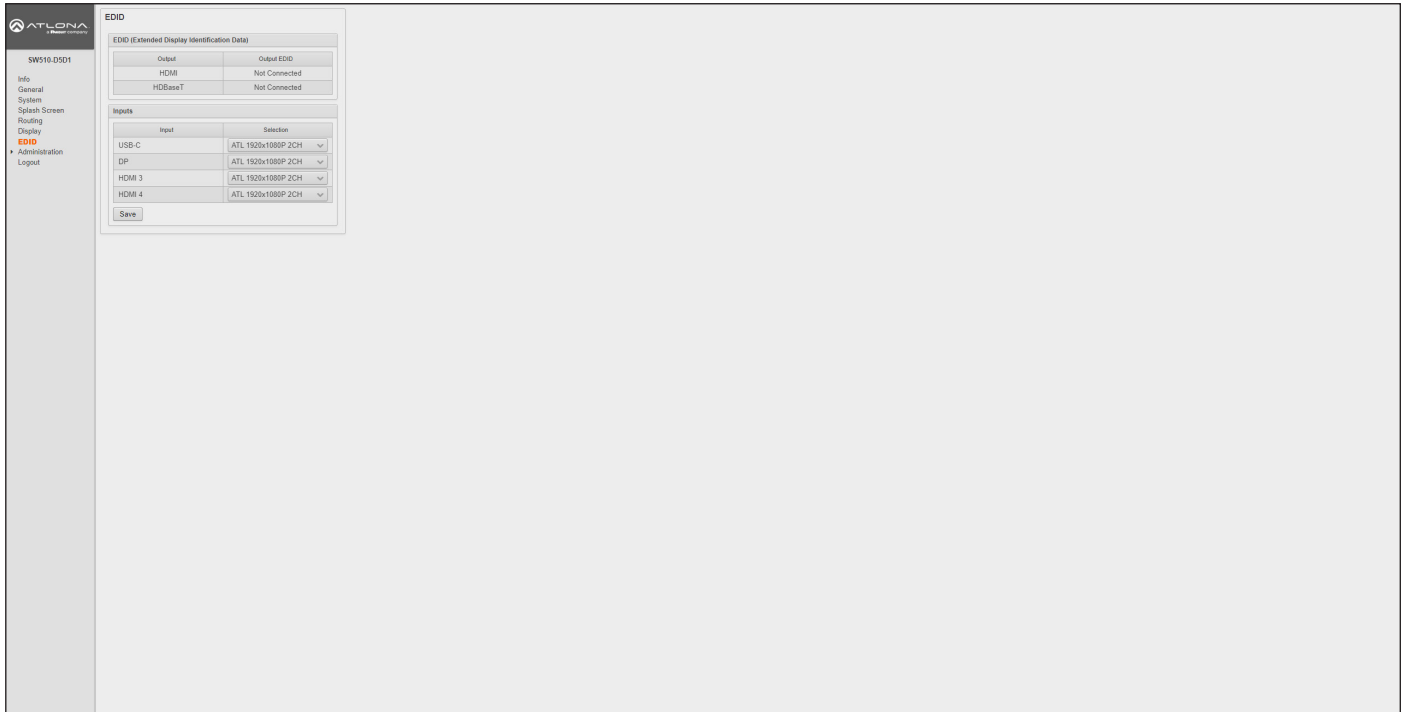

EDID

EDID (Extended Display Identification Data)

Output	Output EDID
HDMI	Not Connected
HDBaseT	Not Connected

Inputs

Input	Selection
USB-C	ATL 1920x1080P 2CH
DP	ATL 1920x1080P 2CH
HDMI 3	ATL 1920x1080P 2CH
HDMI 4	ATL 1920x1080P 2CH

Save

EDID (Extended Display Identification Data)

Displays the EDID assigned that is being used by each output. Press the **Save** button to save the EDID to a file.

Inputs

The **Input** column displays each of the inputs on the AT-UHD-SW-510W. Click the drop-down list, under the **Selection** column, to select the desired EDID to be used. Click the **Save** button to accept the changes. The table below lists the available EDID presets.

The table below provides a listing of available EDID presets.

EDID listing	
4K60 2CH	1366x768@60 2CH
4K30 2CH	1280x800p60 2CH
4K30 4:4:4 2CH	1280x720p60 2CH
1920x1200p60 2CH	1024x768p60 2CH
1920x1080P 2CH (factory-default)	800x600p60 2CH
1600x900p@60 2CH	


Save

Click this button to commit changes.

Administration page


Telnet page

The **Telnet** page provides an emulated terminal for entering commands.

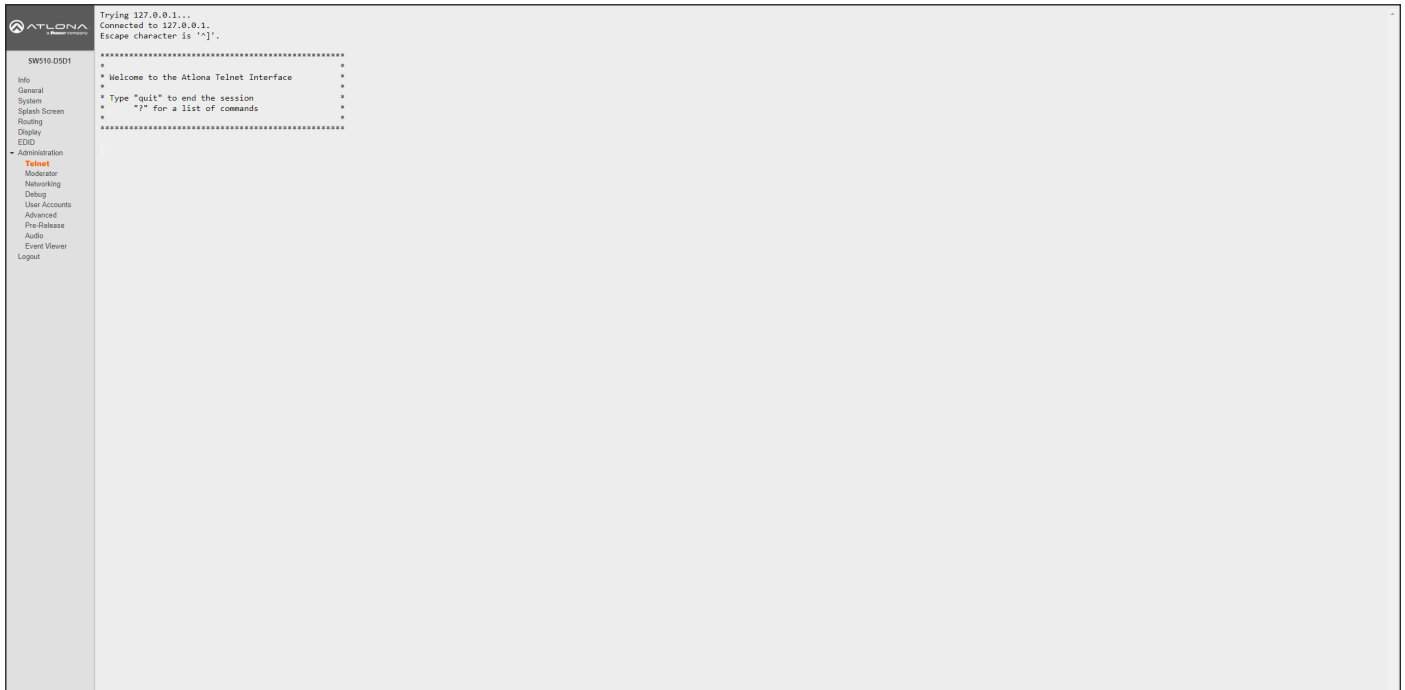

Moderator page

The **Moderator** page provides control of which device, that are casting, are permitted to display content. Refer to [Using Moderator Mode \(page 53\)](#) for more information.

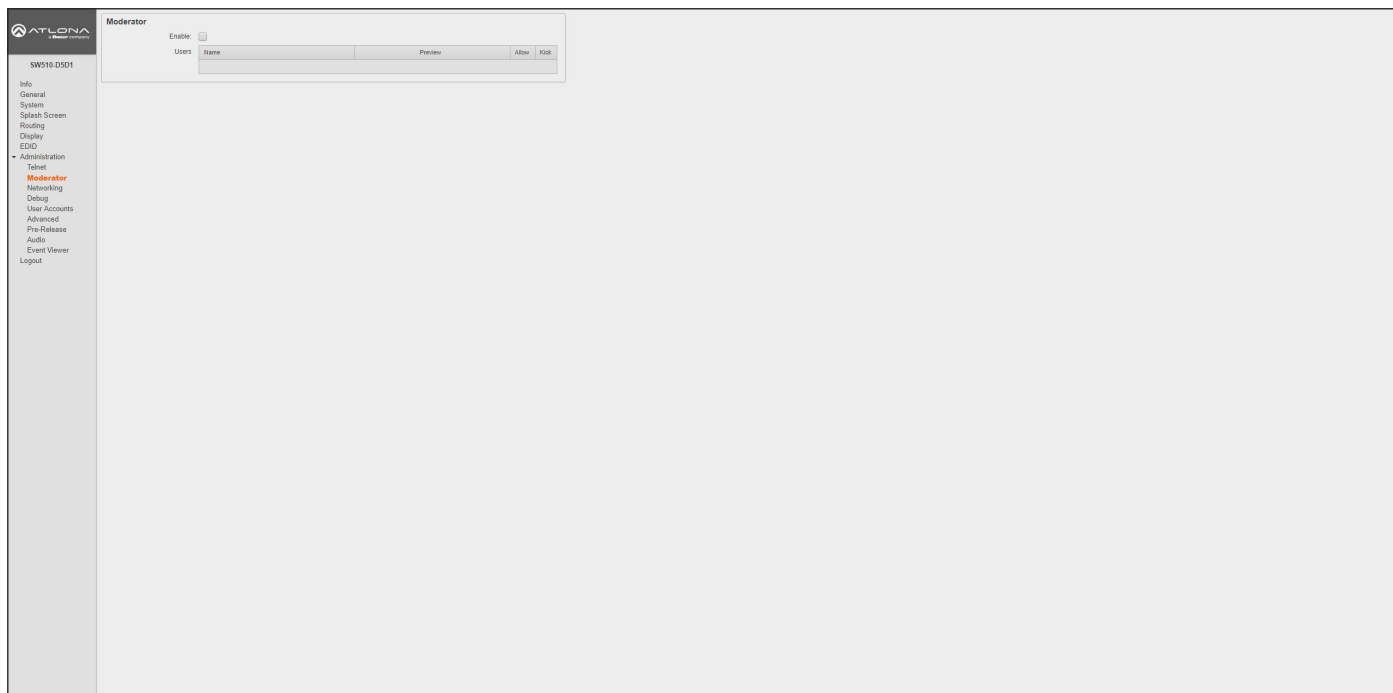

Enable


Click this check box to enable or disable Moderator mode. If this box is checked, then Moderator mode is enabled. In order to monitor which devices are allowed to display content, this box must be checked before a device begins casting. If a device is already casting, then enabling this feature will have no effect.

Users

This table lists all users which are casting using the AT-UHD-SW-510W. Up to four users can be hosted at one time, but only one can be displayed at a time. Devices will only appear in this table when they are casting. Moderator mode must be enabled for devices to be displayed in this table. When casting devices are displays an **Allow** and **Kick** button will also be displayed.

Networking page

This page contains a **Wifi** and **Ethernet** tab. Use the settings, under these tabs, to connect the AT-UHD-SW-510W to a network or Wireless Access Point (WAP). Refer to the IT Network Deployment Guide for detailed information on configuring the AT-UHD-SW-510W in various network environments.

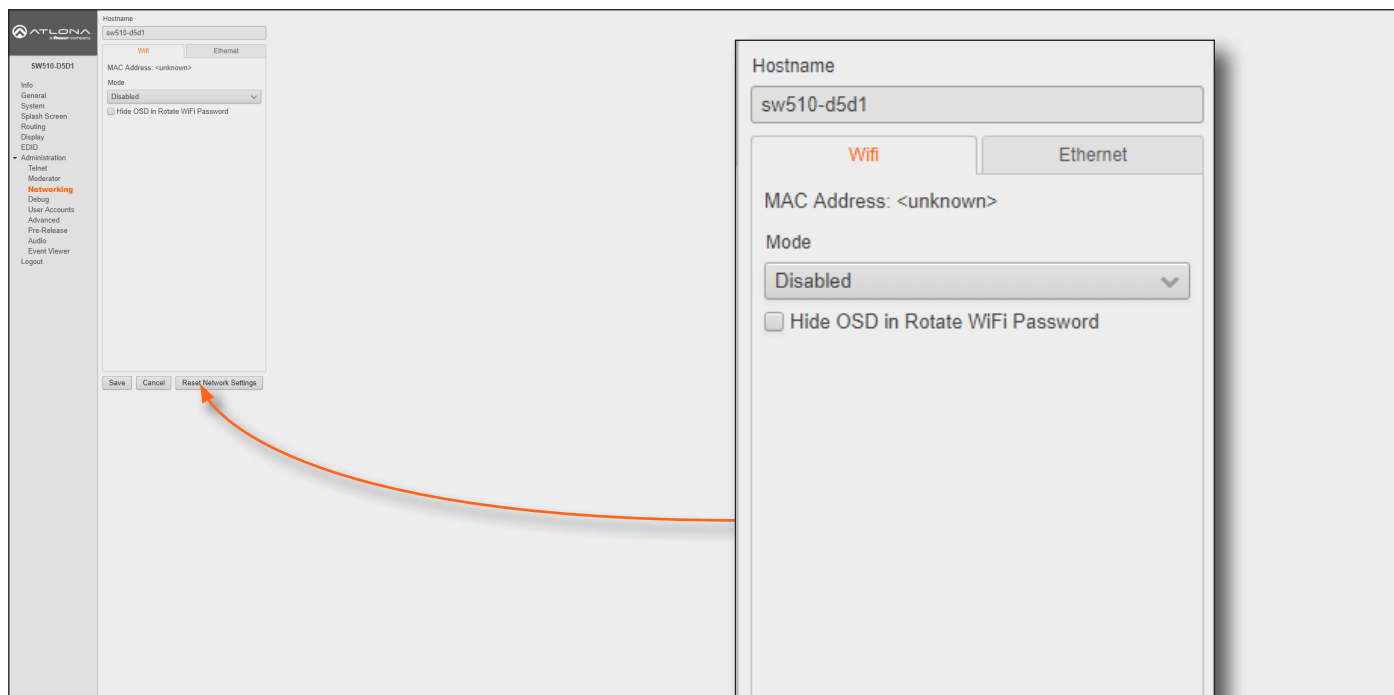

Hostname

The name assigned to the AT-UHD-SW-510W. This name can be changed, if desired. Refer to the [General page \(page 71\)](#).

Mode (Wifi)

Select the Wi-Fi mode from this drop-down list. Refer to the next page for more information on configuration of Wi-Fi modes.

Hide OSD in Rotate WiFi Password

Check this box to enable this feature. When enabled, the OSD is hidden when rotating the WiFi password. This option is available in both **Access Point** and **Connect** modes.

Save

Click this button to accept all changes to the **Wifi** tab. When Connect mode is selected, click this button to connect the AT-UHD-SW-510W to the wireless network.

Cancel

Resets the Wifi and Ethernet settings to factory-default settings, then displays the Wifi tab.

Reset Network Settings

Click this button to reset the network settings to factory-default.

WiFi tab

Mode

Click this drop-down list to select the desired Wifi mode.

Setting	Description
Access Point	Select this option to configure the AT-UHD-SW-510W as a Wireless Access Point, allowing other wireless devices to connect to the same wired network as the AT-UHD-SW-510W.
Connect	Select this mode to connect the AT-UHD-SW-510W to the specified SSID of a wireless host.
Disabled	Select this mode to disable Wi-Fi on the AT-UHD-SW-510W.

Firewall Mode

This option is unique to Access Point Mode. Refer to the Firewall Mode option, below, for more information.

SSID

The SSID assigned to the AT-UHD-SW-510W. The SSID name can be changed under the [General page \(page 71\)](#).

No Password in AP Mode

Click this check box to eliminate the need for a password when connecting to the AT-UHD-SW-510W.

Password

Enter the password, required to connect to the AT-UHD-SW-510W.

Hide Password on OSD

By default, the password will be displayed on the OSD. Check this box to hide the password on the OSD.

Rotate WiFi Password

Click this check box to randomly generate a new password after the specified time interval has expired.

Password Rotation Interval

Click this drop-down list to select the desired time interval before the password is randomly changed.

Channel

Click this drop-down list to select the desired wireless channel. Consult with a network administrator for assistance, if required.

DNS Mode


Click this drop-down list to select the desired DNS mode. To specify custom DNS IP addresses, set this option to **Static**.

DNS Server #1 / DNS Server #2

Enter the DNS server addresses in the DNS Server #1 and DNS Server #2 fields. If the AT-UHD-SW-510W will be used within an internal LAN, this information is not required.

Save

Click this button to commit all changes.

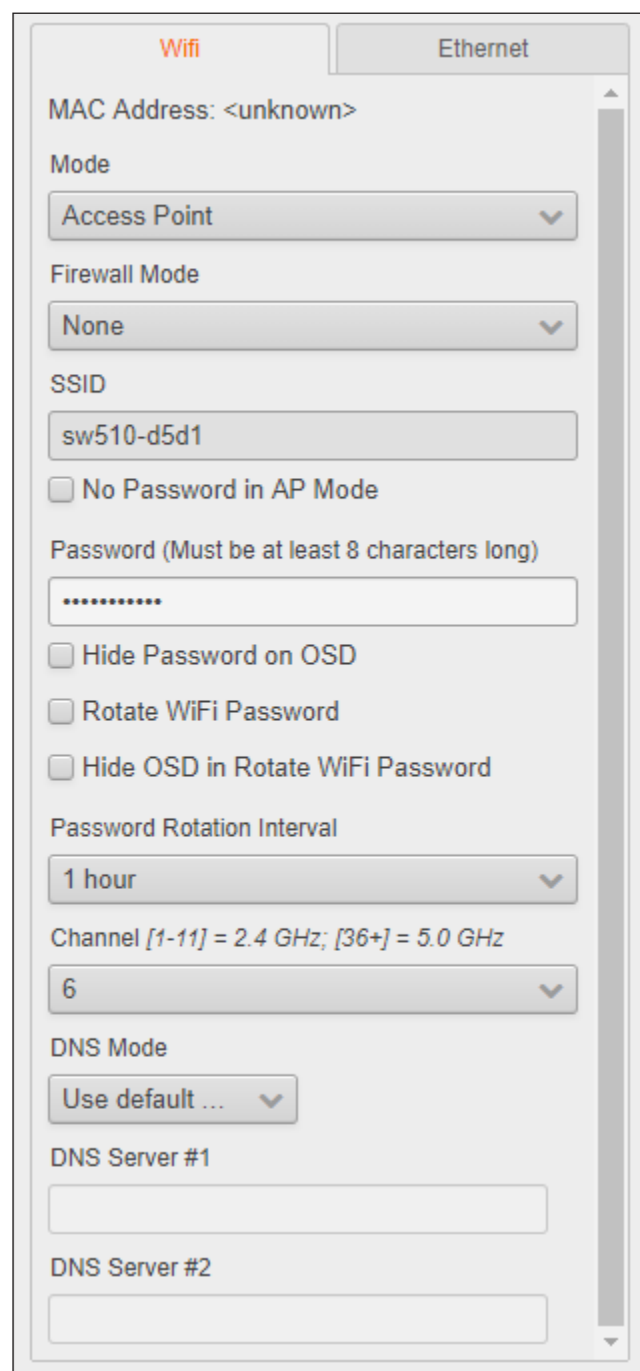

The screenshot shows the 'Wifi' tab in the web interface. At the top, there are two tabs: 'Wifi' (active) and 'Ethernet'. Below the tabs, the 'MAC Address' is shown as '<unknown>'. The 'Mode' dropdown is set to 'Access Point'. The 'Firewall Mode' dropdown is set to 'None'. The 'SSID' field contains 'sw510-d5d1'. There are three checkboxes: 'No Password in AP Mode' (unchecked), 'Hide Password on OSD' (unchecked), and 'Rotate WiFi Password' (unchecked). Below these is a 'Password' field with a masked password '.....'. There is also a checkbox for 'Hide OSD in Rotate WiFi Password' (unchecked). The 'Password Rotation Interval' dropdown is set to '1 hour'. The 'Channel' dropdown is set to '6', with a note below it: 'Channel [1-11] = 2.4 GHz; [36+] = 5.0 GHz'. The 'DNS Mode' dropdown is set to 'Use default ...'. At the bottom, there are two empty text fields for 'DNS Server #1' and 'DNS Server #2'.

Cancel

Click to abort changes and collapse the **Mode** drop-down list.


Reset Network Settings

Click this button to reset the network settings to factory-defaults.

Firewall Mode

This feature is only available when the Wifi mode is set to Access Point. Click the **Firewall Mode** drop-down list to select the desired mode. This feature allows control of incoming and outgoing network traffic. The AT-UHD-SW-510W provides the following firewall modes: **Block Private Network**, **Block Internet**, **Block All**, and **None**.

Setting	Description
None	Select this option to disable the firewall on the AT-UHD-SW-510W and allow all incoming and outgoing network traffic.
Block Private Network	Select this option to prevent unauthorized clients from accessing the AT-UHD-SW-510W.
Block Internet	Allows wireless access to the AT-UHD-SW-510W but prevent Internet access (Google, YouTube, etc).
Block All	All outbound network traffic is blocked.

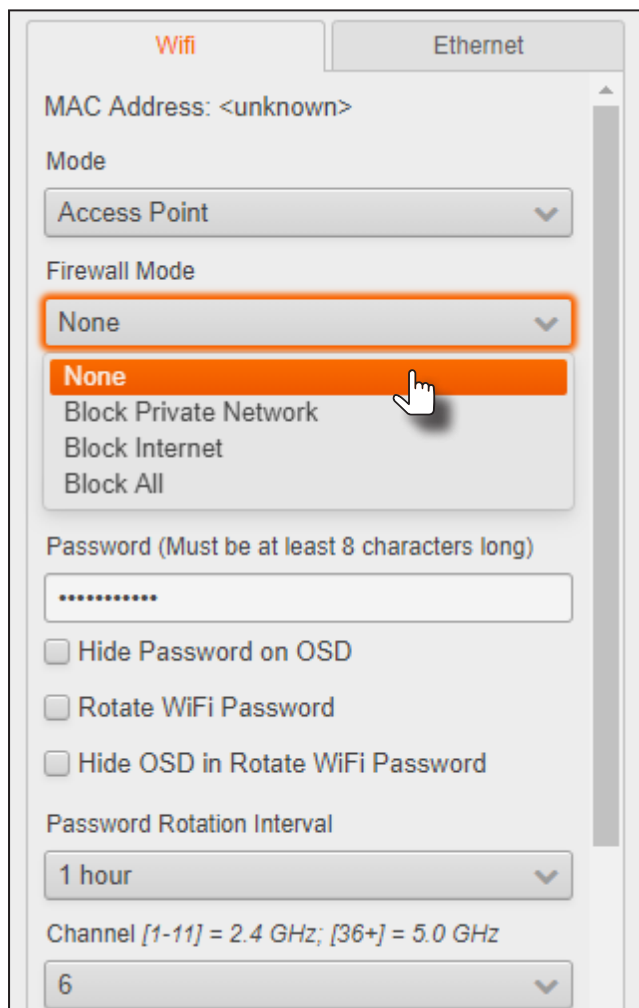

The screenshot shows the 'Wifi' tab selected in the top navigation bar. Below it, the 'MAC Address' is shown as '<unknown>'. The 'Mode' dropdown is set to 'Access Point'. The 'Firewall Mode' dropdown is open, displaying four options: 'None' (which is highlighted in orange and has a mouse cursor pointing at it), 'Block Private Network', 'Block Internet', and 'Block All'. Below the dropdowns, there is a 'Password' field with a note '(Must be at least 8 characters long)' and a series of dots. There are three checkboxes: 'Hide Password on OSD', 'Rotate WiFi Password', and 'Hide OSD in Rotate WiFi Password'. Below these is a 'Password Rotation Interval' dropdown set to '1 hour'. At the bottom, there is a 'Channel' dropdown set to '6', with a note '[1-11] = 2.4 GHz; [36+] = 5.0 GHz'.

Connect Mode

Select **Connect** from the **Mode** drop-down list to allow the AT-UHD-SW-510W to connect to an available wireless network.

Preferred Gateway

Click this drop-down list to select either **Ethernet** or **Wireless**.


SSID

The name of the wireless network to which the AT-UHD-SW-510W is connected. Click the **Pick** button to select the desired wireless network.

Password

Enter the password, required to connect to the AT-UHD-SW-510W.

State	Description
Connected	The AT-UHD-SW-510W is connected to the wireless network.
Not Connected	Unsuccessful connection. Check to make sure the password was entered correctly. This state will also occur if the wireless network, to which the AT-UHD-SW-510W is connected, is taken offline.
Unknown	The network state is unknown. This message is displayed if the AT-UHD-SW-510W has not been configured to connect with a wireless network.



Wifi Ethernet

MAC Address: <unknown>

Mode

Connect

Preferred Gateway

Ethernet

☐ Hide OSD in Rotate WiFi Password

SSID

Pick

Password

.....

Status: Unknown

☐ 802.1x Security Enable

Identity

.....

Password

.....

Certificate

Upload

Status

Displays the connection status. Refer to the table above.

802.1x Security Enable

Enables or disables the 802.1x protocol. This feature is applicable to both Wifi and Ethernet. Refer to [802.1X Authentication \(page 57\)](#) for more information.

Identity

Enter the identity for the supplicant device in this field.

Password

Enter the password in this field. Note that this field will always be masked.

Upload

Click this button to upload the digital certificate to the authenticator. Note that the PKCS#12 file (.pfx file) should *not* include a private key.

Delete

Click this button to delete an existing certificate on the authenticator device.

Save

Click this button to connect to the specified wireless network (SSID).

Cancel

Resets the Wifi and Ethernet settings to factory-default settings, then displays the Wifi tab.

Reset Network Settings

Resets the networking subsystem to factory-default settings.


Ethernet tab

Click this tab to configure wired network settings on the AT-UHD-SW-510W. By default, the AT-UHD-SW-510W is set to DHCP mode, allowing a DHCP server (if present) to assign the unit an IP address. If a DHCP server is not found within 15 seconds, then the unit will be placed in Auto IP mode and use a link-local IP address within the range of 169.254.xxx.xxx.

Mode

Click this drop-down list to select either desired Ethernet mode.

Setting	Description
DHCP	Select this option to have a DHCP server (if available) assign an IP address to the AT-UHD-SW-510W.
Static	Select this option to enter a specific IP address. When set to Static mode, the subnet mask, gateway, and DNS servers can be specified.
Factory Static	Select this option to use the factory-default wired network settings. In this mode, none of the fields can be modified and will be set to the following values: <ul style="list-style-type: none"> • IP address = 192.168.1.254 • Network mask = 255.255.0.0 • Gateway = 192.168.1.1

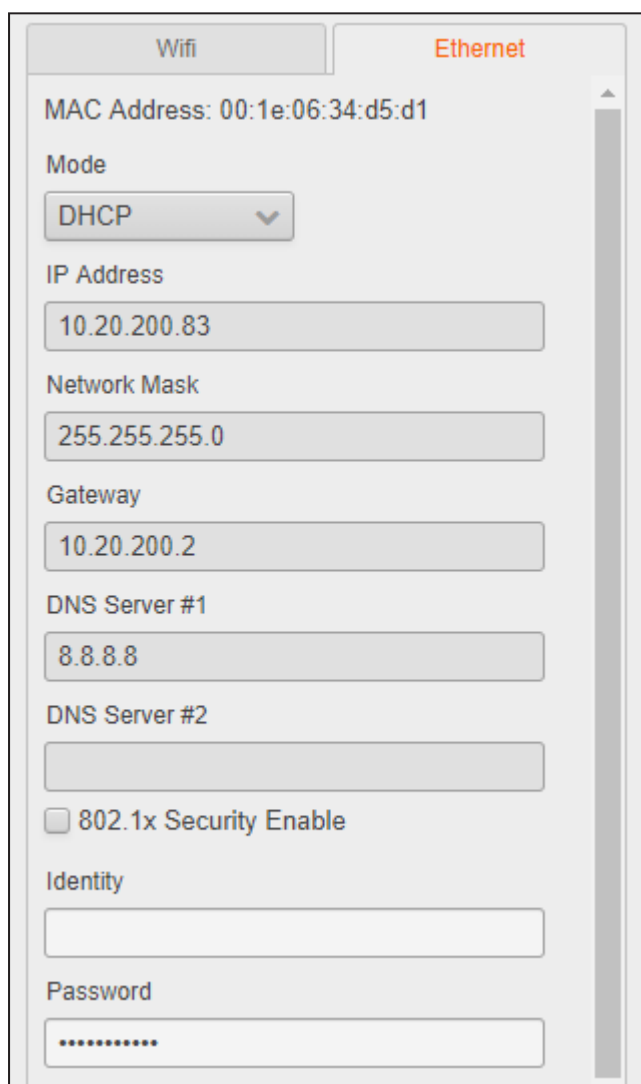

IP Address

Enter the desired IP address for the AT-UHD-SW-510W in this field.

Network Mask

Enter the subnet mask in this field.

Gateway

Enter the gateway (router) address in this field.

DNS Server #1 / DNS Server #2

Enter the DNS server addresses in the DNS Server #1 and DNS Server #2 fields. If the AT-UHD-SW-510W will be used within an internal LAN, this information is not required.

802.1x Security Enable

Enables or disables the 802.1x protocol. This feature is applicable to both Wifi and Ethernet. Refer to [802.1X Authentication \(page 57\)](#) for more information.

Identity

Enter the identity for the supplicant device in this field.

Password


Enter the password in this field. Note that this field will always be masked.

Upload

Click this button to upload the digital certificate to the authenticator. Note that the PKCS#12 file (.pfx file) should *not* include a private key.

Delete

Click this button to delete an existing certificate on the authenticator device.

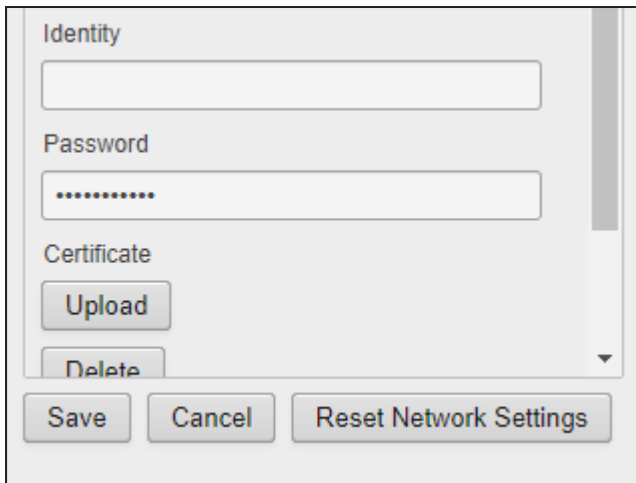

The screenshot shows a web interface for configuring network settings. It includes a section for 'Identity' with a text input field, a 'Password' section with a masked text input field, and a 'Certificate' section with 'Upload' and 'Delete' buttons. At the bottom, there are three buttons: 'Save', 'Cancel', and 'Reset Network Settings'.

Save

Click this button to connect to the specified wireless network (SSID).

Cancel


Resets the Wifi and Ethernet settings to factory-default settings, then displays the Wifi tab.

Reset Network Settings

Resets the networking subsystem to factory-default settings.

Static Mode

Select this option to enter a specific IP address. When set to Static mode, the subnet mask, gateway, and DNS servers can be specified.

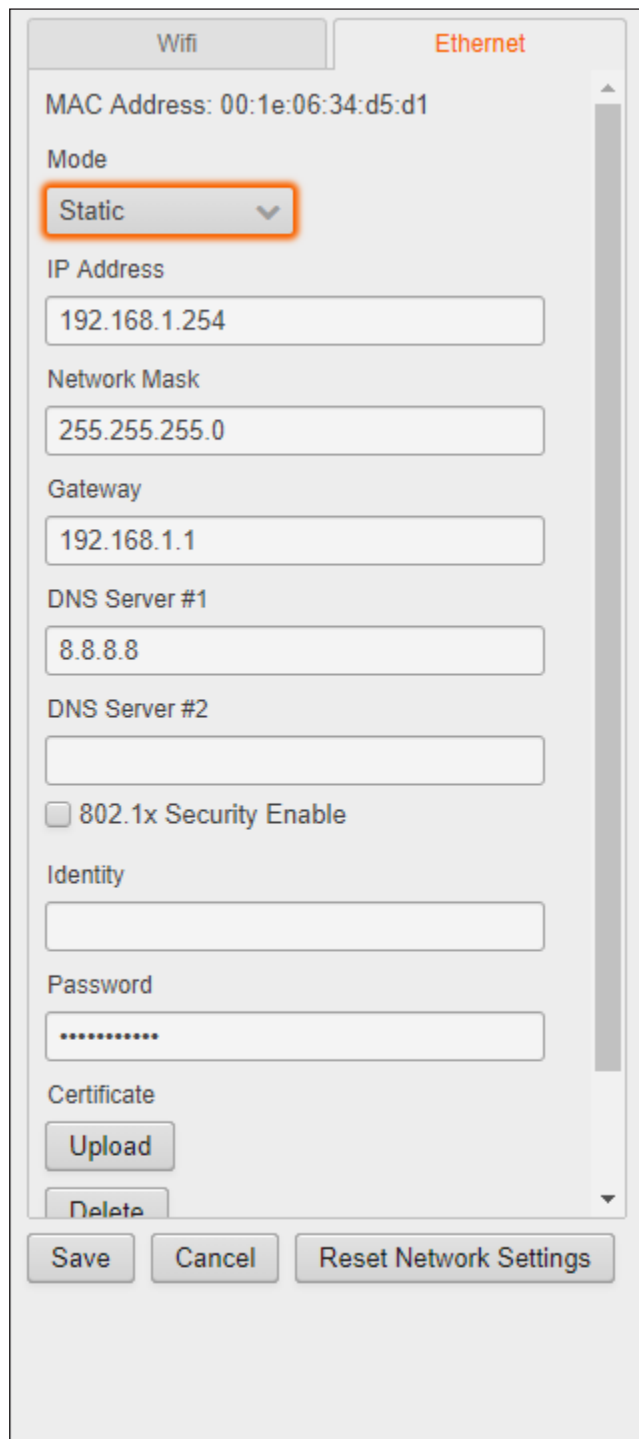

Wifi Ethernet

MAC Address: 00:1e:06:34:d5:d1

Mode

Static

IP Address

192.168.1.254

Network Mask

255.255.255.0

Gateway

192.168.1.1

DNS Server #1

8.8.8.8

DNS Server #2

☐ 802.1x Security Enable

Identity

Password

.....

Certificate

Upload

Delete

Save Cancel Reset Network Settings

IP Address

Enter the desired IP address for the AT-UHD-SW-510W in this field.

Network Mask

Enter the subnet mask in this field.

Gateway

Enter the gateway (router) address in this field.

DNS Server #1 / DNS Server #2

Enter the DNS server addresses in the DNS Server #1 and DNS Server #2 fields. If the AT-UHD-SW-510W will be used within an internal LAN, this information is not required.

802.1x Security Enable

Enables or disables the 802.1x protocol. This feature is applicable to both Wifi and Ethernet. Refer to [802.1X Authentication \(page 57\)](#) for more information.

Identity

Enter the identity for the supplicant device in this field.

Password

Enter the password in this field. Note that this field will always be masked.

Upload

Click this button to upload the digital certificate to the authenticator. Note that the PKCS#12 file (.pfx file) should *not* include a private key.

Delete

Click this button to delete an existing certificate on the authenticator device.

Save

Click this button to accept all changes to the **Ethernet** tab.

Cancel

Resets the Wifi and Ethernet settings to factory-default settings, then displays the Wifi tab.

Reset Network Settings


Click this button to set the wired network settings of the AT-UHD-SW-510W to factory-default.

Factory Static Mode

Select this option to set the AT-UHD-SW-510W to the factory-default IP settings:

IP Address	192.168.1.254
Network Mask	255.255.0.0
Gateway	192.168.1.1

The advantage of this mode is that the IP address is always known, and is useful for troubleshooting and configuration. In this mode, the **IP Address**, **Network Mask**, or **Gateway** fields cannot be modified.

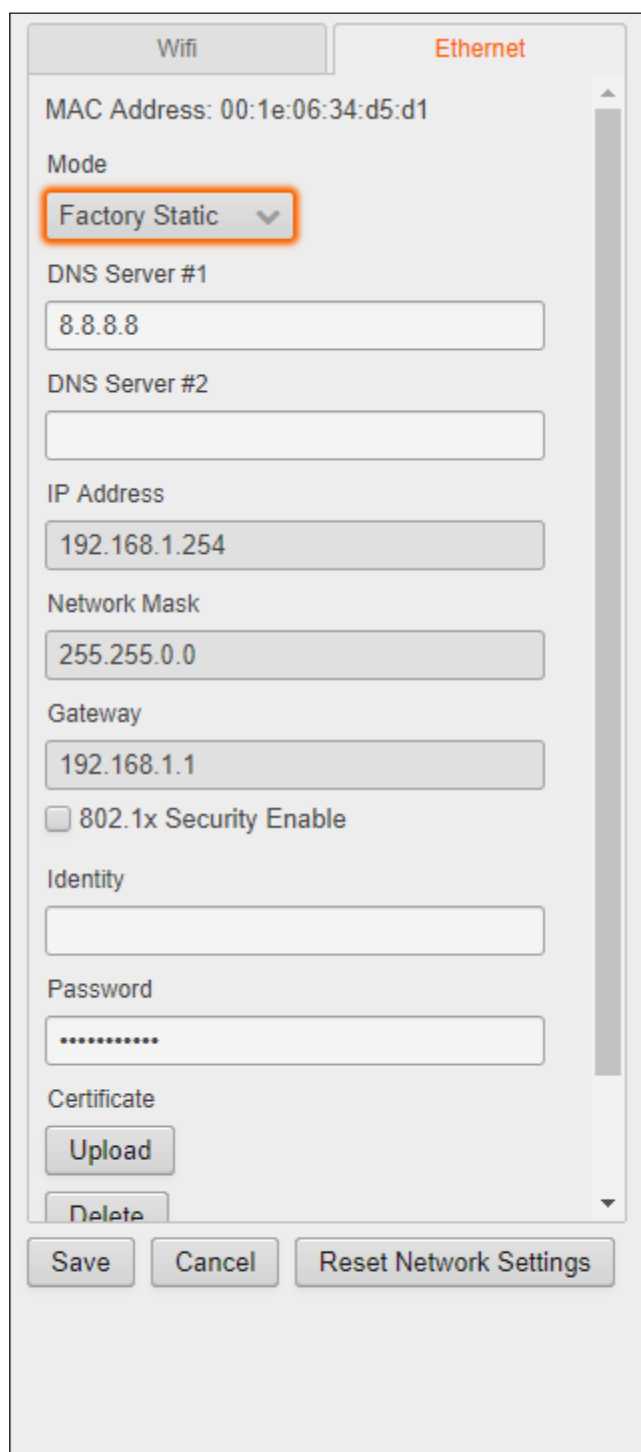

The screenshot shows the 'Ethernet' tab selected. The 'Mode' dropdown is set to 'Factory Static'. The 'IP Address' field is 192.168.1.254, 'Network Mask' is 255.255.0.0, and 'Gateway' is 192.168.1.1. The '802.1x Security Enable' checkbox is unchecked. The 'Identity' and 'Password' fields are empty. The 'Certificate' section has 'Upload' and 'Delete' buttons. At the bottom are 'Save', 'Cancel', and 'Reset Network Settings' buttons.

IP Address

The IP address is set to 192.168.1.254 and cannot be changed.

Network Mask

The subnet mask is set to 255.255.0.0 and cannot be changed.

Gateway

The gateway (router) address is set to 192.168.1.1 and cannot be changed.

802.1x Security Enable

Enables or disables the 802.1x protocol. This feature is applicable to both Wifi and Ethernet. Refer to [802.1X Authentication \(page 57\)](#) for more information.

Identity

Enter the identity for the supplicant device in this field.

Password

Enter the password in this field. Note that this field will always be masked.

Upload

Click this button to upload the digital certificate to the authenticator. Note that the PKCS#12 file (.pfx file) should *not* include a private key.

Delete

Click this button to delete an existing certificate on the authenticator device.

Save

Click this button to accept all changes to the **Ethernet** tab.

Cancel


Resets the Wifi and Ethernet settings to factory-default settings, then displays the Wifi tab.

Reset Network Settings

Click this button to set the wired network settings of the AT-UHD-SW-510W to factory-default.

Connecting to a Wifi Network

1. Select **Connect** from the **Mode** drop-down list.
2. Click the **Pick** button to open the **Pick a Wifi Network** dialog box.

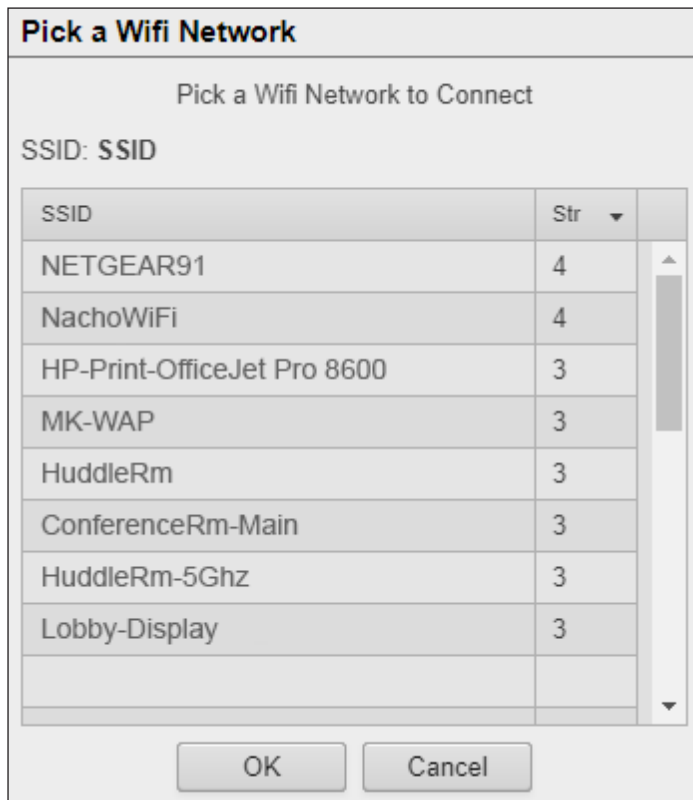


The dialog box titled "Pick a Wifi Network" contains the instruction "Pick a Wifi Network to Connect". Below this, it says "SSID: SSID". A table lists available SSIDs with a "Str" column and a numeric value. A scrollbar is on the right of the table. At the bottom are "OK" and "Cancel" buttons.

SSID	Str
NETGEAR91	4
NachoWiFi	4
HP-Print-OfficeJet Pro 8600	3
MK-WAP	3
HuddleRm	3
ConferenceRm-Main	3
HuddleRm-5Ghz	3
Lobby-Display	3

3. Click on the desired wireless network from the list.
4. Click the **OK** button.

Debug page


Click the **Download Logs** button to download the debug logs. Debug logs are downloaded in a .zip file. Debug logs are used by Atlona Technical Support Engineers to identify functionality issues.

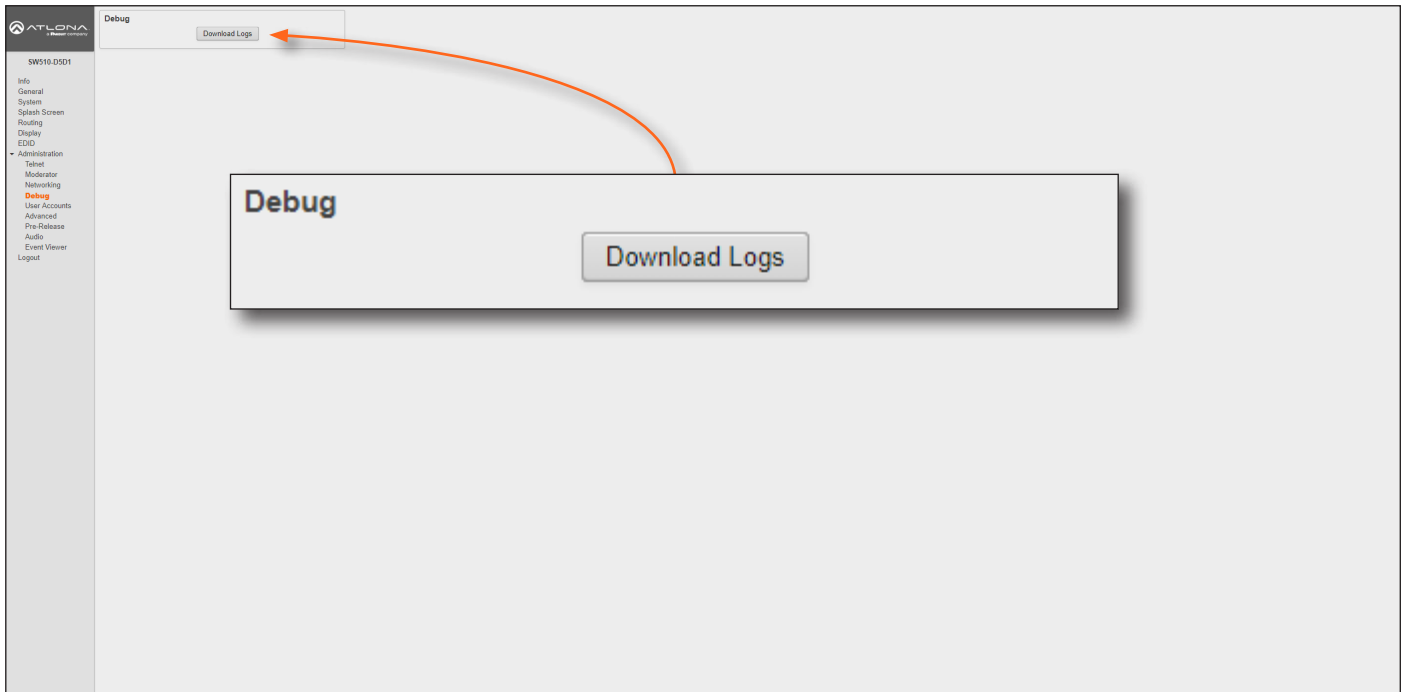


1. Click **Debug** on the side menu bar.
2. Click the **Download Logs** button to display the **Save As** dialog box.
3. Browse to the desired folder where the .zip file will be downloaded.
4. Click the **Save** button on the **Save As** dialog to save the debug log file.

User Accounts page

This page allows the default password to be changed.

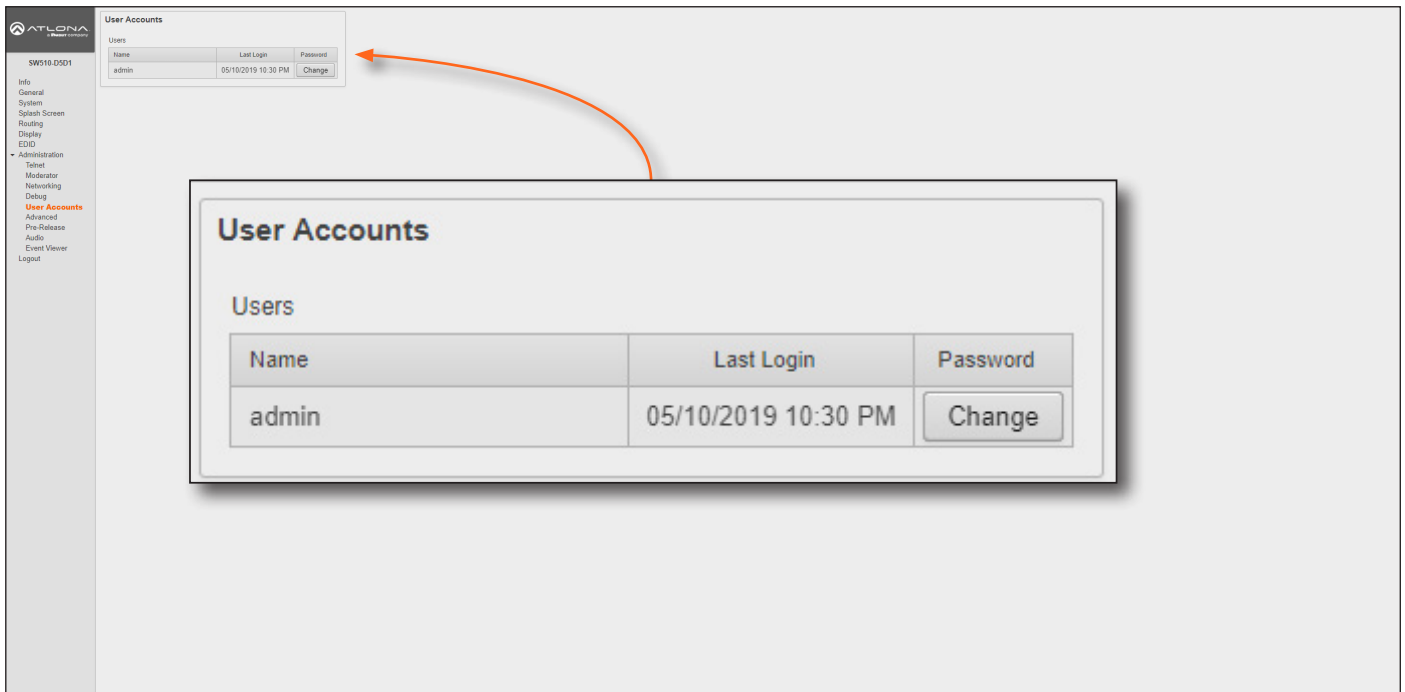

1. Click the **Change** button to display the **Change Password** dialog box.

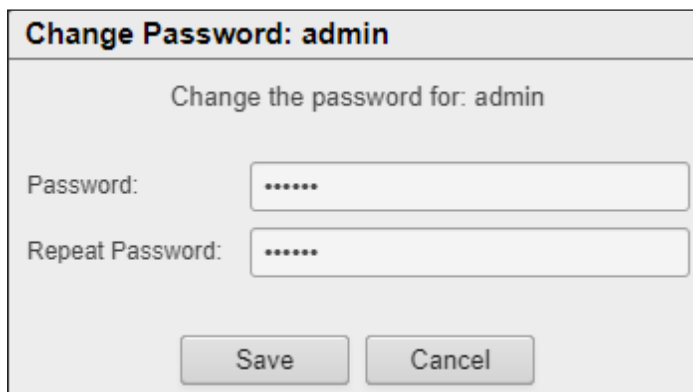


The 'Change Password: admin' dialog box is shown. It has a title bar 'Change Password: admin' and a subtitle 'Change the password for: admin'. It contains two password input fields labeled 'Password:' and 'Repeat Password:', both with masked characters (dots). At the bottom are 'Save' and 'Cancel' buttons.

2. Enter the new password in the **Password** field.
3. Re-enter the same password in the **Repeat Password** field.
4. Click the **Save** button to commit changes or click **Cancel** to abort the process.

Advanced page

Provides options for advanced functionality.

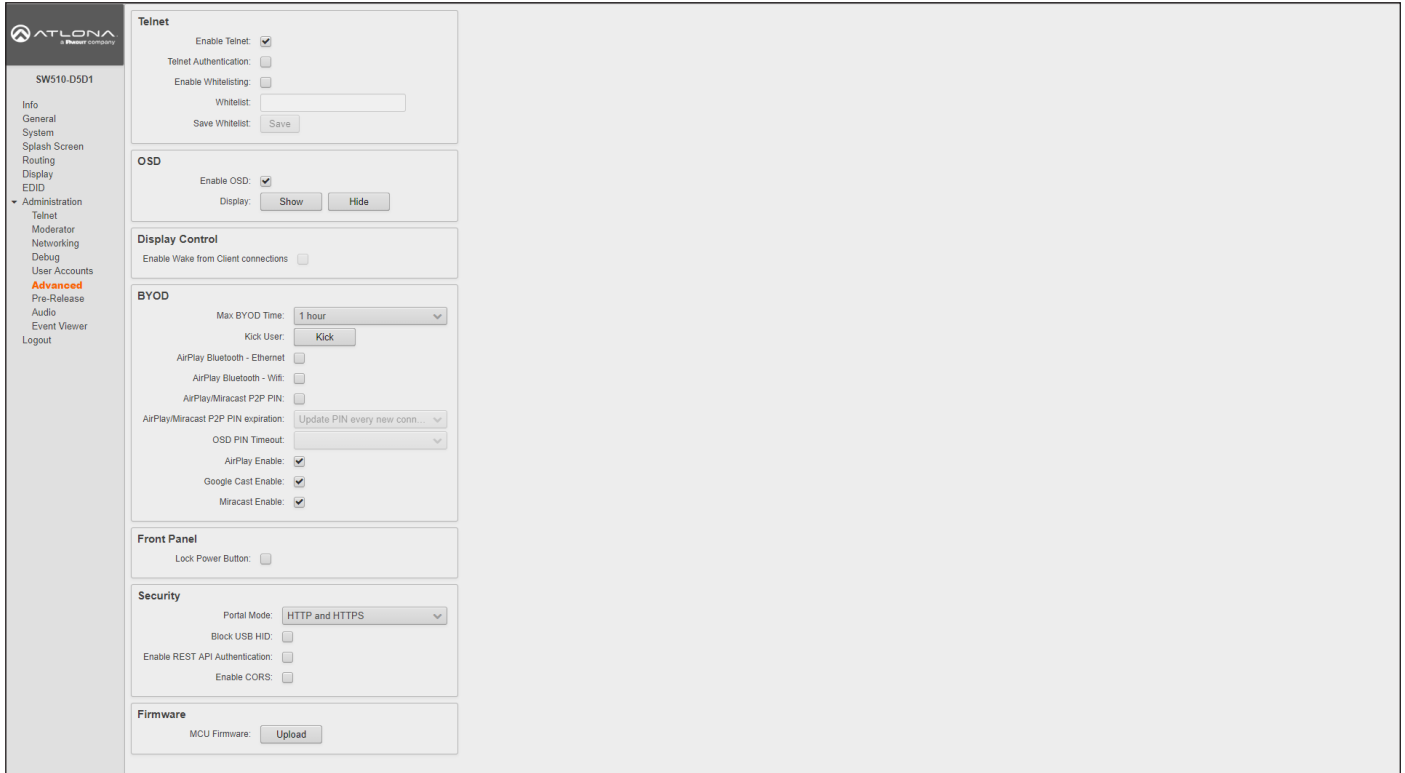

ATLONA
a PANOUT company

SW510-D5D1

- Info
- General
- System
- Splash Screen
- Routing
- Display
- EDID
- Administration
 - Telnet
 - Moderator
 - Networking
 - Debug
 - User Accounts
 - Advanced**
 - Pre-Release
 - Audio
 - Event Viewer
 - Logout

Telnet

Enable Telnet: ☒

Telnet Authentication: ☐

Enable Whitelisting: ☐

Whitelist:

Save Whitelist:

OSD

Enable OSD: ☒

Display:

Display Control

Enable Wake from Client connections: ☐

BYOD

Max BYOD Time:

Kick User:

AirPlay Bluetooth - Ethernet: ☐

AirPlay Bluetooth - Wifi: ☐

AirPlay/Miracast P2P PIN: ☐

AirPlay/Miracast P2P PIN expiration:

OSD PIN Timeout:

AirPlay Enable: ☒

Google Cast Enable: ☒

Miracast Enable: ☒

Front Panel

Lock Power Button: ☐

Security

Portal Mode:

Block USB HID: ☐

Enable REST API Authentication: ☐

Enable CORS: ☐

Firmware

MCU Firmware:

Telnet

Enable Telnet

Click this check box to enable or disable the Telnet protocol for the AT-UHD-SW-510W. When checked, Telnet is enabled.

Telnet Authentication

Click this check box to enable or disable the Telnet authentication. When checked, Telnet is enabled. When this feature is enabled, username and password credentials will be required at the beginning of the Telnet session. The default login credentials are the same default credentials used by the web GUI.

Enable Whitelisting

Click this check box to enable whitelisting. Whitelisting only allows Telnet access to those users within the specified network. Users outside the network will not be granted access.

Whitelist

Enter the network IP address using CIDR notation (e.g. 192.168.11.1/24), in this field. Multiple network IP addresses can be specified with a comma and space: 192.168.11.1/24, 10.0.1.1/24.

Save Whitelist

Click the **Save** button to save the whitelist field.

OSD

Enable OSD

Click this check box to enable or disable OSD control. If this box is checked, then the **Show** and **Hide** buttons can be used to display or hide the OSD.

Show

Click this button to display the On-Screen Display (OSD). The **Enable OSD** option must be checked before this control will affect changes.

Hide

Click this button to hide the On-Screen Display (OSD). The **Enable OSD** option must be checked before this control will affect changes.



Display Control

Enable Wake from Client Connection

Click this check box to power-on the display when a client connects to the AT-UHD-SW-510W in Access Point mode.

BYOD

Max BYOD Time

Click this drop-down list to select the desired time interval before the connected BYOD is automatically disconnected from the AT-UHD-SW-510W.

Kick User

Click this button to disconnect the current BYOD.

Airplay Bluetooth - Ethernet

Click this check box to enable Bluetooth discovery when using an Ethernet connection. Refer to [AirPlay Bluetooth Discovery \(page 49\)](#) for more information.

Airplay Bluetooth - WiFi

Click this check box to enable Bluetooth discovery when using a WiFi connection. Refer to [AirPlay Bluetooth Discovery \(page 49\)](#) for more information.

Airplay/Miracast P2P PIN

Click this check box to allow the ability to add randomized PIN codes when connecting using AirPlay.

Airplay/Miracast P2P PIN expiration

Click this drop-down list to select the time interval before a new PIN code is requested by the system. This drop-down list is only available if the **Airplay/Miracast P2P PIN** check box is checked.

Setting	Description
Update Pin every new connection	A new PIN code is generated each time a device attempts to connect to the AT-UHD-SW-510W.
Update Pin every 15 minutes	A new PIN is generated every 15 minutes, whether or not a connection request is made.
Update Pin every 60 seconds	A new PIN is generated every 60 minutes, whether or not a connection request is made.

OSD Pin Timeout

Click this drop-down list to select the time interval before the PIN code is hidden on the OSD. This drop-down list is only available if the **Airplay/Miracast P2P PIN** check box is checked.

Airplay Enable

Click this check box to enable AirPlay. This option is enabled by default.

Google Cast Enable

Click this check box to enable Googlecast. This option is enabled by default.

Miracast Enable

Click this check box to enable Miracast. This option is enabled by default.

Front Panel (Revision C only)

Lock Power Button

Click check box to enable or disable the locking of the **DISPLAY** button on the front panel. Locking this button will prevent accidental pressing of the **DISPLAY** button and powering-off the unit.

Front Panel (Revision A and B only)

Arrow Buttons

Click this drop-down list to define the functionality of the front-panel arrow buttons. By default this option is set to Volume.

Setting	Description
Volume	Press the up and down arrow buttons to increase or decrease the output volume, respectively.
OSD	The up-arrow button displays the OSD. The down-arrow button hides the OSD.

Lock Power Button

Click check box to enable or disable the locking of the **DISPLAY** button on the front panel. Locking this button will prevent accidental pressing of the **DISPLAY** button and powering-off the unit.

Front Panel

Arrow Buttons: Volume

Lock Power Button: ☐

Security

Portal Mode

Click this drop-down list to select the desired HTTP protocol.

Setting	Description
HTTP and HTTPS	Provides either HTTP or HTTPS connections at the login screen.
HTTPS	Used for secure connections only.

Block USB HID

Deactivates / disables the USB ports on the rear panel of the AT-UHD-SW-510W.

Enable REST API Authentication

Enables or disables REST authentication when using the AT-UHD-SW-510W API. Click this check box to enable the feature.

Enable CORS

Check this box to enable Cross-Origin Resource Sharing (CORS). This allows the AT-UHD-SW-510W to connect with certain servers. CORS is a method which allows restricted resources on a web page to be requested from another domain. Resources can include stylesheets (CSS), scripts, and other embedded elements.


Firmware

MCU Firmware

Check the Upload button to upload the MCU firmware.


Pre-Release page

This page is reserved for future features.

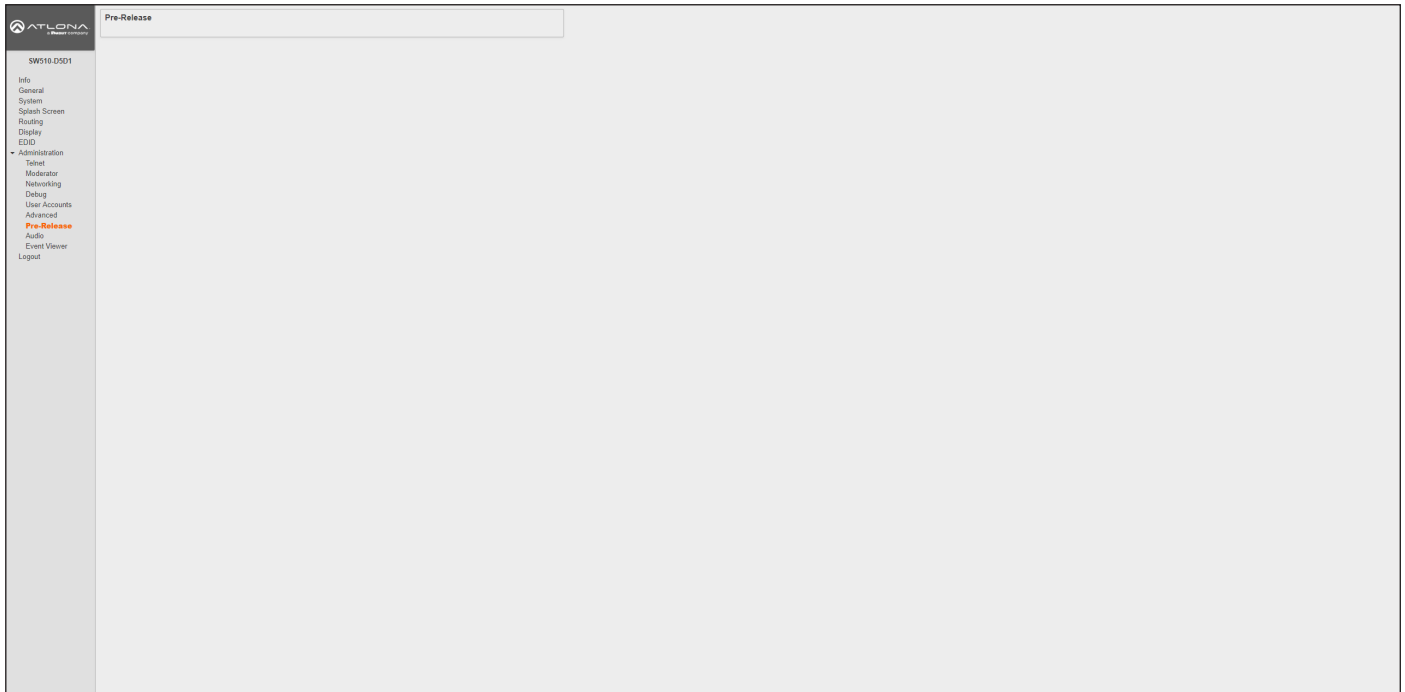

Audio page

Adjusts the output volume.

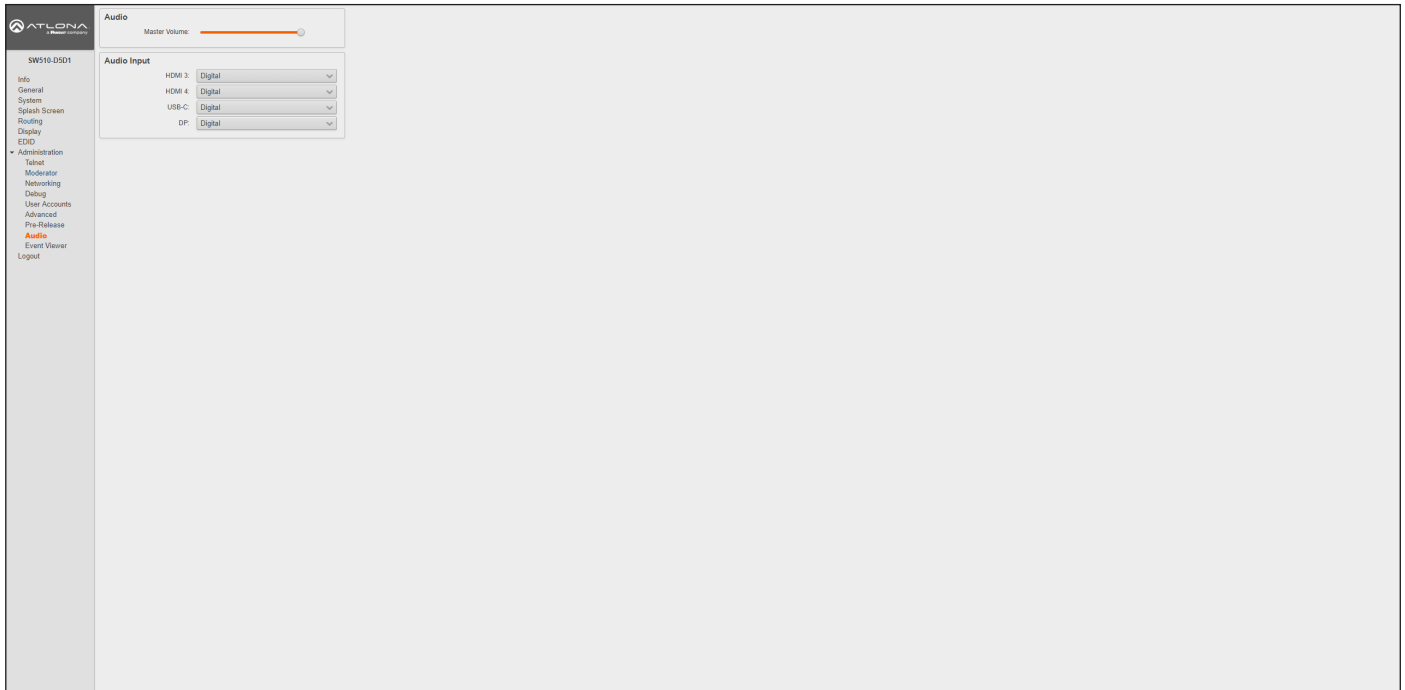

Audio

Click and drag this slider to adjust the output volume. Output is adjustable from -80 to 0 dB.

Audio Input

Click these drop-down lists to select the desired audio input source. If **Analog** is selected, then the analog audio source connected to the 3.5 mm **AUDIO IN** port will be heard on that output. Refer to [Selecting the Audio Input \(page 48\)](#) for more information.

Event Viewer page

Displays a dynamic list of events, returned in JSON format. The image below, shows a list of sample events.

	Event
DWY10-DY01	<pre>[0 - 1557527414891] "event": {"processState": {"value": "true"}}] [1 - 1557527414819] "event": {"log": [{"time": "Activating Media Source Input 0"]}] [2 - 1557527415053] "event": {"timedetecter": {"name": [{"activeInput": 1, "enabled": false}]}} [3 - 1557527415070] "event": {"media": [{"id": "input_byod", "state": false}]} [4 - 1557527415091] "event": {"log": [{"time": "Stopping New Media Event... wkID: input_byod State false Name: VideoFormat LastUpdate:2019-05-10 22:30:15.097178 +0000 UTC mtc+=3.630538001 IppuCommand:Input ODROID MatchInput:5 LEDCommand:SetLED: 4 on stateSync (= {state:0 pama:0}) writerSem:0 readerSem:0 readerCount:0 readerWait:0 lastUpdatesSync (= {state:0 pama:0}) writerSem:0 readerSem:0 readerCount:0 readerWait:0}]] [5 - 1557527415134] "event": {"activatable": {"signals": "0", "activated": "0"}}] [6 - 1557527415473] "event": {"log": [{"time": "Activating BYOD Input when no active signals."}]}} [7 - 1557527415480] "event": {"log": [{"time": "Activating Media Source Input byod"}]} [8 - 1557527415492] "event": {"log": [{"time": "Initializing Active Source in 4 ID: input_byod State false Name: VideoFormat LastUpdate:2019-05-10 22:30:15.472969 +0000 UTC mtc+=4.006317001 IppuCommand:Input ODROID MatchInput:5 LEDCommand:SetLED: 4 on stateSync (= {state:0 pama:0}) writerSem:0 readerSem:0 readerCount:0 readerWait:0 lastUpdatesSync (= {state:0 pama:0}) writerSem:0 readerSem:0 readerCount:0 readerWait:0}]] [9 - 1557527415601] "event": {"log": [{"time": "Activating Media Source Input byod"}]} [10 - 1557527415970] "event": {"activatable": {"signals": "0", "activated": "0"}}] [11 - 1557527415993] "event": {"activatable": {"signals": "0", "activated": "0"}}] [12 - 1557527416001] "event": {"log": [{"time": "Display Powered On"}]}} [13 - 1557527413491] "event": {"processState": {"value": "true"}}] [14 - 1557527414819] "event": {"log": [{"time": "Activating Media Source Input 0"]}] [15 - 1557527416053] "event": {"timedetecter": {"name": [{"activeInput": 1, "enabled": false}]}} [16 - 1557527415070] "event": {"media": [{"id": "input_byod", "state": false}]} [17 - 1557527415091] "event": {"log": [{"time": "Stopping New Media Event... wkID: input_byod State false Name: VideoFormat LastUpdate:2019-05-10 22:30:15.097178 +0000 UTC mtc+=3.630538001 IppuCommand:Input ODROID MatchInput:5 LEDCommand:SetLED: 4 on stateSync (= {state:0 pama:0}) writerSem:0 readerSem:0 readerCount:0 readerWait:0 lastUpdatesSync (= {state:0 pama:0}) writerSem:0 readerSem:0 readerCount:0 readerWait:0}]] [18 - 1557527415134] "event": {"activatable": {"signals": "0", "activated": "0"}}] [19 - 1557527415473] "event": {"log": [{"time": "Activating BYOD Input when no active signals."}]}} [20 - 1557527415480] "event": {"log": [{"time": "Activating Media Source Input byod"}]} [21 - 1557527415492] "event": {"log": [{"time": "Initializing Active Source in 4 ID: input_byod State false Name: VideoFormat LastUpdate:2019-05-10 22:30:15.472969 +0000 UTC mtc+=4.006317001 IppuCommand:Input ODROID MatchInput:5 LEDCommand:SetLED: 4 on stateSync (= {state:0 pama:0}) writerSem:0 readerSem:0 readerCount:0 readerWait:0 lastUpdatesSync (= {state:0 pama:0}) writerSem:0 readerSem:0 readerCount:0 readerWait:0}]] [22 - 1557527415970] "event": {"activatable": {"signals": "0", "activated": "0"}}] [23 - 1557527415993] "event": {"activatable": {"signals": "0", "activated": "0"}}] [24 - 1557527416001] "event": {"log": [{"time": "Display Powered On"}]}}</pre>

Appendix

Updating the Firmware

The following procedure outlines the firmware update procedure for the AT-UHD-SW-510W. This product can only be updated through the web GUI.



WARNING: Do not physically reboot the system during the update process. Doing so may cause firmware file corruption and/or system instability.

Requirements:

- AT-UHD-SW-510W
- MCU and Master firmware files

Updating from Version 2.0.0 or later



IMPORTANT: This section applies *ONLY* to upgrading from version 2.0.0 or later. The AT-UHD-SW-510W **must** be running version 2.0.0 in order to upgrade to the latest version.

If the AT-UHD-SW-510W is running an earlier version of firmware refer to **Updating from 1.2.1-5 or earlier**, on the next page.



IMPORTANT: Note that firmware version 2.4.0 has a few very important system updates which will result in a longer update cycle (up to 10 minutes) and the AT-UHD-SW-510W may reboot twice during update process.

1. Download the latest firmware files from <https://atlona.com/product/at-uhd-sw-510w/>.
2. Connect the computer, containing the firmware files, to the same network as the AT-UHD-SW-510W.
3. Press and release the **IP** button on the front panel. The IP address of the AT-UHD-SW-510W will appear on the connected display.




NOTE: If using hardware revision A or B, simultaneously press and hold the **INPUT** and **A** buttons on the front panel for five seconds, then release. The IP address will appear on the connected display.


4. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
5. The **Login** screen will be displayed. Enter the login credentials. The default username and password are listed below:

User	admin
Password	Atlona


6. Click **System** on the side menu bar.
7. Click the **Upload** button and select the SW510-[version].bin file. Refer to the illustration on the next page.

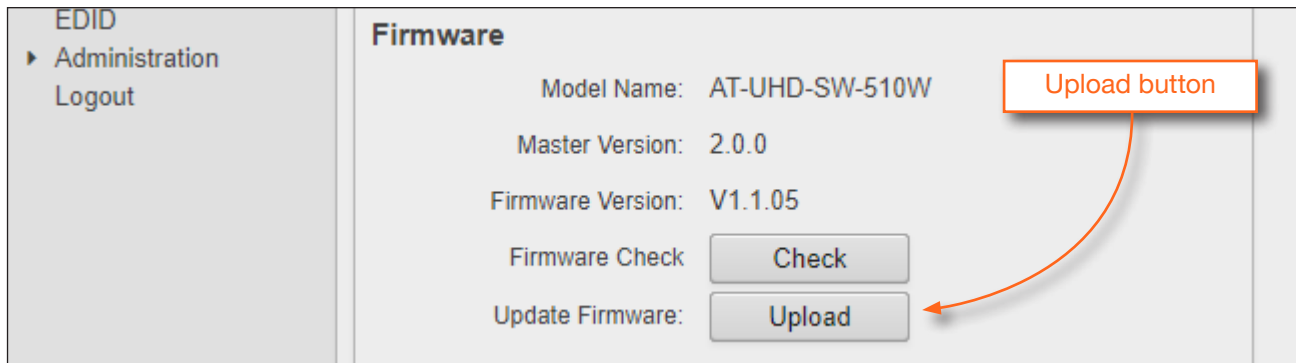

8. During the update process, the following message will appear in the upper-right corner of the screen. Note that the update process may take **up to five minutes to complete**. The unit will automatically reboot as part of the update process.



9. After the firmware process has completed, the AT-UHD-SW-510W will automatically reboot and the following message will appear at the top of the screen:



10. Click the message or press the ESC key to return to the **Login** screen. Enter the login credentials.
11. Click **Info** on the side menu bar and check the presence of the **Firmware Version** section. It should read V1.1.05.

If there is no **Firmware Version** section, then do the following:

- Click **System** on the side menu bar.
- Click the **Shutdown** button.
- Wait one minute, then power-on the unit.



IMPORTANT: The following steps are optional and are only required if the AT-UHD-SW-510W is experiencing the issues listed below. The following process will also require a “hard reboot”.

12. If any of the following issues are being experienced, continue with steps 13 - 15. Otherwise, the firmware update process is complete.

- Audio levels are not being saved after system reboot.
- When using a Sony XBR-900E/F, the display will always switch to external speakers instead of the internal speakers, when the AT-UHD-SW-510W is connected.

13. Click **Administration** > **Advanced** from the menu on the left side of the screen, click the MCU Firmware **Upload** button, and select the AT-UHD-510-SW-V1110.bin file.
14. Wait until the MCU update completes. During this time, the web interface will be inaccessible.
15. Once the unit is accessible, log in to the web interface using the required credentials.
16. Perform a “hard boot” of the unit by disconnecting and reconnecting the power cord from the unit.

12. After the reboot process has completed, enter the login credentials.
13. The MCU firmware update is complete.

Updating from Version 1.2.1-5 (or earlier)

1. Download the firmware file from <https://atlona.com/product/at-uhd-sw-510w/>.
2. Connect the computer, containing the firmware files, to the same network as the AT-UHD-SW-510W.
3. Press and release the IP button on the front panel. The IP address will appear on the connected display.




NOTE: If using hardware revision A or B, simultaneously press and hold the **INPUT** and **A** buttons on the front panel for five seconds, then release. The IP address will appear on the connected display.

4. Launch a web browser and enter the IP address of the AT-UHD-SW-510W in the address bar.
5. The **Login** screen will be displayed. Enter the login credentials. The default username and password are listed below:


User	admin
Password	Atlona

6. Click **System** on the side menu bar.
7. Click the **Upload** button next to **Master Firmware** and select the SW-510W_MASTER_2.0.0-A.war file.

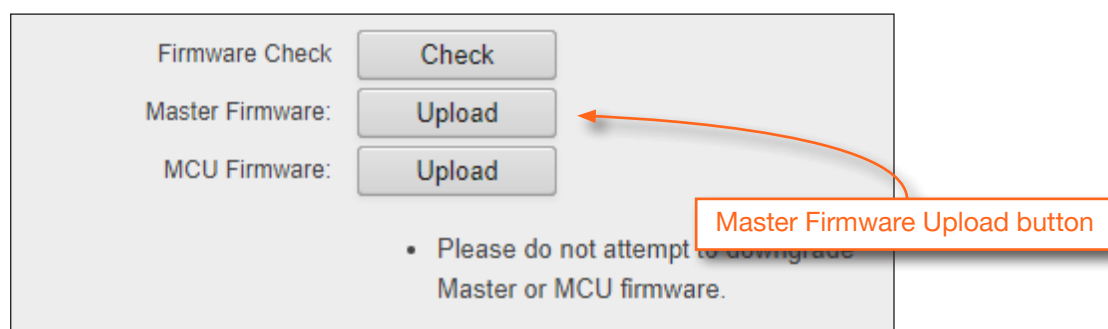

WARNING: Do not physically reboot the system during the update process. Doing so may cause firmware file corruption and/or system instability.

8. During the update process, the following message will appear in the upper-right corner of the screen. Note that the update process may take **up to five minutes to complete**. The unit automatically reboots.




NOTE: Depending upon the currently-loaded firmware, a “hard reboot” may be required in order to reestablish communication with the webGUI. To perform a hard reboot, disconnect the power cord, wait 10 seconds, then reconnect the power.

9. The following message will appear at the top of the screen. Click the message or press the ESC key to return to the **Login** screen. Enter the login credentials.

Communication problem Take note of any unsaved data, and click here or press ESC to continue.

10. Click **Info** on the side menu bar and check the **Firmware Version**.

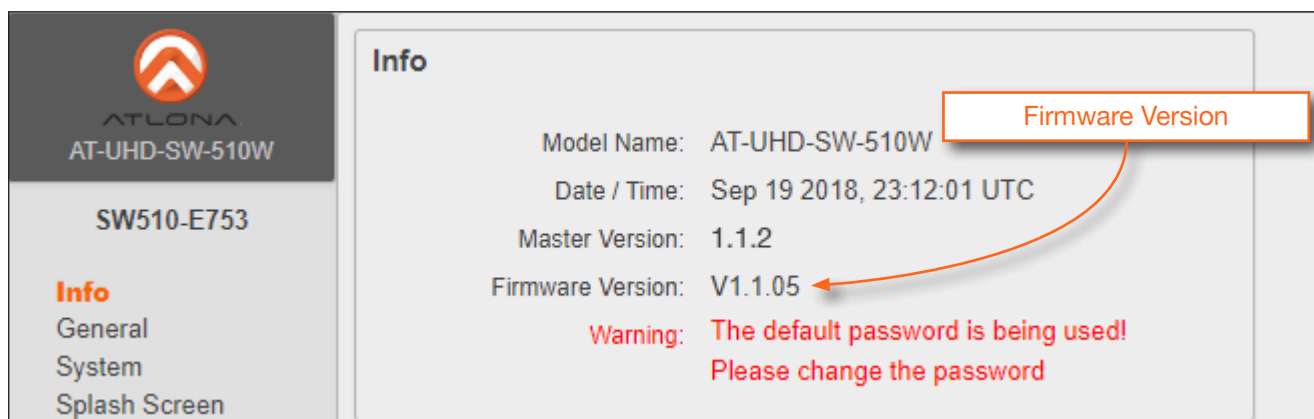

Info

Model Name: AT-UHD-SW-510W

Date / Time: Sep 19 2018, 23:12:01 UTC

Master Version: 1.1.2


Firmware Version: V1.1.05

Warning: The default password is being used!
Please change the password

- If the Firmware Version reads **1.1.05**, then the firmware update process is complete. No additional steps are required.
- If the Firmware Version is an *earlier* firmware, then continue with Step 11.

11. Click **System** on the side menu bar.

12. Click the **Upload** button, next to **Update Firmware** and select the SW510-[version].bin file.

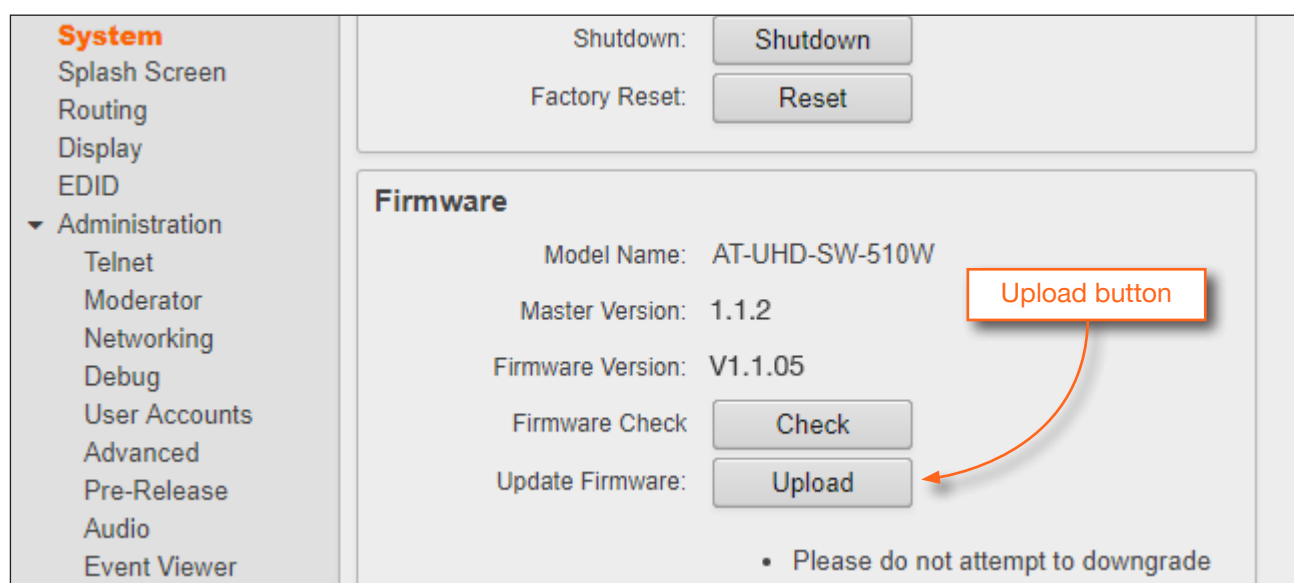

System

Shutdown: **Shutdown**

Factory Reset: **Reset**

Firmware

Model Name: AT-UHD-SW-510W

Master Version: 1.1.2

Firmware Version: V1.1.05

Firmware Check: **Check**


Update Firmware: **Upload**

• Please do not attempt to downgrade




WARNING: Do not physically reboot the system during the update process. Doing so may cause firmware file corruption and/or system instability.


13. During the update process, the following message will appear in the upper-right corner of the screen. Note that the update process may take **up to five minutes to complete**. The unit automatically reboots.



14. After the firmware process has completed, the AT-UHD-SW-510W will automatically reboot and the following message will appear at the top of the screen:



15. Click the message or press the ESC key to return to the **Login** screen. Enter the login credentials.
16. Click **Info** on the side menu bar and check the presence of the **Firmware Version** section. It should read V1.1.05.

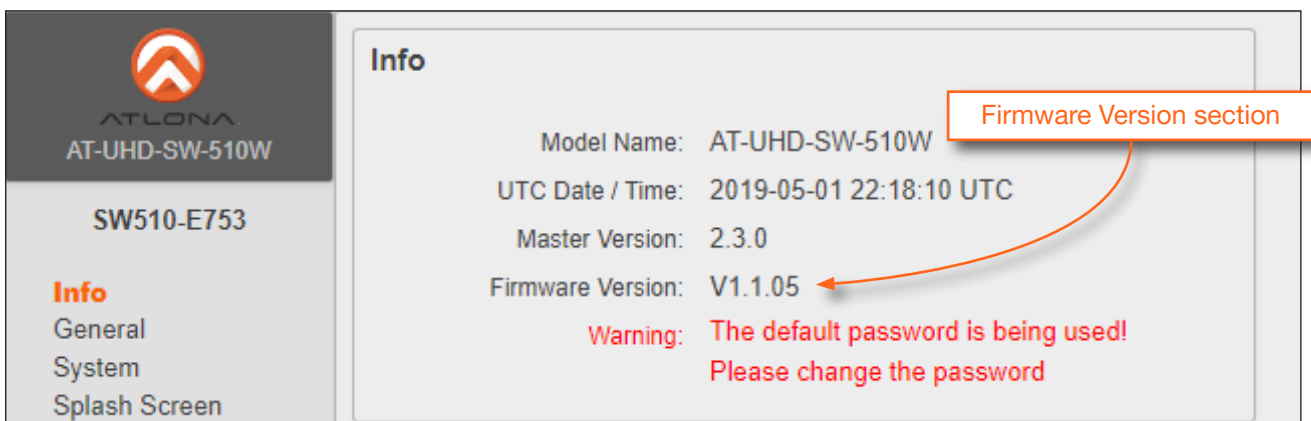

17. If there is no **Firmware Version** section, then do the following:

- Click **System** on the side menu bar.
- Click the **Shutdown** button.
- Wait one minute, then power-on the unit.

18. The firmware update process is complete.

Default Settings

The following tables list the factory-default settings, as defined in the web GUI, for the AT-UHD-SW-510W.

Web GUI Page	Setting	Default Value
Login	Username Password	admin Atlona
General	Name	SW510-{id}
Splash Screen	Type Show Meta Data Show Panel Y Offset Title Subtitle Column Title Column #1 Show Second Column Column #2 Enable Image Rotation Image Rotation Time	Default Disabled Enabled 0 Welcome {name} : {version} : [{eth0}] To begin your presentation: Connect wired: Connect the HDMI, USB-C, or DisplayPort cable at the table to your device Enabled Connect wirelessly: Search for SW510-xxxx on your AirPlay, GoogleCast (Google Home App), or Miracast device. Disabled 5 minute
Routing	Fallback Delay Matrix Switch Matrix Mode HDMI Source Matrix Mode HDBaseT Source	5000 (ms) Disabled BYOD BYOD
Display	Autoswitch Display Auto Power Enable Wake from Clients Enable Time Display Control Lamp Cool Down Timer Display Warm Up Timer Auto Power Off Timer Control Type Volume Mute Enable Momentary Relay Relay Pulse Duration Enable Power Off Enable Power On	Enabled Disabled Disabled Disabled 30 seconds 30 seconds 1 minute CEC Audio Out Enabled 1 seconds Disabled Disabled
EDID	USB-C DP HDMI 3 HDMI 4	1920 x 1080p 2CH 1920 x 1080p 2CH 1920 x 1080p 2CH 1920 x 1080p 2CH
Administration > Moderator	Enable	Disabled
Audio	Master Volume Audio Input: HDMI 3 HDMI 4 USB-C DP	0 (dB) Digital Digital Digital Digital

Web GUI Page	Setting	Default Value
Administration > Networking	Wifi	Disabled
	Firewall Mode	None
	No Password in AP Mode	Disabled
	Hide Password on OSD	Disabled
	Rotate WiFi Password	Disabled
	Password Rotation Interval	Disabled
	Channel (Access Point mode)	6
	DNS Mode	Use default DNS Servers
	DNS Server #1	--
	DNS Server #2	--
Administration > Advanced	Mode (Ethernet)	DHCP
	Enable Telnet	Enabled
	Telnet Authentication	Disabled
	Enable Whitelisting	Disabled
	Enable OSD	Enabled
	Enable Wake from Client...	Disabled
	Max BYOD Time	1 hour
	AirPlay - Bluetooth	Disabled
	AirPlay/Miracast P2P PIN	Disabled
	P2P Pin expiration	Update Pin every new connection
	OSD Pin Timeout	--
	AirPlay Enable	Enabled
	Googlecast Enable	Enabled
	Miracast Enable	Enabled
	Lock Power Button	Disabled
	Portal Mode	HTTP and HTTPS
	Block USB HID	Disabled
	Enable REST API Authentication	Disabled
	Enable CORS	Disabled
Administration > Audio	Master Volume	Maximum
	HDMI 3	Digital
	HDMI 4	Digital
	USB-C	Digital
	DP	Digital

Mounting Instructions

The AT-UHD-SW-510W can be mounted in different ways, based on the number of units that are being installed. The AT-UHD-SW-510W can be mounted in a rack or on/under any flat surface.



NOTE: AT-UHD-510W-RM rack ears are sold separately. Contact Atlona for more information.


Single-unit Rack Installation

1. Attach the included small rack ear (sold separately) to one side of the AT-UHD-SW-510W, using the included screws.
2. Attach the included longer rack ear (sold separately) to the opposite side of the AT-UHD-SW-510W using the included screws.



Dual-unit Rack Installation

1. Turn both units upside-down on a flat surface, next to each other, as shown.
2. Position the included mounting plates over the holes on the bottom of the enclosure.
When attaching mounting plates, the countersink bevels on the mounting plate should face upward.

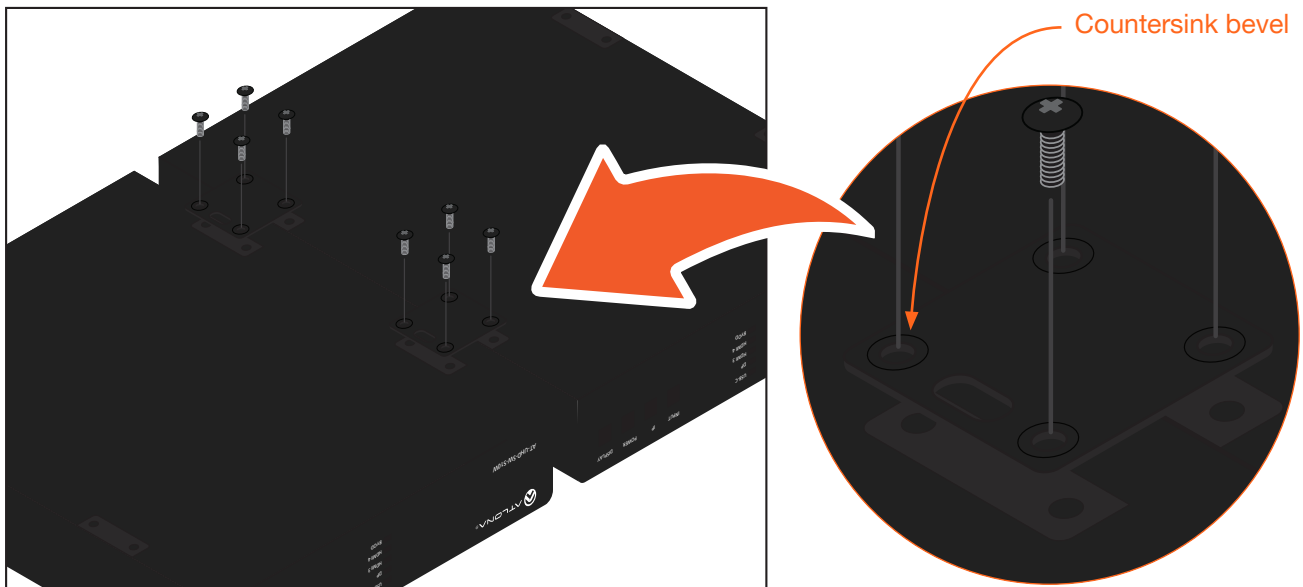


3. Turn the attached units over and install the rack ears (sold separately) to one side of each enclosure using the included screws.



Flat Surface

1. Turn the unit upside down, on a flat surface.
2. Position the included mounting plates over the pre-drilled holes on the bottom of the enclosure. When attaching mounting plates, the countersink bevels on the mounting plates should face upward.

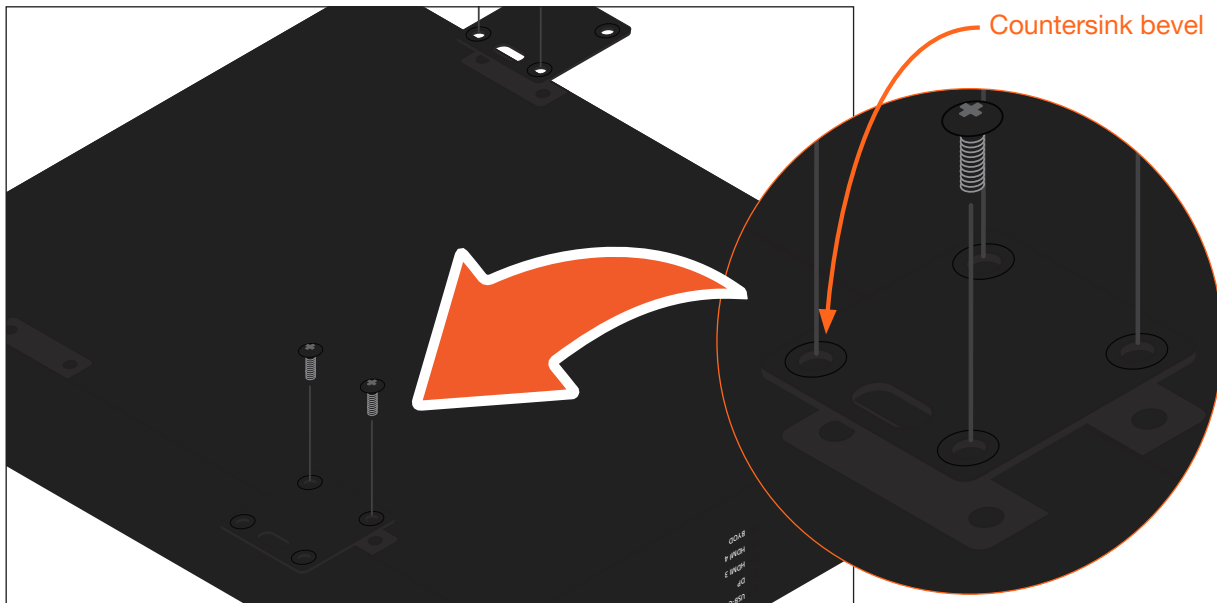

3. Mount the unit using the circular holes, on each mounting plate. If using a drywall surface, a #6 drywall screw is recommended. Mounting screws are not included.



NOTE: The unit can also be mounted under a flat surface, such as a table, by turning the unit upside down.

Specifications

Connectors, Controls, and Indicators	
HDMI IN	2 - Type A, 19-pin female
HDMI OUT	1 - Type A, 19-pin female
DP IN	1 - 20-pin female
USB-C IN	1 - USB Type-C v3.1, 24-pin female, AV input (Alternate Mode)
USB	3 - USB 2.0 Type A for Wi-Fi® antenna modules
RS-232	1 - 3-pin captive screw (bidirectional)
RELAY	1 - 3-pin captive screw, normally open (NO), with adjustable Toggle and Pulse modes Electrical rating: 48 V @ 1 A
TRIGGER	1 - 4-pin captive screw Electrical rating: 30 V @ 1 A (max.)
AUDIO IN	1 - 3.5 mm, unbalanced 2-channel
AUDIO OUT	1 - 5-pin captive screw, balanced / unbalanced 2-channel
HDBaseT OUT	1 - RJ45
LAN	1 - RJ45
DC 24V	1 - 4-pin, locking
Control Buttons: INPUT, IP, POWER, DISPLAY	4 - momentary, tact-type
Input Indicators: USB-C, DP, HDMI 3, HDMI 4, BYOD	5 - LED, blue

Video	
UHD/HD/SD	4096x2160@60/30/25/24Hz*, 3840x2160@60/30/25/24Hz*, 1080p@60/59.9/50/30/29.97/25/24/23.98Hz, 1080i@60/59.94/50Hz, 720p@60/59.94/50Hz, 576p@50Hz, 576i@50Hz, 480p@60/59.96Hz, 480i@60Hz
VESA	2560x1600, 2048x1536, 1920x1200, 1680x1050, 1600x1200, 1440x900, 1400x1050, 1280x1024, 1280x800, 1366x768, 1360x768, 1152x864, 1024x768, 800x600, 640x480
USB-C	Up to 4K/UHD @ 60Hz for devices supporting USB-C Alternate Mode video output
Wireless	Up to 1080p @ 30Hz 4:2:0 (up to 1080p @ 60Hz with Miracast™); dependent on wireless signal quality
Color Space	YUV, RGB
Chroma Subsampling	4:4:4, 4:2:2, 4:2:0
Wireless Chroma Subsampling	4:2:0
Color Depth	8-bit, 10-bit, 12-bit
HDR †	HDR10 and Dolby® Vision™ @ 60Hz; HDMI or DisplayPort inputs only

* HDMI output supports 4K/UHD @ 50 or 60Hz with 4:4:4 chroma sampling. HDBaseT output supports 4K/UHD @ 50 or 60Hz with 4:2:0 chroma subsampling. † HDR not supported for HDBaseT output.

Audio	
Pass-Through Formats	PCM, Dolby® Digital, Dolby Digital Plus™, Dolby TrueHD, Dolby Atmos®, DTS® Digital Surround™, DTS-HD Master Audio™, and DTS:X®
Sample Rate	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
Bit Rate	24 Mbits/s max

Resolution / Distance	4K/UHD - Feet / Meters		1080p - Feet / Meters	
HDMI IN/OUT	15	5	30	10
CAT5e/6	230	70	330	100
CAT6a/7	330	100	330	100

Signal	
Maximum TMDS Clock	600 MHz (300 MHz over HDBaseT)
HDMI	HDMI 2.0*
HDBaseT	10 Gbps †
CEC Support	Yes
HDCP	2.2 (wired device connections, only)

* 18 Gbps supported for HDMI 2.0 output. † HDBaseT output limited to 10 Gbps.

USB	
USB-C Power	Up to 60 W / 3 A at 20 V
USB-C Device Charging Capability	Up to 20 V, 3 A Output: 60 W @ 20 V, 36 W @ 12 V, 15 W @ 5 V

IP	
Protocols	DHCP, HTTP, Telnet, SSH, TCP/IP, UDP
Security	HTTPS, SSL, TLS
Authentication	IEEE 802.1x
Ethernet Speed	10/100/1000 Mbps
Addressing	DHCP, static
Wi-Fi	IEEE 802.11n/ac 2.5 GHz / 5 GHz
Wi-Fi Protocols	WPA, WPA2, PSK
Antenna	2 included

Temperature	Fahrenheit	Celsius
Operating	32 to 122	0 to 50
Storage	-4 to 140	-20 to 60
Humidity (RH)	20% to 90%, non-condensing	

Power	
Consumption (full load)	121 W
Idle Consumption	35 - 40 W
Supply	Input: 100 - 240 V AC, 50/60 Hz Output: 24 V / 5 A DC

Dimensions	Inches	Millimeters
H x W x D (w/ feet)	1.77 x 8.46 x 10.19	48 x 215 x 259
H x W x D (w/o feet)	1.73 x 8.46 x 10.00	44 x 215 x 254

Weight	Pounds	Kilograms
Device	3.70	1.68

Certification	
Device	CE, FCC, UL

Index

A

- AirPlay** 38
 - bluetooth discovery 49
 - PIN codes 50
- Audio** 12
 - changing the audio source 48

B

- Bluetooth**
 - discovery 49
- Boot sequence** 19

C

- Casting**
 - Chromecast 42
 - iOS devices 38
 - Miracast 41
 - OS X 39
 - using moderator mode 53

- CEC**
 - compatibility 78

- Configuration**
 - IP
 - auto IP mode 18
 - getting the IP address 16
 - setting the IP address 17
 - switching the IP mode 16
 - wireless
 - Access Point Mode 32
 - Connect Mode 35, 89, 94
 - Firewall Mode 34, 88

- Connection**
 - diagram 15
 - instructions 14

- Contents**
 - package 9
 - table of 7

- CORS** 100
- Customer support** 3

D

- Default settings** 109
- Description**
 - front / rear panel 10
- DHCP** 90

E

- EDID**
 - presets 83

F

- Factory-defaults**
 - resetting to 18
- Factory Static IP mode** 90, 93
- FCC statement** 6
- Features** 9

I

- Index** 116
- Input**
 - selecting 20
- Installation** 12
- IP**
 - configuration 16
 - auto IP 18
 - DHCP 16
 - static IP 16

M

- Miracast**
 - configuring 41
- Moderator mode** 53
- Mounting instructions** 111

O

- Operating notes** 3

P

- Panel descriptions** 10
- Password**
 - default, web GUI 68
- Power**
 - connector 13

R

- Resetting**
 - to factory-defaults 18
- RS-232**
 - cable assembly 61
 - control mode 65
 - pass-through mode 62

S

- Safety information** 6
- Settings**
 - default 109
- Specifications** 114
- Splash screens**
 - changing the image 27

- customizing 22
- dynamic background 27
- HTML 29
- layout 22
- metadata 24
- resetting images 28, 31
- uploading 28
- Wireless password 26

- Standby screen** 19
- Static IP** 90

T

- Time**
 - Universal Coordinated Time. See UTC
- Trigger**
 - configuring, web GUI 79
 - wiring 12

V

- Video teleconferencing system** 46

W

- Warranty** 4
- Web GUI**
 - Advanced page 97
 - Audio page 102
 - Debug page 95
 - Display page 77
 - EDID page 83
 - Event page 103
 - General page 71
 - Images page 75
 - Info page 70
 - introduction to 68
 - Networking page 86
 - Splash Screen page 74
 - System page 72
 - Telnet page 84

