

Stereo / Mono Audio Power Amplifier 120 Watts



Version Information

Version	Release Date	Notes
1	Apr 2018	Initial release
2	Jul 2019	Updated for 1.0.14 firmware: Added hibernation timer, input auto switching, analog input signal detection, other internal fixes. Refer to Release Notes for more information.

Welcome to Atlona!

Thank you for purchasing this Atlona product. We hope you enjoy it and will take an extra few moments to register your new purchase.

Registration only takes a few minutes and protects this product against theft or loss. In addition, you will receive notifications of product updates and firmware. Atlona product registration is voluntary and failure to register will not affect the product warranty.

To register your product, go to <http://www.atlona.com/registration>

Sales, Marketing, and Customer Support

Main Office

Atlona Incorporated
70 Daggett Drive
San Jose, CA 95134
United States

Office: +1.877.536.3976 (US Toll-free)
Office: +1.408.962.0515 (US/International)

Sales and Customer Service Hours
Monday - Friday: 6:00 a.m. - 4:30 p.m. (PST)

<http://www.atlona.com/>

International Headquarters

Atlona International AG
Ringstrasse 15a
8600 Dübendorf
Switzerland

Office: +41 43 508 4321

Sales and Customer Service Hours
Monday - Friday: 09:00 - 17:00 (UTC +1)

Operating Notes



IMPORTANT: Visit <http://www.atlona.com/product/AT-GAIN-120> for the latest firmware updates and User Manual.



IMPORTANT: The input signal detection feature is *only* available on hardware revision B (or later). The hardware revision can be found on the sticker, on the bottom of the AT-GAIN-120.



Atlona, Inc. (“Atlona”) Limited Product Warranty

Coverage

Atlona warrants its products will substantially perform to their published specifications and will be free from defects in materials and workmanship under normal use, conditions and service.

Under its Limited Product Warranty, Atlona, at its sole discretion, will either:

- repair or facilitate the repair of defective products within a reasonable period of time, restore products to their proper operating condition and return defective products free of any charge for necessary parts, labor and shipping.

OR

- replace and return, free of charge, any defective products with direct replacement or with similar products deemed by Atlona to perform substantially the same function as the original products.

OR

- refund the pro-rated value based on the remaining term of the warranty period, not to exceed MSRP, in cases where products are beyond repair and/or no direct or substantially similar replacement products exist.

Repair, replacement or refund of Atlona products is the purchaser's exclusive remedy and Atlona liability does not extend to any other damages, incidental, consequential or otherwise.

This Limited Product Warranty extends to the original end-user purchaser of Atlona products and is non-transferrable to any subsequent purchaser(s) or owner(s) of these products.

Coverage Periods

Atlona Limited Product Warranty Period begins on the date of purchase by the end-purchaser. The date contained on the end-purchaser's sales or delivery receipt is the proof purchase date.

Limited Product Warranty Terms – New Products

- 10 years from proof of purchase date for hardware/electronics products purchased on or after June 1, 2013.
- 3 years from proof of purchase date for hardware/electronics products purchased before June 1, 2013.
- Lifetime Limited Product Warranty for all cable products.

Limited Product Warranty Terms – Refurbished (B-Stock) Products

- 3 years from proof of purchase date for all Refurbished (B-Stock) hardware and electronic products purchased on or after June 1, 2013.

Remedy

Atlona recommends that end-purchasers contact their authorized Atlona dealer or reseller from whom they purchased their products. Atlona can also be contacted directly. Visit www.atlona.com for Atlona's contact information and hours of operation. Atlona requires that a dated sales or delivery receipt from an authorized dealer, reseller or end-purchaser is provided before Atlona extends its warranty services. Additionally, a return merchandise authorization (RMA) and/or case number, is required to be obtained from Atlona in advance of returns.

Atlona requires that products returned are properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization or case number will be refused. Atlona, at its sole discretion, reserves the right to reject any products received without advanced authorization. Authorizations can be requested by calling 1-877-536-3976 (US toll free) or 1-408-962-0515 (US/international) or via Atlona's website at www.atlona.com.

Exclusions

This Limited Product Warranty excludes:

- Damage, deterioration or malfunction caused by any alteration, modification, improper use, neglect, improper packaging or shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature.

Atlona, Inc. (“Atlona”) Limited Product Warranty

- Damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Atlona to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product.
- Equipment enclosures, cables, power supplies, batteries, LCD displays, and any accessories used in conjunction with the product(s).
- Products purchased from unauthorized distributors, dealers, resellers, auction websites and similar unauthorized channels of distribution.

Disclaimers

This Limited Product Warranty does not imply that the electronic components contained within Atlona’s products will not become obsolete nor does it imply Atlona products or their electronic components will remain compatible with any other current product, technology or any future products or technologies in which Atlona’s products may be used in conjunction with. Atlona, at its sole discretion, reserves the right not to extend its warranty offering in instances arising outside its normal course of business including, but not limited to, damage inflicted to its products from acts of god.

Limitation on Liability

The maximum liability of Atlona under this limited product warranty shall not exceed the original Atlona MSRP for its products. To the maximum extent permitted by law, Atlona is not responsible for the direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or under any other legal theory. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

To the maximum extent permitted by law, this limited product warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral or written, express or implied. To the maximum extent permitted by law, Atlona specifically disclaims all implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose. If Atlona cannot lawfully disclaim or exclude implied warranties under applicable law, then all implied warranties covering its products including warranties of merchantability and fitness for a particular purpose, shall provide to its products under applicable law. If any product to which this limited warranty applies is a “Consumer Product” under the Magnuson-Moss Warranty Act (15 U.S.C.A. §2301, ET SEQ.) or other applicable law, the foregoing disclaimer of implied warranties shall not apply, and all implied warranties on its products, including warranties of merchantability and fitness for the particular purpose, shall apply as provided under applicable law.

Other Conditions

Atlona’s Limited Product Warranty offering gives legal rights, and other rights may apply and vary from country to country or state to state. This limited warranty is void if (i) the label bearing the serial number of products have been removed or defaced, (ii) products are not purchased from an authorized Atlona dealer or reseller. A comprehensive list of Atlona’s authorized distributors, dealers and resellers can be found at www.atlona.com.

Important Safety Information



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Das Symbol des Blitzzeichens innerhalb eines gleichseitigen Dreiecks soll den Benutzer davor warnen, dass innerhalb des Gehäuses gefährlich hohe Spannung an berührbaren Teilen anliegt. Die Spannung ist hoch genug um bei Berührung zu einem gefährlichen elektrischen Schlag zu führen!

三角形內帶有箭頭符號的閃電，旨意在提醒用戶產品外殼內存在未絕緣的“危險電壓”可能會造成人體觸電危險

Вспышка молнии с символом стрелки в треугольнике предназначена для предупреждения пользователя о наличии неизолированного «опасного напряжения» в корпусе продукта, которое может иметь достаточную величину, чтобы представлять опасность поражения электрическим током для людей

Le flash lumineux dans le symbole de la flèche du triangle équilatéral est destiné à alerter l'utilisateur de la présence d'une «tension dangereuse» non isolée dans l'enceinte du produit qui peut être suffisamment importante pour constituer un risque d'électrocution pour les personnes

Il simbolo del lampo con la punta di una freccia, all'interno di un triangolo equilatero, avvisa l'utente della presenza di “tensioni pericolose” non isolate all'interno del contenitore del prodotto che possono essere sufficientemente elevate da costituire un rischio di folgorazione per le persone.

El símbolo del rayo con punta de flecha dentro de un triángulo equilátero alerta al usuario de la presencia de “voltaje peligroso” no aislado en el interior del producto que puede ser de una magnitud suficiente como para constituir un riesgo de descarga eléctrica para las personas.

Important Safety Information



CAUTION: TO REDUCE THE RISK OF
ELECTRIC SHOCK
DO NOT OPEN ENCLOSURE OR EXPOSE
TO RAIN OR MOISTURE.
NO USER-SERVICEABLE PARTS
INSIDE REFER SERVICING TO
QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the product.




The information bubble is intended to alert the user to helpful or optional operational instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
11. Only use attachments/accessories specified by Atlona.
12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
13. Unplug this product during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC Statement

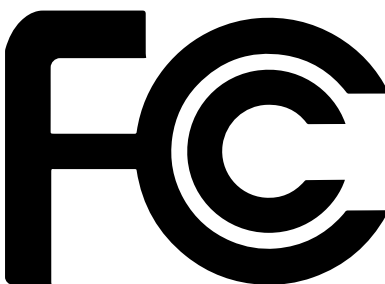

FCC Compliance and Advisory Statement: This hardware device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.

Table of Contents

Introduction	9
Features	9
Package Contents	9
Panel Description	10
Installation	11
Audio Connectors	11
ANALOG IN / LINE OUT	11
4 / 8 Ω OUT	11
70V / 100V OUT	12
Trigger	12
Connection Instructions	13
Connection Diagram	14
Basic Operation	15
IP Configuration	15
Using the Rear Panel	15
Using Commands	16
Using the Web GUI	17
LED Indicators	19
Power Modes	20
Powering On or Off	20
Auto Power Down mode	21
Hibernation mode	22
Input Switching	23
Manual Switching	23
Auto Switching	24
Input Signal Detection	25
Network Audio	26
Dante Software Configuration	26
Enabling AES67 Support	27
Volume Control	29
Factory Reset	29
The Web GUI	30
Introduction to the Web GUI	30
Menu Bar	31
Status page	32
Firmware page	33
Network page	34
Control page	35
Users page	36
Audio page	37
Appendix	38
Updating the Firmware	38
Web GUI	38
USB	40
Rack Mount Installation	41
Network Audio Card Installation	42
Default Settings	45
Specifications	46
Index	48

Introduction

The Atlona **Gain™ 120 (AT-GAIN-120)** is a compact power amplifier designed for low or high impedance applications. A mode selector switch allows it to deliver two channels of 60 watts each into 4 or 8 ohms, or a single channel of 120 watts at 70 or 100 volts. This Class-D amplifier is energy efficient, ENERGY STAR® qualified, and is also convection-cooled to allow installation in conference rooms and quiet installation environments without the need for fans. In addition to the amplified speaker output, a line level audio output allows the incoming audio to be fed into an additional amplifier or audio system. The Gain 120 is controllable via TCP/IP or external trigger, and can be integrated with Atlona AV switchers and HDBaseT™ receivers for a wide variety of sound reinforcement applications.


Features

- Selectable low or high-impedance operation.
 - » 2 x 60 watts @ 4 or 8 ohms.
 - » 1 x 120 watts @ 70 or 100 volts.
- Class-D efficient amplifier design.
- ENERGY STAR® qualified.
- Convection cooled – no need for fans.
- Available AES67 / Dante™ networked audio interface (AT-GAIN-NET) – receives two-channel audio from OmniStream AV encoders or compatible audio devices.
- Optional AT-RACK-1RU rack shelf highly recommended for rack installation.
- Automatic standby after 25 minutes of inactivity to minimize power consumption.
- Rear panel input level controls for setting audio system gain staging.
- Integrated protection circuitry automatically activates in the event of clipping, short circuit, thermal overload, and more.
- Low inrush current to prevent audible “thumps” when multiple amps are powered on simultaneously.
- Balanced analog audio output for pass-through to an additional amplifier or audio system.
- Integrated five-band equalizer.
- TCP/IP control of volume level, muting, and EQ.
- Ideal for IP-based control from Atlona Velocity Control System.
- Trigger port ideal for occupancy sensor to remotely power down amplifier or wake from standby.
- Front panel signal status LEDs for power, signal presence, real-time volume level, device identification, and internal protection activation.
- Rack-mountable 1U, half rack width enclosure.
- Includes installation guide, power cable (US), and captive screw connectors.

Package Contents

1 x AT-GAIN-120
2 x Captive screw connector, 2-pin
1 x Captive screw connector, 4-pin
2 x Captive screw connector, 5-pin
1 x IEC power cord
1 x Installation Guide

Panel Description

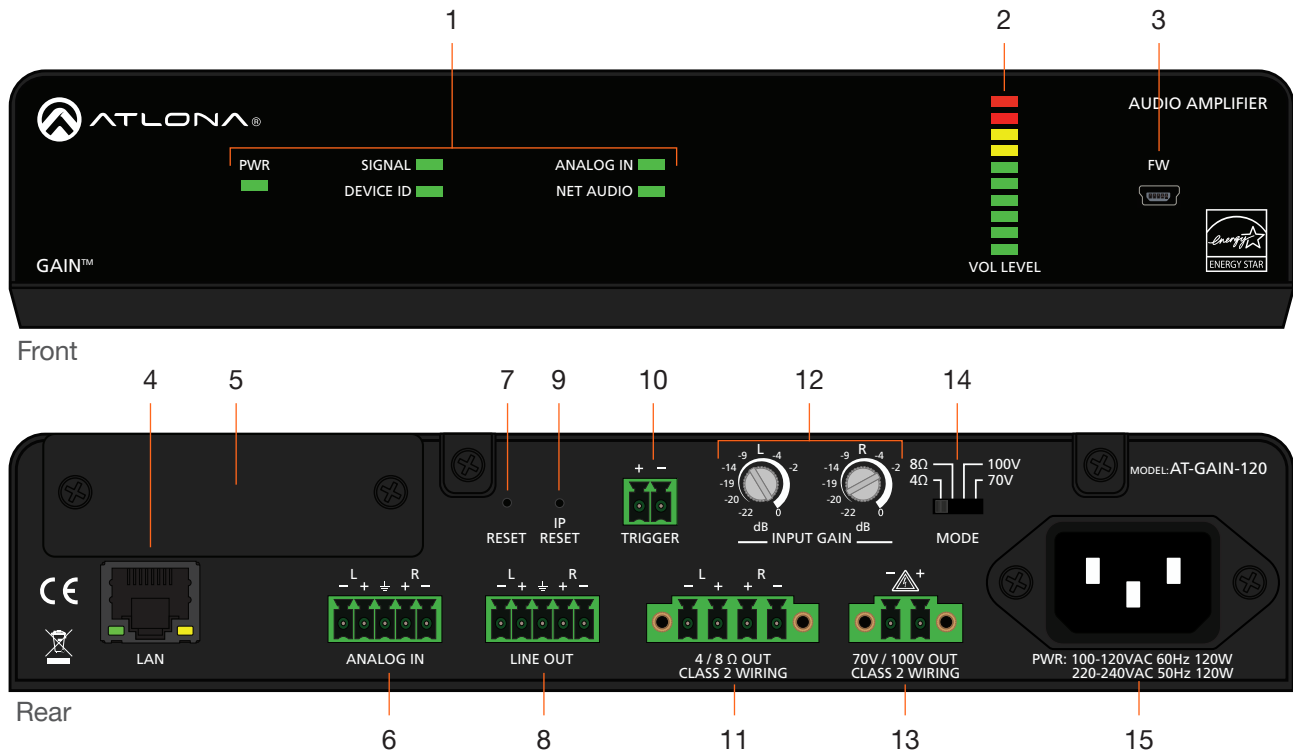

1 LED indicators

Displays the current state of the unit. Refer to [LED Indicators](#) (page 19) for more information.

2 VOL LEVEL

Displays the output audio level.

3 FW

Connect a USB-to-mini USB cable to this port from a computer for firmware updates.

4 LAN

Connect an Ethernet cable from this port to the Local Area Network (LAN).

5 Removable Faceplate

Remove this faceplate to install the AT-GAIN-NET (not included) card. Refer to [Network Audio Card Installation](#) (page 42) for more information.

6 ANALOG IN

Connect an audio source to this port using the included 5-pin captive screw connector. Refer to [Audio Connectors](#) (page 11) for wiring information.

7 RESET

Press and hold this button for 10 seconds to reset the unit to factory-default settings. Refer to [Factory Reset](#) (page 29) for more information.

8 LINE OUT

Use the included 5-pin captive screw connector to connect to another AT-GAIN-120, audio DSP, or audio mixer. Refer to [Audio Connectors](#) (page 11) for more information.

9 IP RESET

Press and hold button this button for 10 seconds to switch between DHCP and static IP mode. Refer to [IP Configuration](#) (page 15) for more information. Also press and hold for 3 seconds to bring the unit out of hibernation mode. Refer to [Power Modes](#) (page 20) for more information.

10 TRIGGER

Use this port to toggle the unit between on and standby or awaken the unit from hibernation mode.

11 4 / 8 Ω OUT

Connect a pair of 4 or 8 ohm speakers (low-impedance) to this port using the included 4-pin captive screw connector.

12 INPUT GAIN

Use a regular screwdriver to adjust the input gain level for left and right channel.

13 70V / 100V OUT

Connect a distributed speaker system (high-impedance) to this port using the included 2-pin captive screw connector.

14 MODE

Slide the switch to select between 4 Ω , 8 Ω , 70V, or 100V modes.

15 PWR

Connect from a power source to the AT-GAIN-120 using the included IEC power cord.

Installation

Audio Connectors

The AT-GAIN-120 provides two audio ports which provide analog audio input and output. The **ANALOG IN** port can be used to connect an audio digital signal processor (DSP) or other audio source device. Balanced or unbalanced wiring is supported.

The **LINE OUT** port can be used to connect an audio output device or daisy-chain to another amplifier.




NOTE: The **LINE OUT** port only outputs analog audio. This port *cannot* be used to output digital audio from the optional AT-GAIN-NET card. Also, volume mute, using the web GUI or the VOUTMute command, will mute the **LINE OUT** pass-through.


1. Use wire strippers to remove a portion of the cable jacket.
2. Remove at least 3/16" (5 mm) from the insulation of each wire.
3. Connect the wires as shown, using either balanced or unbalanced wiring.

ANALOG IN / LINE OUT


The wiring for the **ANALOG IN** and **LINE OUT** ports, support either balanced or unbalanced audio, as shown below. Both ports use the included 5-pin captive screw connectors.

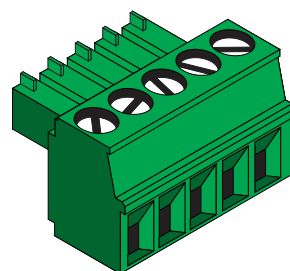

Balanced audio using XLR connectors

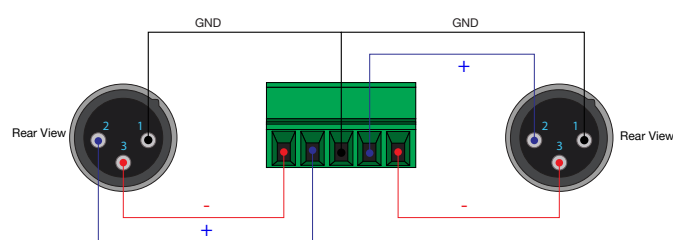


Unbalanced audio using RCA connectors

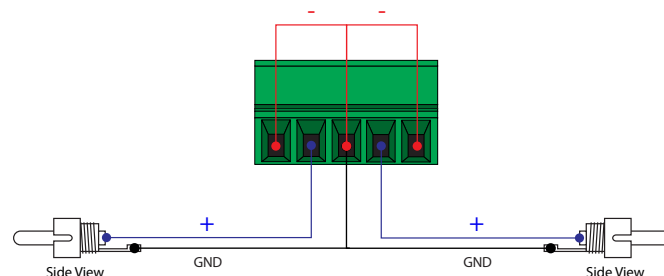

NOTE: The **LINE OUT** port is a fixed-level analog output, *only*. There is no D/A conversion when using the optional AT-GAIN-NET card.


4 / 8 Ω OUT

Connect program/stereo speakers to the included 4-pin captive screw connector, then connect the terminal block to the **4 / 8 Ω OUT** port. When connecting program / stereo speakers, set the **MODE** switch to either 4 Ω or 8 Ω , depending upon the speakers impedance.

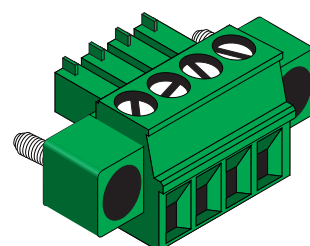

70V / 100V OUT

Connect a distributed speaker system to the included 2-pin captive screw connector, then connect the terminal block to the **70V / 100V OUT** port. When connecting program / stereo speakers, set the **MODE** switch to either 70V or 100V, depending upon the speakers.

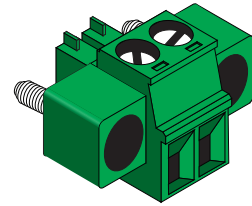



Trigger

The AT-GAIN-120 provides a **TRIGGER** port allowing the AT-GAIN-120 to be connected to an occupancy sensor.

Voltage levels for this port are as follows:

Voltage level	Function
Voltage is 0 or less than 3 V	Off
Voltage is 3 V or greater (30 V max.)	On

1. Use wire strippers to remove a portion of the cable jacket.
2. Remove at least 3/16" (5 mm) from the insulation of each wire.
3. Connect the wires as shown.

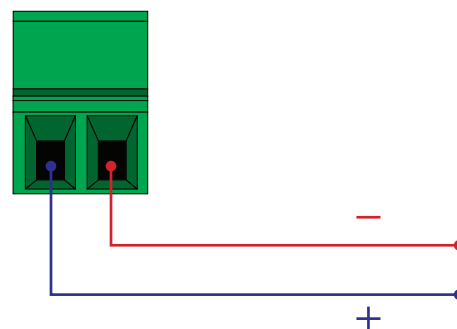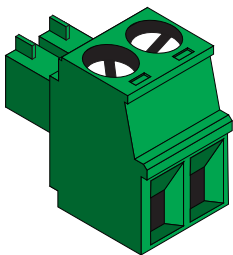

Connection Instructions


The AT-GAIN-120 can be used with an optional network audio card, which supports Dante and AES76 audio streams. If this card will be installed, refer to [Network Audio Card Installation \(page 42\)](#) for more information before continuing with the following instructions. This network card is sold separately and is available from Atlona.

1. Connect an analog audio source, using the included 5-pin captive screw connector, to the **AUDIO IN** port. Use the desired wiring configuration, on the previous page. Both balanced and unbalanced wiring are supported.
2. Connect an analog audio output device, using the included 5-pin captive screw connector, to the **LINE OUT** port. Use the desired wiring configuration, on the previous page. Both balanced and unbalanced wiring are supported.




NOTE: Analog or NET audio (with optional card), are selectable from the web GUI, Atlona Velocity™, or third-party control using the API. Refer to the *Stereo / Mono Audio Power Amplifier 120 Watts Application Programming Interface*, on the Atlona web site for more information. In addition, the **LINE OUT** port only outputs analog audio. This port *cannot* be used to output digital audio from the optional AT-GAIN-NET card.

3. Determine the use-case scenario of the AT-GAIN-120. The AT-GAIN-120 can be configured as either one of the following. Only one type of speaker connection is permitted at a time.
 - **Distributed speaker system (high impedance)**
Set the **MODE** switch to the required voltage setting: **70V** or **100V**. This mode is used for commercial applications and longer speaker cable runs.
 - **Program speakers / stereo (low impedance)**
Set the **MODE** switch to the impedance setting of the speakers being connected: **4Ω** or **8Ω**. This mode is used for consumer applications and shorter speaker cable runs.

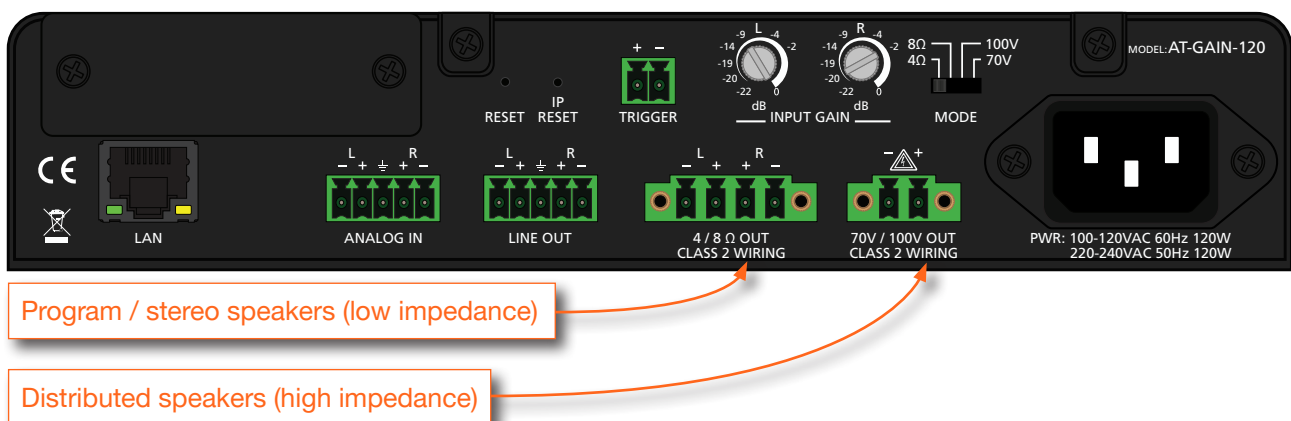

4. Connect the speakers to the proper port on the AT-GAIN-120, based on the selection made in the previous step.
5. Set the **MODE** switch to the proper setting, based on the type of speaker connection that is being used.
6. Connect the **LAN** port to a network switch for set up and control of the unit.
7. OPTIONAL: Connect the included 2-pin captive screw connector from the **TRIGGER** port to an automation control system.
8. Connect the included IEC power cord to the power receptacle.
9. Connect the IEC power cable to an available electrical outlet.

Connection Diagram

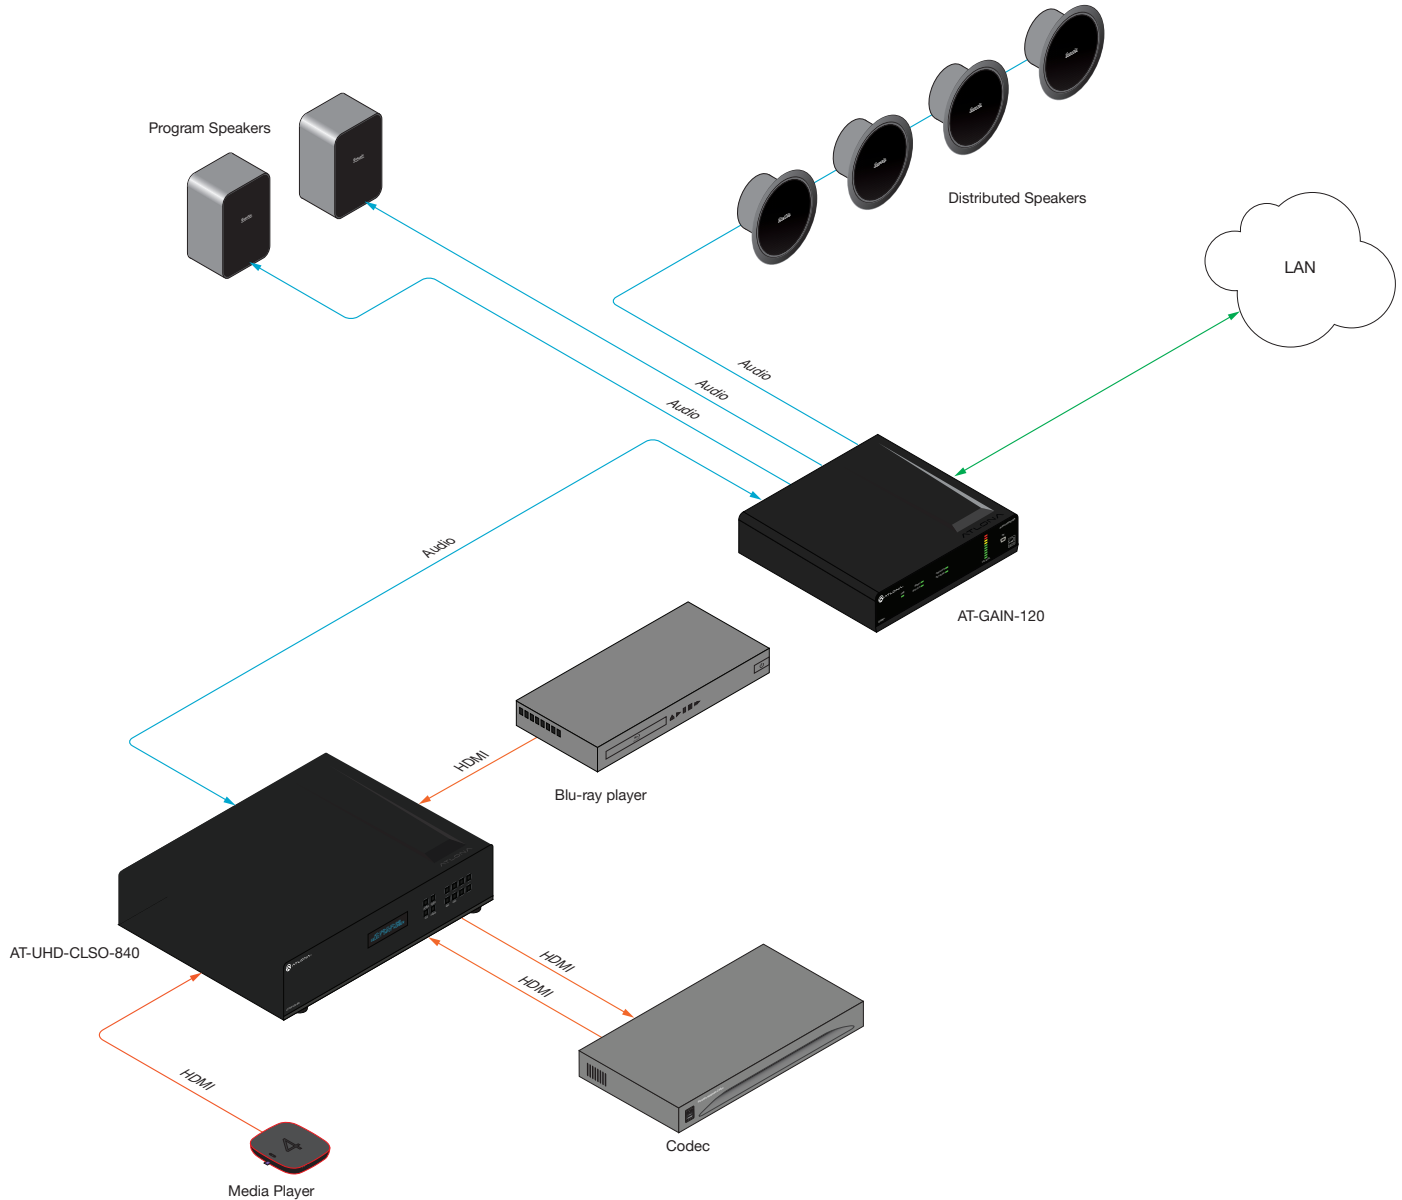

IMPORTANT: When connecting speakers, either use a distributed speaker system or program/stereo speakers. The AT-GAIN-120 does not support simultaneous distributed and program speaker connections.

Basic Operation

IP Configuration

The AT-GAIN-120 is shipped with DHCP enabled. Once connected to a network, the DHCP server (if available), will automatically assign an IP address to the unit. Execute the `arp -a` command at the Windows command line or use an IP scanner to locate the AT-GAIN-120 on the network.


If the AT-GAIN-120 is unable to detect a DHCP server, within 15 seconds, then the unit will be assigned the following IP configuration:

- IP address 192.168.1.254
- Subnet mask 255.255.0.0
- Gateway 192.168.1.1

If a static IP address is desired, the unit can be switched to static IP mode. Use one of the following procedures to switch between DHCP and static IP mode. 192.168.1.254 is the default static IP address.

Using the Rear Panel

1. Make sure the AT-GAIN-120 is powered.
2. Press and hold the **IP RESET** button for approximately 10 seconds.

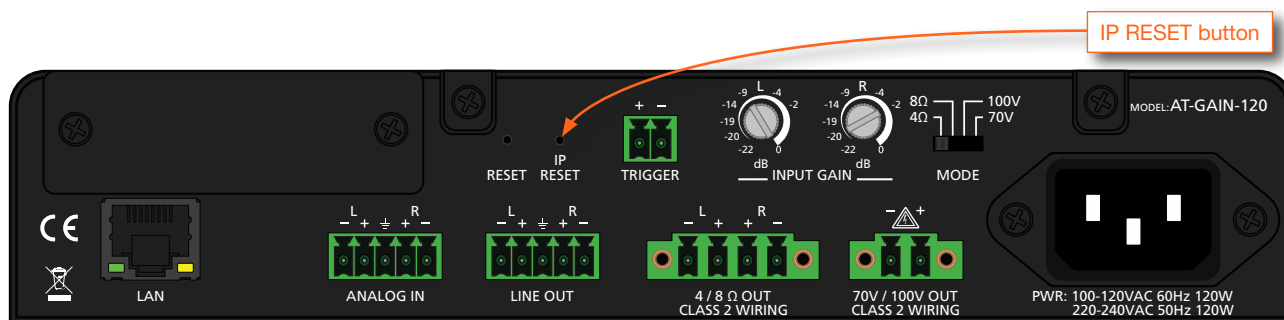

3. Release the **IP RESET** button once the **PWR** LED indicator on the front panel begins to flash. The number of flashes will indicate the currently selected IP mode.

POWER LED flashes	Description
Two	Static IP mode
Four	DHCP mode

4. Once the unit has changed IP modes, the unit will shut down. To restart the unit, disconnect then reconnect the power cable.
5. The unit is now set to the new IP mode and ready for use.

Using Commands

Use the IPStatic and IPDHCP commands to switch between DHCP and static IP mode using Telnet. Refer to the Application Programmers Interface documentation for more information. All commands and their arguments are case-sensitive.

- **Setting static IP mode**

1. Connect to the AT-GAIN-120 using Telnet.
2. At the command line, execute the IPDHCP command using the off argument, as shown.

```
IPDHCP off
```

3. Execute the IPStatic command. This command requires three arguments: the desired IP address of the AT-GAIN-120, the subnet mask, and the gateway address. All arguments must be entered in dot-decimal notation. The following is an example:

```
IPStatic 192.168.1.112 255.255.255.0 192.168.1.1
```

4. Power-cycle the AT-GAIN-120.
5. The unit is now set to static IP mode and ready for use.

- **Setting DHCP mode**

1. Connect to the AT-GAIN-120 using Telnet.
2. At the command line, execute the IPDHCP command using the on argument, as shown. All characters are case-sensitive.

```
IPDHCP on
```

3. Power-cycle the AT-GAIN-120
4. The unit is now set to DHCP mode and will be assigned an IP address by the DHCP server (if present).


Using the Web GUI

The **Network page (page 34)** in the web GUI allows the option for the AT-GAIN-120 to use either DHCP or static IP mode. In order to access the web GUI, the IP address of the AT-GAIN-120 must be known.

1. Open the desired web browser and enter the IP address of the AT-GAIN-120.
2. Log in, using the required credentials. The factory-default username and password are listed below:


Username: admin
 Password: Atlona

3. Click the **Network** tab, located on the side menu bar.

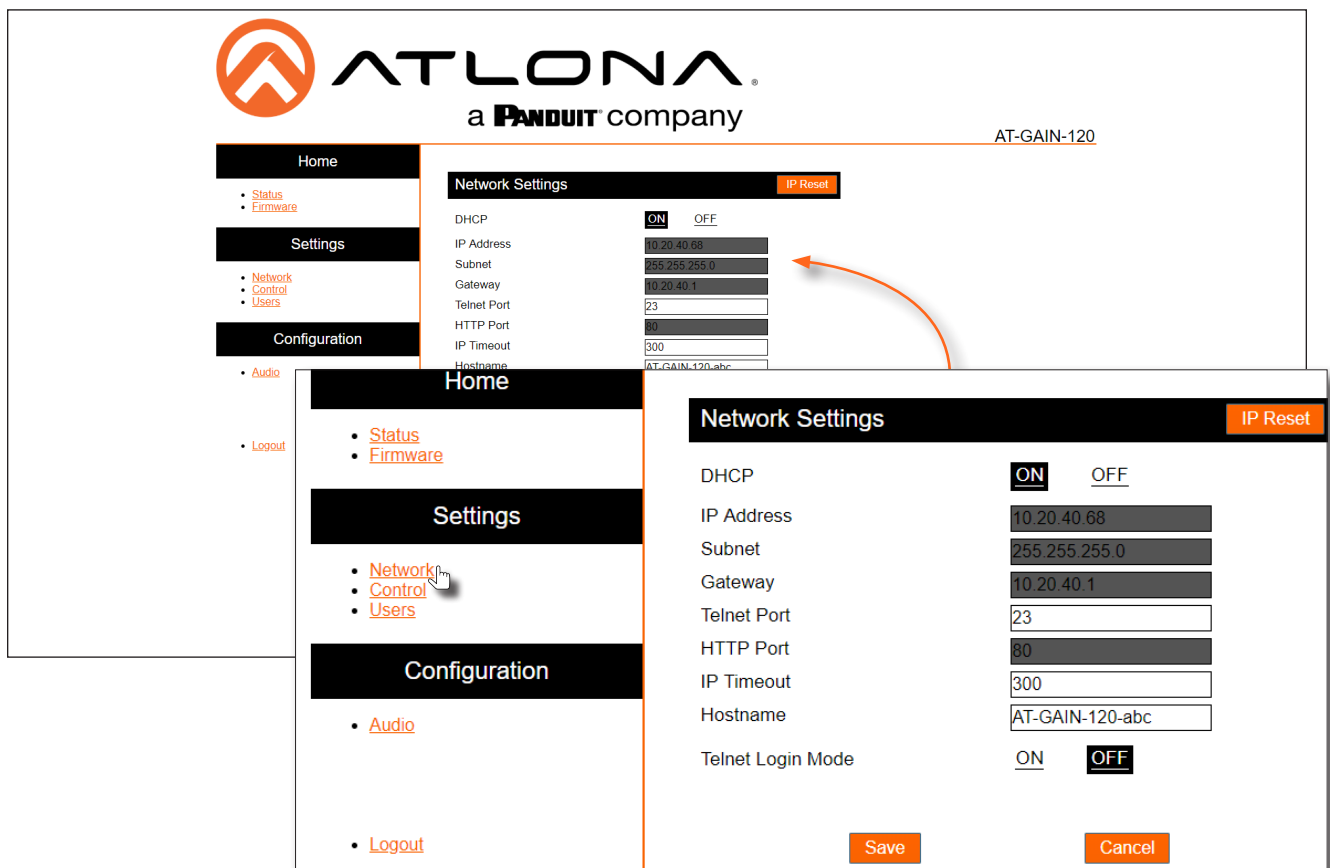

- **Setting static IP mode**
 - a. Click **OFF**, next to **DHCP**.
 - b. Enter the required information in the **IP Address**, **Subnet**, and **Gateway** fields.
 - **Setting DHCP mode**
 - a. Click **ON**, next to **DHCP**.
4. Click the **Save** button to save the changes.


5. The following message box will be displayed:

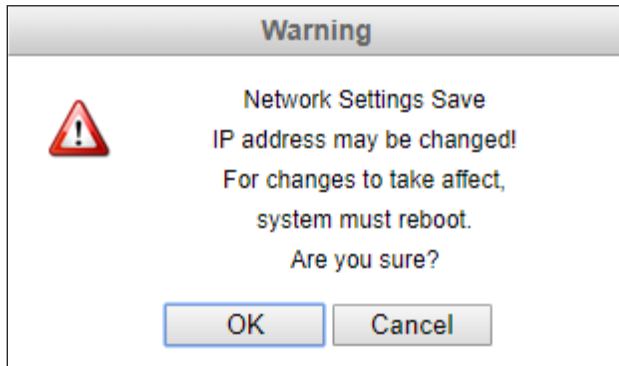




6. Click **OK** to accept the changes or click **Cancel** to abort changes and return to the **Network** page.

LED Indicators

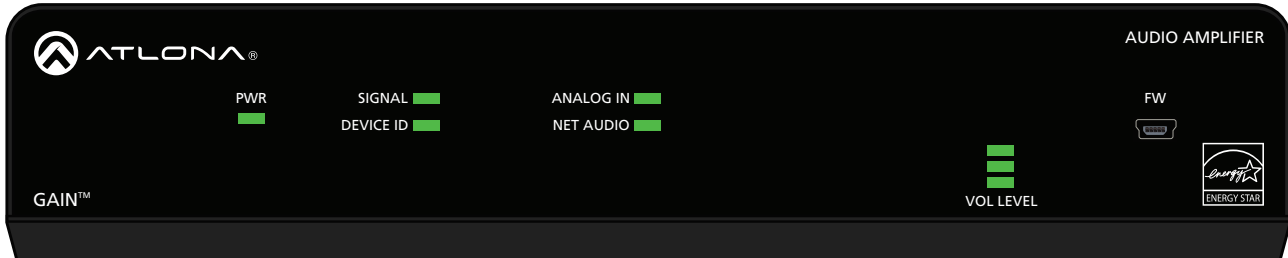The LED indicators on the front panel, provide information on the current state of the AT-GAIN-120. Refer to the table below for more information.



LED Indicator	State		Description
PWR	Solid green		Unit is powered.
	Off		Unit is not powered. <ul style="list-style-type: none"> Check the power cable between the AT-GAIN-120 and the electrical outlet. Make sure that the electrical outlet is live.
	Rapid flashing green		Firmware update is in progress. Refer to Updating the Firmware (page 38) for more information.
SIGNAL	Solid green		An active signal is present on the selected input.
DEVICE ID	Off		Unit is not in device ID mode.
	Flashing green		Unit is in “blink” mode. This LED indicator will flash once each second, and can be used to help physically identify the unit in a rack shelf.
ANALOG IN	Solid green		The ANALOG IN port is the active input.
	Off		The ANALOG IN port is not the active input.
NET AUDIO	Solid green		The INPUT port on the network card is the active input. This LED indicator is only functional when the optional AT-GAIN-NET card is installed. Note that this LED indicator does not indicate the presence of an audio signal.
	Off		The INPUT port is not the active input.
VOL LEVEL	Solid green		Acceptable range for output volume.
	Solid amber		Output volume level is approaching audio clipping.
	Solid red		Audio clipping.

Power Modes


The following section discusses the power mode features which have been integrated into the AT-GAIN-120. Power modes are located under the **Control** tab within the web GUI.

1. Open the desired web browser and enter the IP address of the AT-GAIN-120.
2. Log in, using the required credentials. The factory-default username and password are listed below:

Username: admin

Password: Atlona

3. Click the **Control** tab, located on the side menu bar. The **Control Settings** section will be displayed.

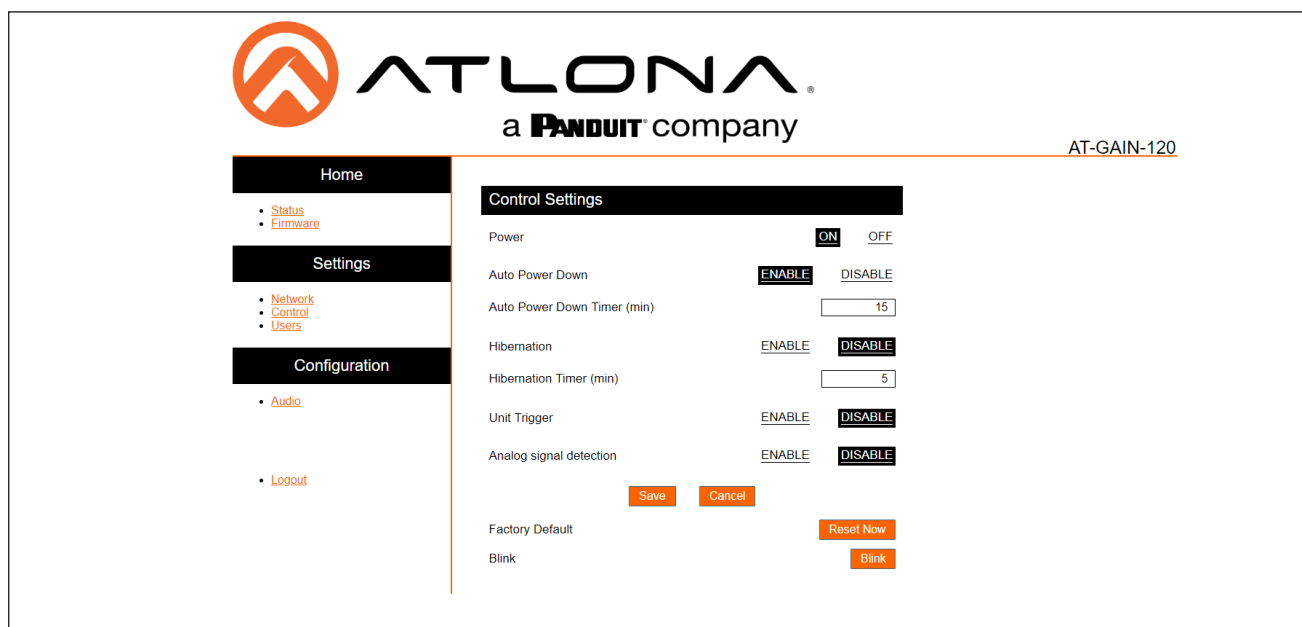

Powering On or Off

Click the **OFF** option to power-off the AT-GAIN-120. When powered-off, audio output is disabled but both the LAN port and **INPUT** port (AT-GAIN-NET audio card, only) will remain active. To power-on the AT-GAIN-120, after it has been powered-off, any one of the following methods may be used:


- Press and hold the **IP RESET** button for a minimum of 3 seconds, but not more than 5 seconds.
- Pull the **TRIGGER** port from low to high. **Unit Trigger** must be enabled for this to function.
- Set **Power** to the **ON** setting, in the web GUI.
- Route Dante / AES67 audio.

Auto Power Down mode


Enabling this mode will automatically power-down the AT-GAIN-120 if no audio input signal is present on either the **INPUT** port (AT-GAIN-NET audio card, only) or the **ANALOG IN** port, after the specified time interval. When the AT-GAIN-120 enters Auto Power Down mode, the Power option will be set to **OFF** and the front-panel LED indicators will turn off. In Auto Power Down mode, power consumption is limited to 2.2 W. By default this feature is enabled.

Note that when this mode is enabled, the AT-GAIN-120 only monitors the existence of an audio input signal, not the physical audio connection. Refer to the next page for instructions.

1. Click **Control**, under the **Settings** menu, on the left side of the screen.
2. Click **ENABLE** for the **Auto Power Down** option.

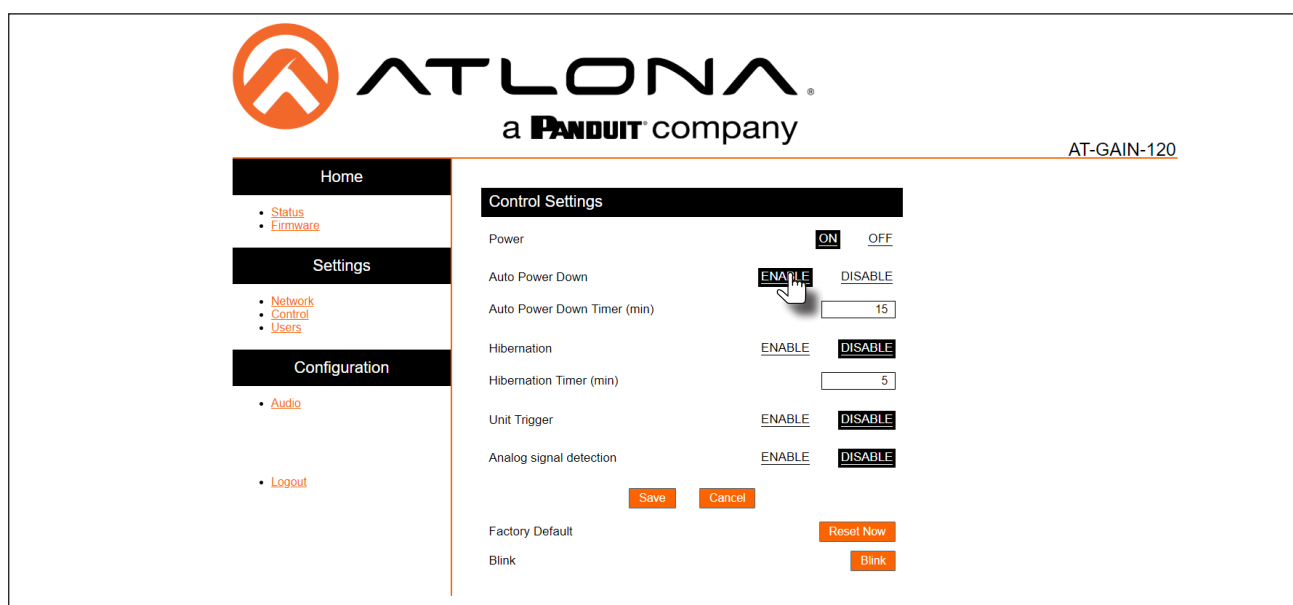

3. In the **Auto Power Down Timer (Sec)** field, enter the time interval before the AT-GAIN-120 powers-down. The default setting is 15 minutes.
4. Click the **Save** button.

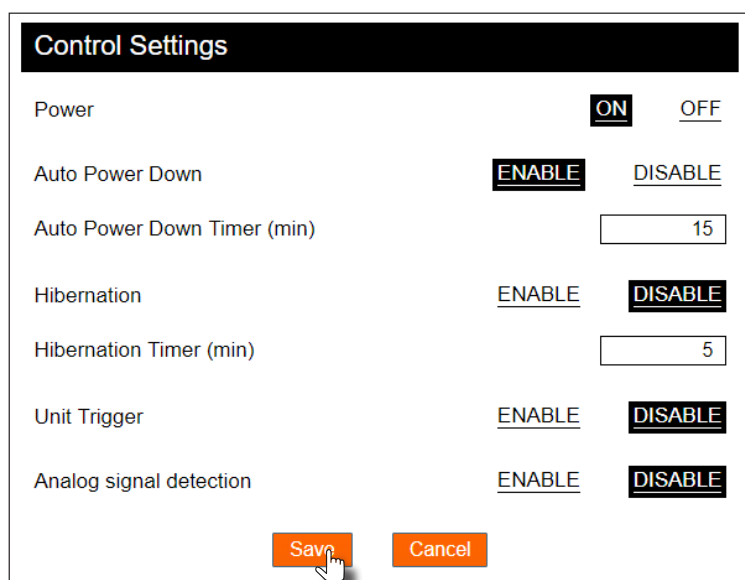

Hibernation mode

Enabling this mode will place the AT-GAIN-120 into a very-low power mode where power consumption is limited to 0.5 W. When in hibernation mode, there will be no audio output or network communication. The **PWR** LED indicator will blink once every second to indicate that the AT-GAIN-120 is in hibernation mode. By default this feature is disabled.

To wake the AT-GAIN-120 from hibernation mode, use one of the following methods:

- Press and hold the **IP RESET** button on the rear panel for approximately 3 seconds, but no longer than 5 seconds, using the end of a paper clip or other pointed object.
- Pull the trigger high using a control system such as Atlona Velocity. Note that even if the **Unit Trigger** option is set to **DISABLE**, this method will still wake the AT-GAIN-120.

1. Click the **ENABLE** option, if it is not selected.
2. Enter the time interval (in minutes) in the **Hibernation Timer (min)** field. If no audio input is detected, the hibernation timer will be triggered. Once the timer limit expires, the AT-GAIN-120 is placed in hibernation mode. The default value is 5 minutes. Integer values up to 30 can be specified.

Hibernation	ENABLE	<u>DISABLE</u>
Hibernation Timer (min)	<input type="text" value="5"/>	
Unit Trigger	<u>ENABLE</u>	DISABLE
Analog signal detection	<u>ENABLE</u>	DISABLE
<div>Save</div> <div>Cancel</div>		
Factory Default	<div>Reset Now</div>	
Blink	<div>Blink</div>	

3. Click the **Save** button to commit changes.
4. To wake the AT-GAIN-120 from hibernation mode, use one of the following operations:
 - Press and hold the **IP RESET** button on the rear panel for approximately 3 seconds, but no longer than 5 seconds, using the end of a paper clip or other pointed object.



WARNING: If exiting hibernation mode, do not hold the **IP RESET** button for longer than 5 seconds. If this occurs, then the AT-GAIN-120 will switch IP modes.

- Pull the trigger high using a control system such as Atlona Velocity. Note that even if the **Unit Trigger** option is set to **DISABLE**, this method will still wake the AT-GAIN-120.

Input Switching


When the optional AT-GAIN-NET card is installed, switching between the **ANALOG IN** and the audio input on the AT-GAIN-NET card can be performed either manually or automatically. The following section covers both methods. The AT-GAIN-NET card is available from Atlona.

Manual Switching


1. Open the desired web browser and enter the IP address of the AT-GAIN-120.
2. Log in, using the required credentials. The factory-default username and password are listed below:

Username: admin
 Password: Atlona

3. Click the **Audio** tab, located on the side menu bar. The **Audio** and **Equalization** settings will be displayed.

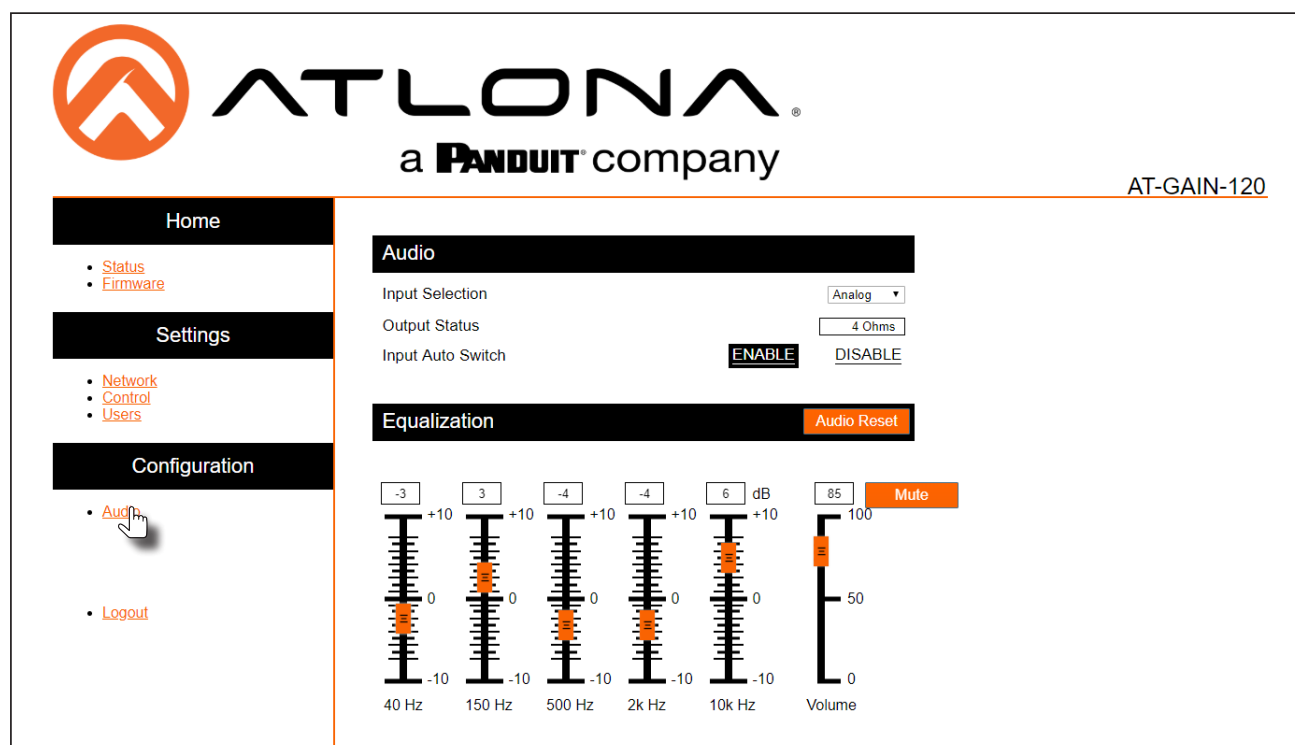

4. Click the **Input Selection** drop-down list to select the desired audio input. The currently selected audio input will be display in both the web GUI and on the front panel LED indicators. Refer to [LED Indicators \(page 19\)](#) for more information.

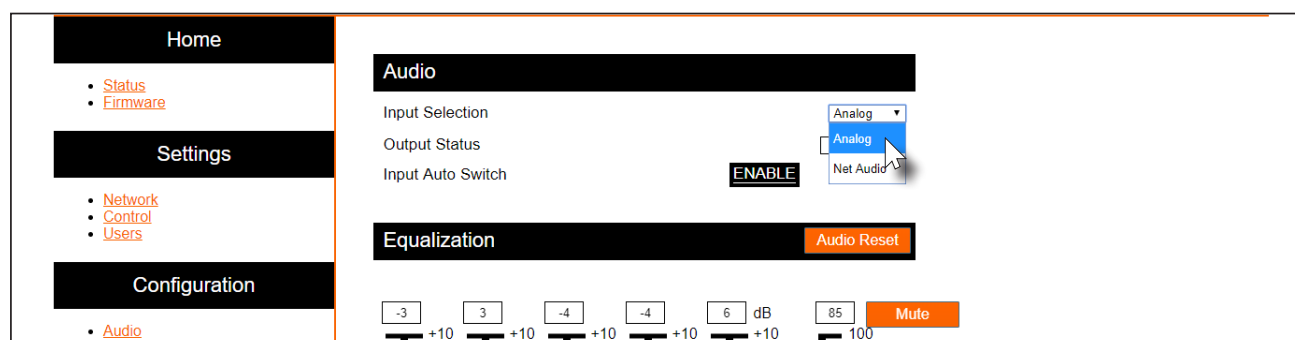

Auto Switching


When auto-switching is enabled, the AT-GAIN-120 will automatically switch audio inputs, based on the presence of an input signal. Auto-switching is enabled, by default. If the AT-GAIN-NET card is not installed, this feature will not have any effect.

1. Open the desired web browser and enter the IP address of the AT-GAIN-120.
2. Log in, using the required credentials. The factory-default username and password are listed below:

Username: admin

Password: Atlona

3. Click the **Audio** tab, located on the side menu bar. The **Audio** and **Equalization** settings will be displayed.
4. Make sure the **Input Auto Switch** feature is set to **ENABLE**, as shown below.

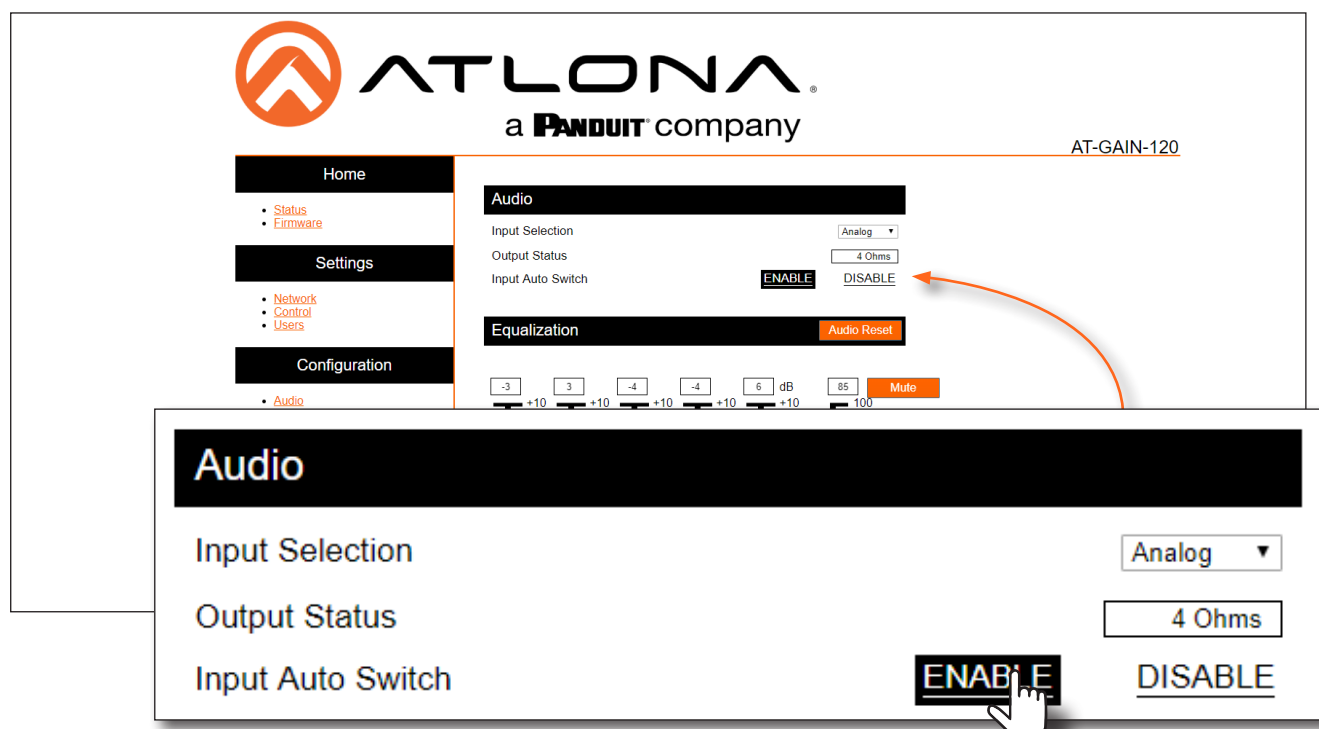

5. To disable audio auto-switching, set the **Input Auto Switch** feature to **DISABLE**.

Input Signal Detection


The AT-GAIN-120 has the capability to detect an input audio signal on the **AUDIO IN** port. When the input audio signal is detected, it will automatically “wake” the AT-GAIN-120 from hibernation mode. This feature is disabled, by default.



IMPORTANT: The input signal detection feature is only available on hardware revision B (or later). The hardware revision can be found on the sticker, on the bottom of the AT-GAIN-120.



1. Open the desired web browser and enter the IP address of the AT-GAIN-120.
2. Log in, using the required credentials. The factory-default username and password are listed below:
 Username: admin
 Password: Atlona
3. Click the **Control** tab, located on the side menu bar.
4. Set the **Analog signal detection** feature to **ENABLE**, as shown below.

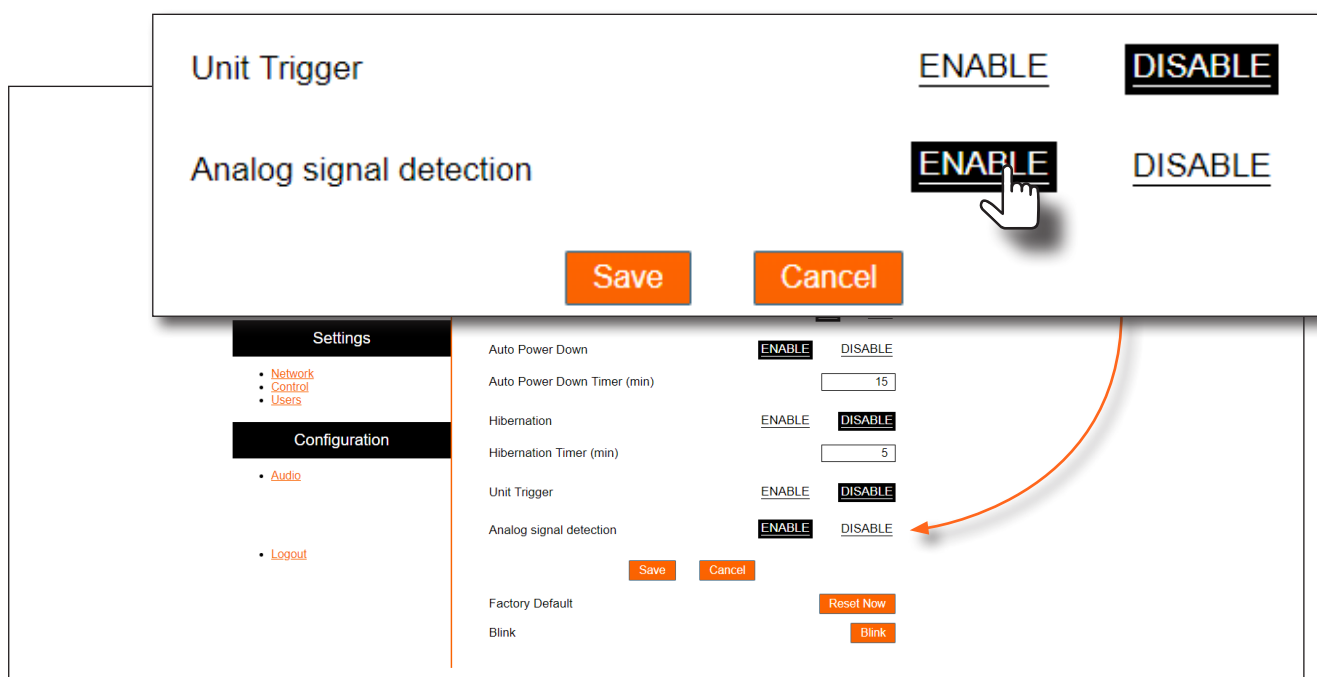

Network Audio

The AT-GAIN-120 supports Dante and AES67 audio streams with the addition of the optional AT-GAIN-NET audio card, which can be purchased from Atlona. Refer to [Network Audio Card Installation \(page 42\)](#) for information on card installation.

For setup and control of Dante / AES67 audio routing and configuration, refer to the Audinate Dante Controller software. AMS 2.0 and the web graphical interface of the AT-GAIN-120 supports basic network, control, and audio level adjustments.



IMPORTANT: The AT-GAIN-120 must be connected within the same network segment as the Dante Controller, in order to utilize mDNS.

Dante Software Configuration

1. Download the Audinate Dante Controller software from the following URL:


<https://www.audinate.com/products/software/dante-controller>




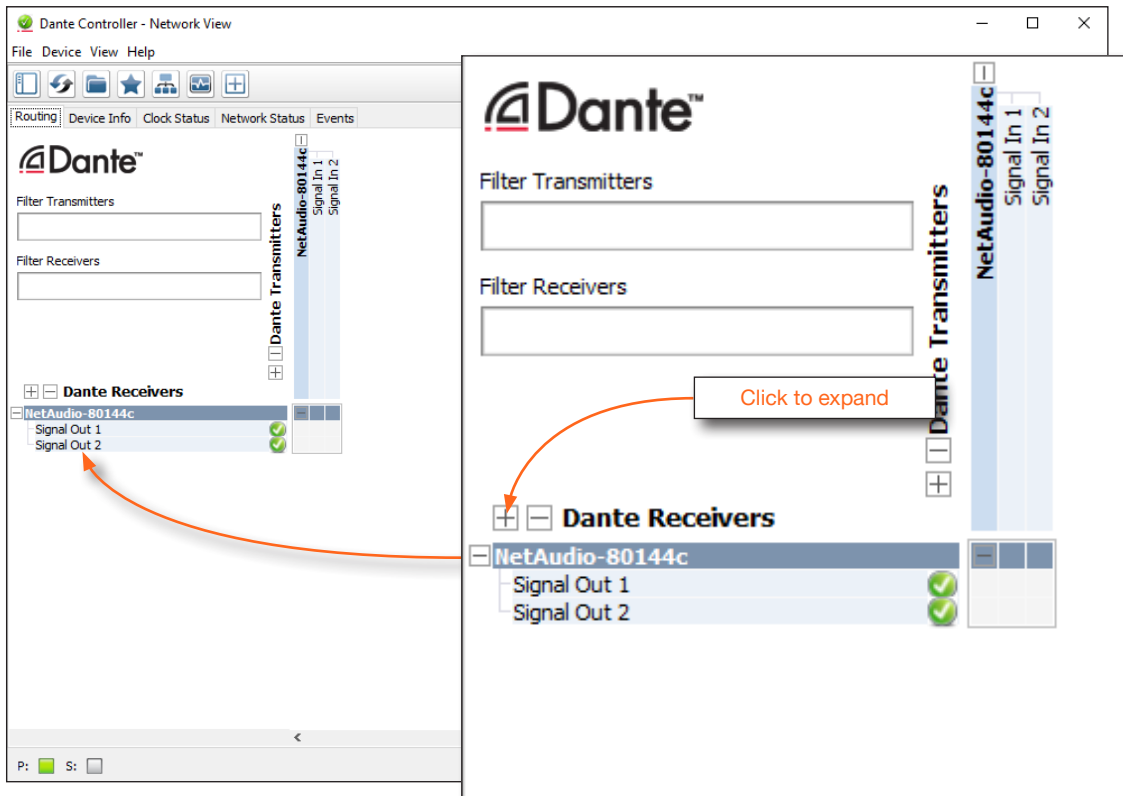
NOTE: The AT-GAIN-120 was tested using Audinate Dante Controller software v4.0.6.5 and Java v1.8.0. Atlona recommends using Audinate Dante Controller software v4.0.6.5 or higher.

2. Make sure that an Ethernet cable is connected from the **INPUT** port on the rear panel to the network.
3. Launch the Dante Controller software.

The AT-GAIN-NET network audio card will appear as **NetAudio-xxxxx**, where **xxxxx** refers to the last five hexadecimal digits of the network card MAC address.

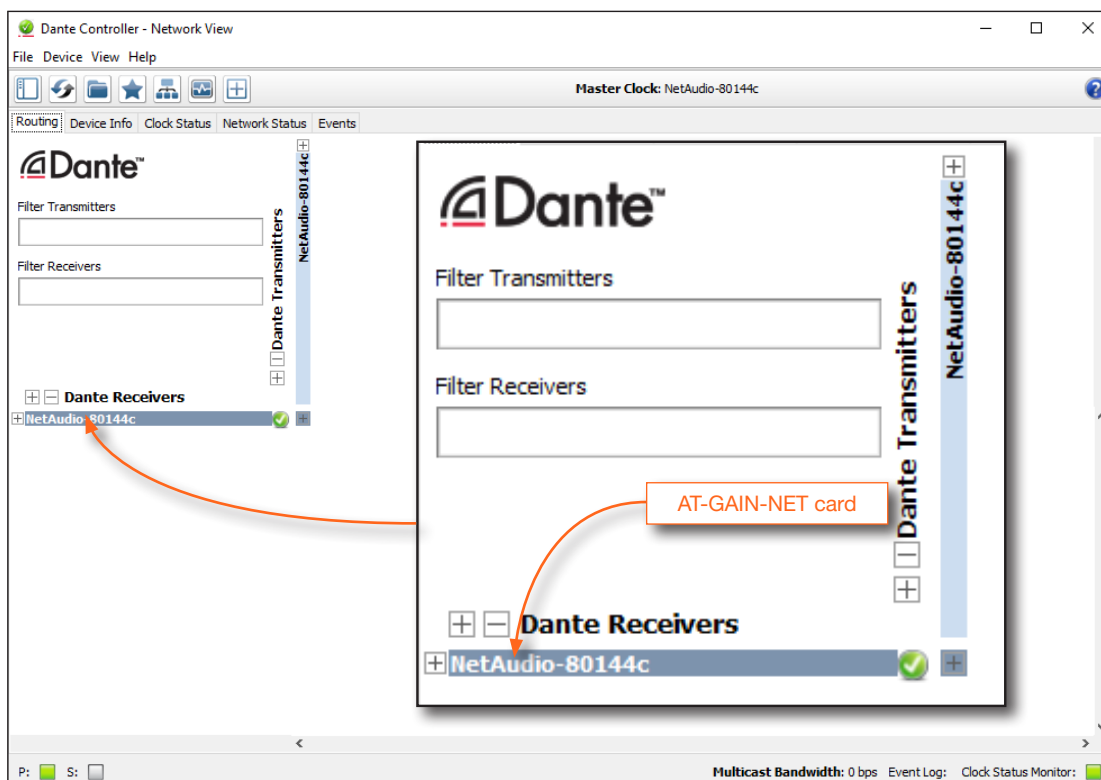


- Click the  icon, next to the NetAudio-xxxxx card, under **Dante Receivers**, to view the channels. The AT-GAIN-NET audio card has a maximum of two channels of audio. Refer to the Dante Controller User Guide for details on operation.




Enabling AES67 Support

In order to route AES67 audio over IP, both the transmitter and receiver must support AES67 and have this option enabled.


- Double click the network card, under Dante Receivers

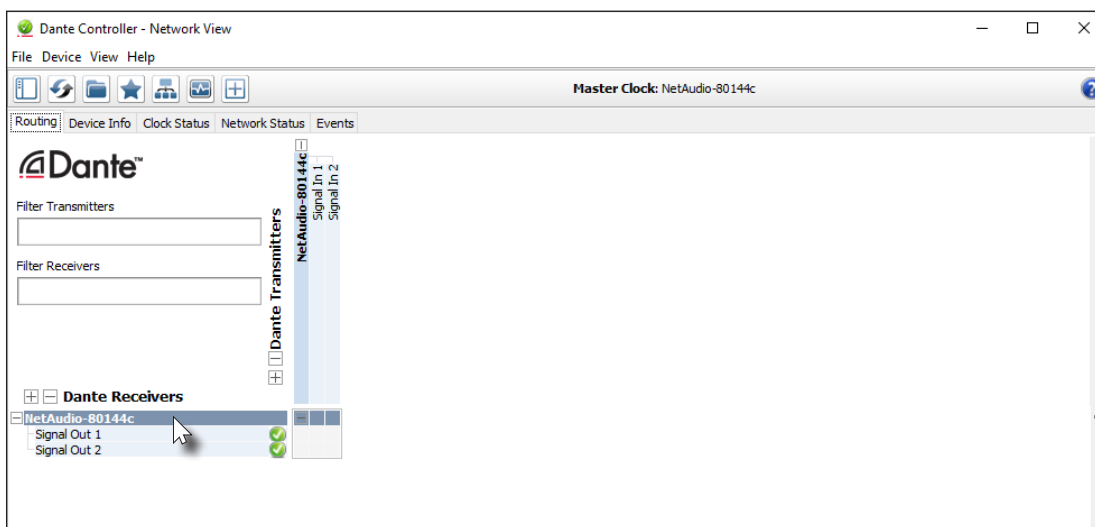


2. A separate window will open. Click the **AES67** tab.
3. Click the **New** drop-down list and select **Enabled**.

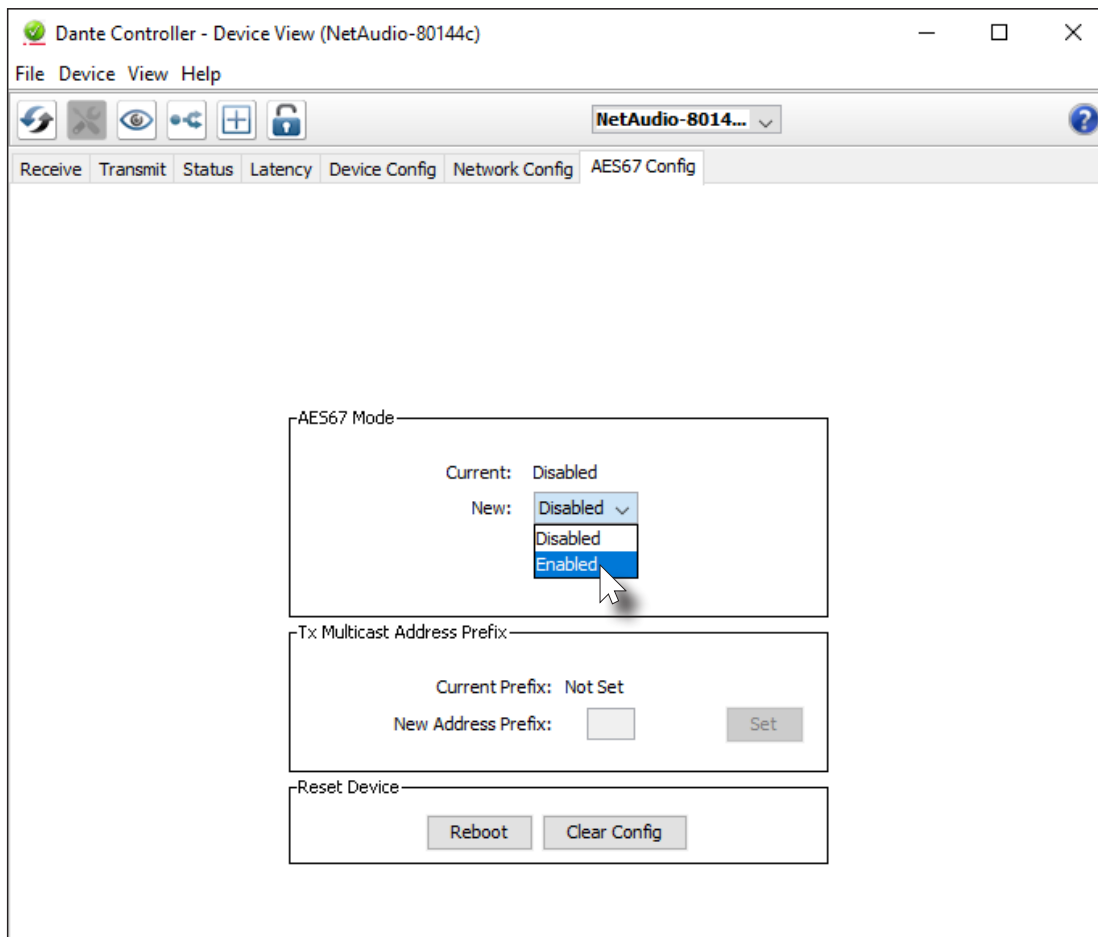

4. A message box will be displayed prompting to confirm AES67 is to be enabled. Click **Yes**.

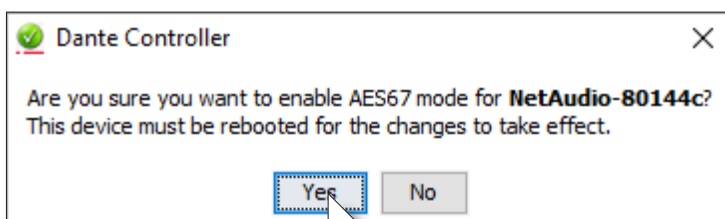

5. Another message box will be displayed. In order for AES67 to be enabled, the card must be rebooted. Click **Yes** to reboot the network card.

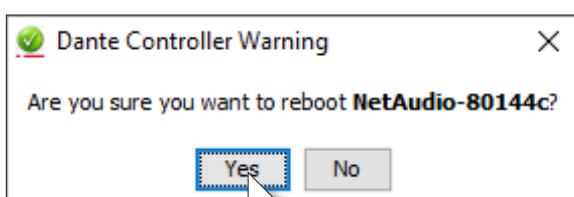

6. AES67 is now enabled.

Volume Control


Output audio level is controlled through the built-in web GUI. Volume control only affects the **4 / 8 Ω OUT** and **70V / 100V OUT** ports. Adjusting the audio output volume does not affect the **LINE OUT** port, as this port is a fixed-level output. The **LINE OUT** port is designed to be connected to a pre-amp device.

1. Log in to the web GUI. Refer to [Introduction to the Web GUI \(page 30\)](#) for more information.
2. Click the **Audio** menu.
3. Use the **Volume** slider, under the **Equalization** section, to adjust the output volume.
4. Click the slider controls on the 5-band graphic equalizer to adjust the audio frequency output, if desired. By default, the graphic equalizer produces a “flat” response.

Factory Reset

If necessary, the AT-GAIN-120 can be reset to factory-default settings. Note that the AT-GAIN-120 will be placed in DHCP mode, as part of the reset procedure. The AT-GAIN-120 can also be reset through the web GUI. Refer to the [Control page \(page 35\)](#) for more information.

1. Make sure the unit is powered-on.
2. Press and hold the **RESET** button for 10 seconds, using the end of a paper clip or other pointed object.
3. Release the **RESET** button.

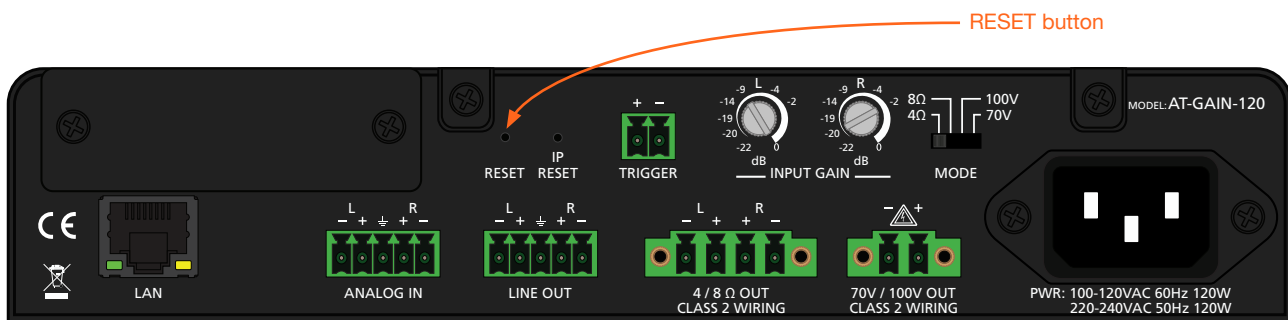

The Web GUI

Introduction to the Web GUI

The AT-GAIN-120 includes a built-in web GUI. Atlona recommends that the web GUI be used to set up the AT-GAIN-120, as it provides intuitive management of all features.


The AT-GAIN-120 is shipped with DHCP enabled. Once connected to a network, the DHCP server will automatically assign an IP address to the unit. Use an IP scanner to determine the IP address of the AT-GAIN-120. If a static IP address is desired, refer to [IP Configuration \(page 15\)](#). The default static IP address of the AT-GAIN-120 is 192.168.1.254.

1. Launch a web browser.
2. In the address bar, type the IP address of the AT-GAIN-120.
3. The **Login** page will be displayed.




The screenshot shows the AT-GAIN-120 web GUI login page. At the top, there is the ATLONA logo and the text "a PANOUT company". Below this, the text "AT-GAIN-120" is visible. The main section is titled "Login" and contains two input fields: "Username" and "Password". Below these fields are two buttons: "Login" and "Clear".

4. Type admin, using lower-case characters, in the **Username** field.
5. Type Atlona in the **Password** field. This is the default password. The password field is case-sensitive. When the password is entered, it will be masked. The password can be changed, if desired. Refer to [Users page \(page 36\)](#) for more information.
6. Click the **Login** button or press the ENTER key on the keyboard.

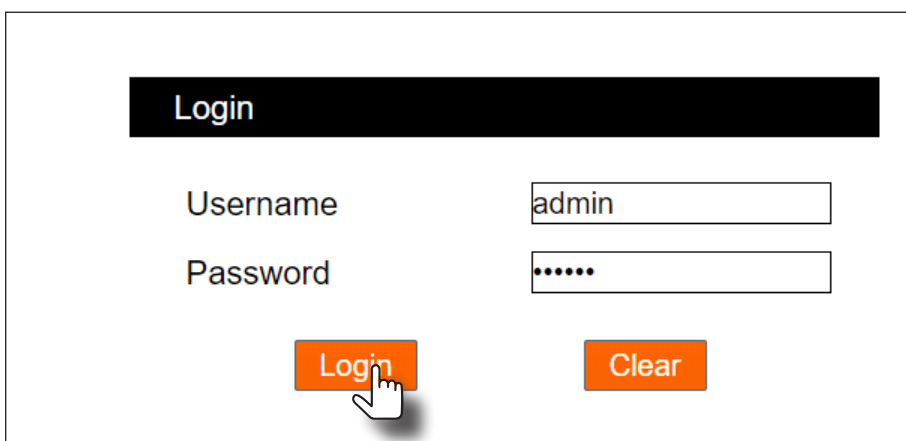

The screenshot shows the AT-GAIN-120 web GUI login page with the "Username" field filled with "admin" and the "Password" field filled with masked characters (dots). A mouse cursor is pointing at the "Login" button. The "Clear" button is also visible.


- The **Status** page will be displayed.

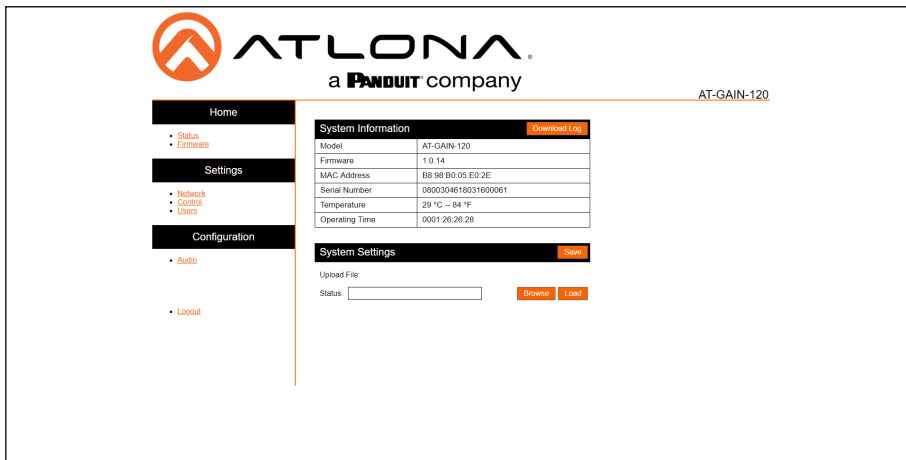


- To logout of the web GUI at any time, click **Logout** on the side menu bar. Once logged out, the AT-GAIN-120 will display the login screen.

Menu Bar

The window on the left side of the screen is the menu bar. The menu system is divided into three sections: **Home**, **Settings**, and **Configuration**. When the mouse is moved over each menu item, it will be highlighted in black. Click the menu item to go that page.

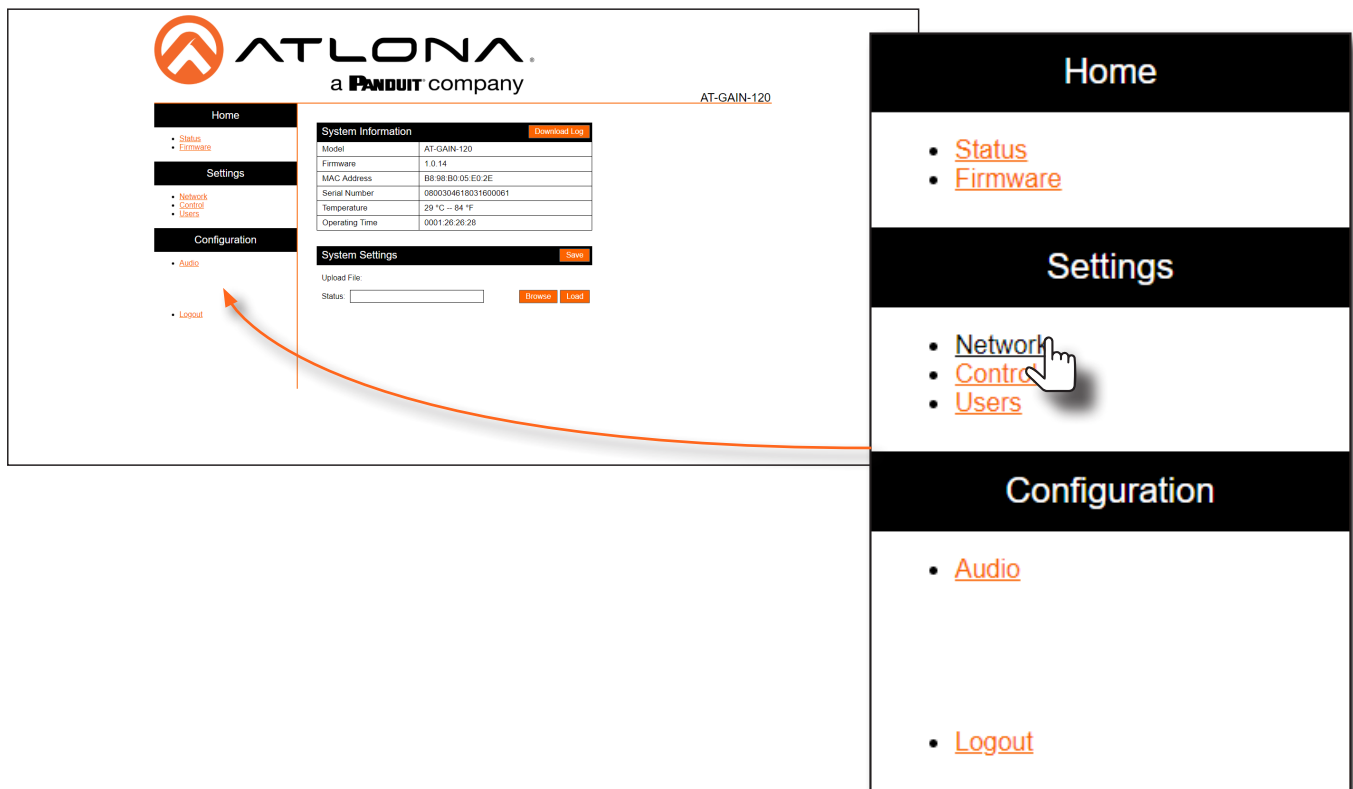

Status page

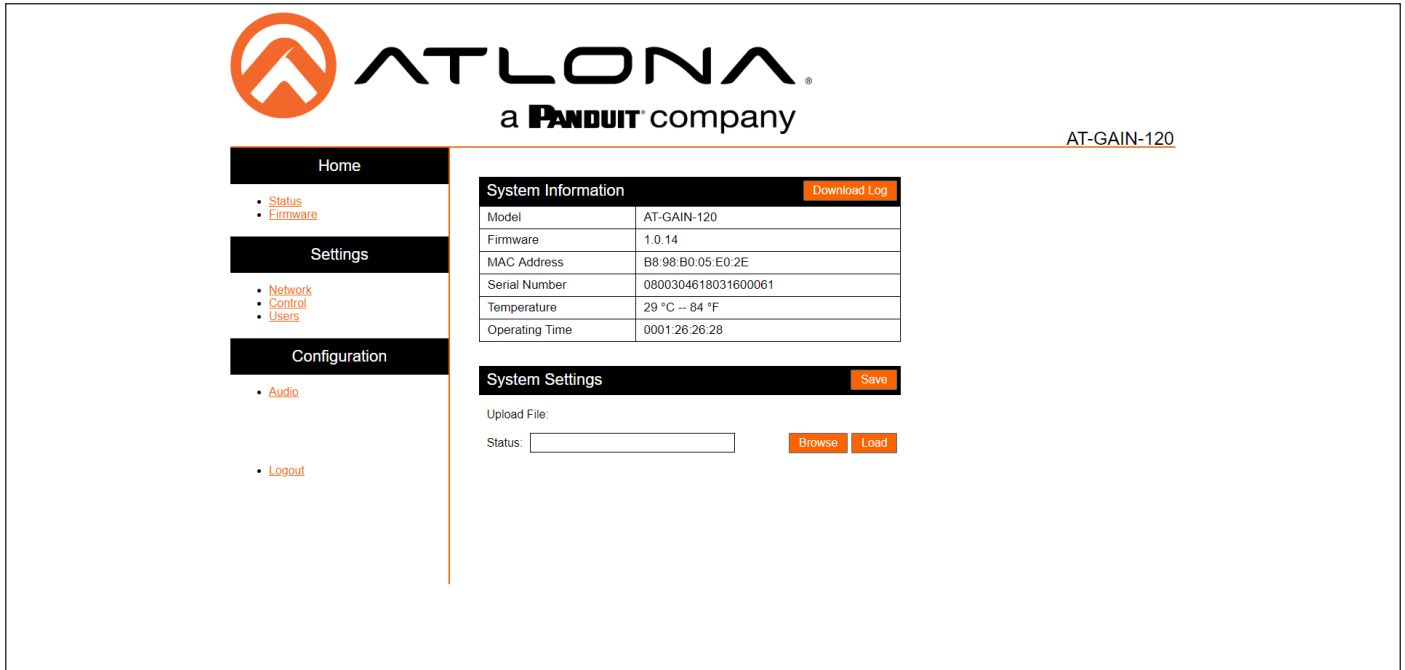

The screenshot shows the ATLONA web GUI interface. At the top, the ATLONA logo and 'a PANDUIT company' text are displayed. The page title 'AT-GAIN-120' is in the top right. A left sidebar contains navigation links: Home, Status, Firmware, Settings, Network, Control, Users, Configuration, Audio, and Logout. The main content area is divided into two sections: 'System Information' and 'System Settings'. The 'System Information' section includes a 'Download Log' button and a table with the following data:

Model	AT-GAIN-120
Firmware	1.0.14
MAC Address	B8:98:B0:05:E0:2E
Serial Number	0800304618031600061
Temperature	29 °C -- 84 °F
Operating Time	0001:26:26:28

The 'System Settings' section includes a 'Save' button, an 'Upload File:' label, a text input field for the file name, and 'Browse' and 'Load' buttons. Below the input field is a 'Status:' label followed by a progress bar.

Download Log

Click this button to download a log of command events to the computer's hard disk.

Model

The SKU of this product.

Firmware

The current firmware version installed.

MAC Address

The MAC address of the AT-GAIN-120.

Serial Number

The serial number of the AT-GAIN-120.

Temperature

The current internal ambient temperature of the AT-GAIN-120.

Operating Time

The time in which the unit has been in the "on" state since it was last rebooted.

Save

Click this button to save the system settings to a local file. System settings files are saved in .bin (binary) format. The default system settings filename is systemsettings.bin. It is recommended to save the system settings before performing a firmware update.

Status (progress bar)

Displays the status of saving and loading system settings files.


Browse

Click this button to select the desired system settings file. Click the **Load** button to upload the settings file to the AT-GAIN-120.

Load

Click this button to upload the selected settings file to the AT-GAIN-120. While the system settings file is being loaded, the **Status** progress bar will display the current progress.

Firmware page

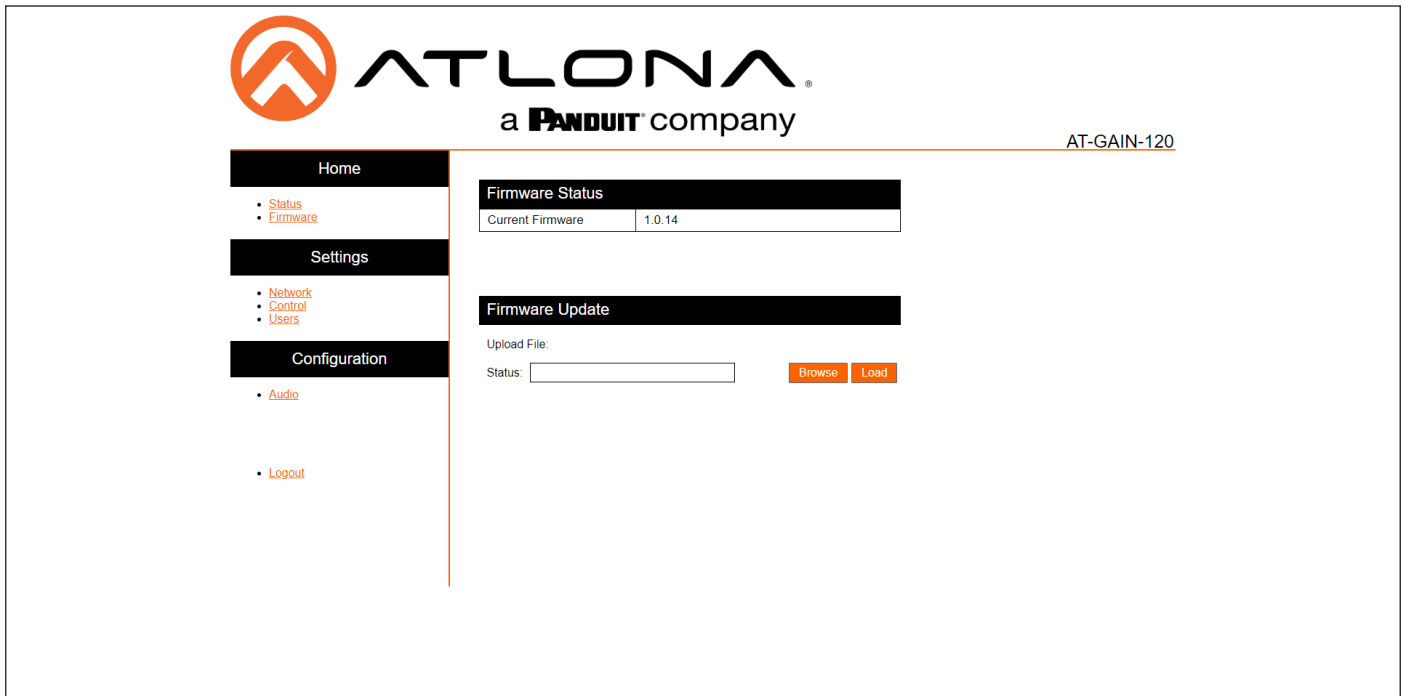

ATLONA[®]
a PANDUIT[®] company

AT-GAIN-120

Home

- Status
- Firmware

Settings

- Network
- Control
- Users

Configuration

- Audio

Logout

Firmware Status

Current Firmware	1.0.14
------------------	--------

Firmware Update

Upload File:

Status:

Current Firmware

The current firmware version installed.

Status (progress bar)

Displays the status of loading new firmware during a firmware update procedure.

Browse


Click this button to select the firmware file. Click the **Load** button to begin the update procedure. Refer to [Updating the Firmware \(page 38\)](#) for more information.

Load

Click this button to upload the selected firmware file to the AT-GAIN-120. While the system settings file is being loaded, the **Status** progress bar will display the current progress.

Network page

After pressing the **Save** button, a reboot message will appear at the top of the web GUI. The AT-GAIN-120 must be rebooted when any of the network settings have changed.

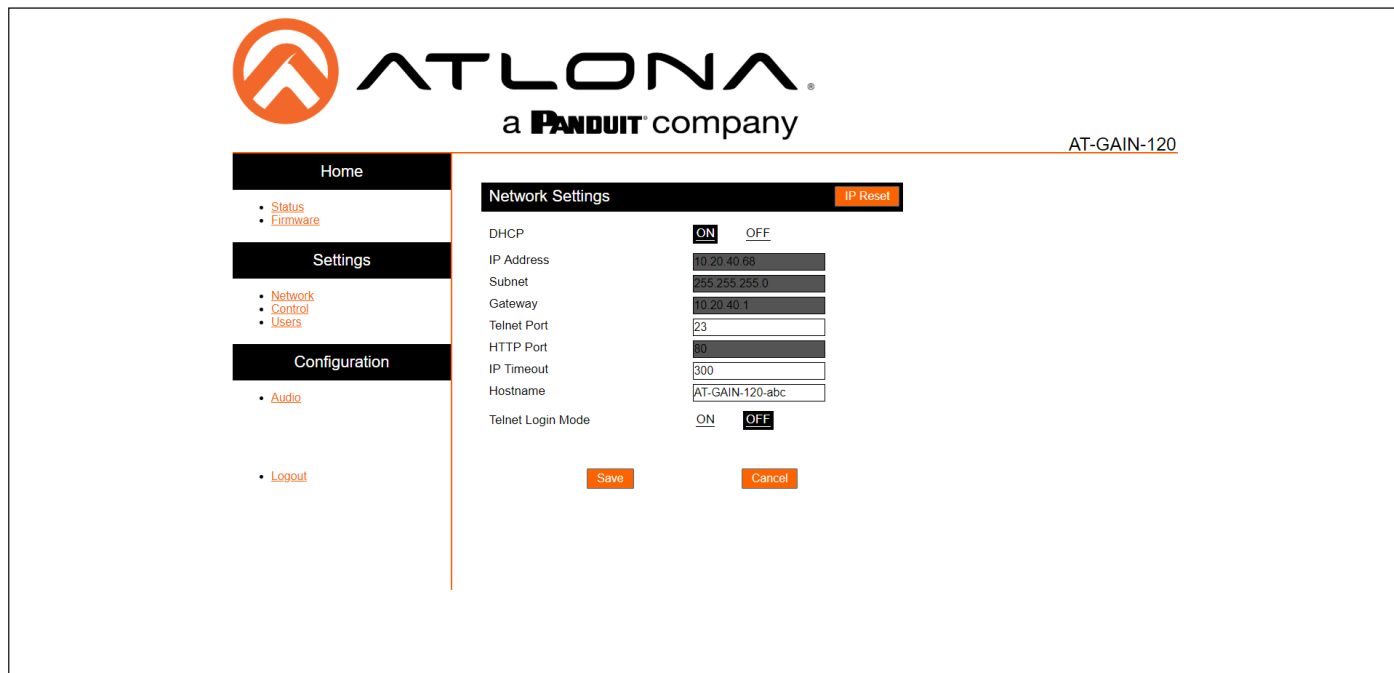

The screenshot shows the ATLONA AT-GAIN-120 web GUI. The top header includes the ATLONA logo and the text 'a PANDUIT company'. The right side of the header shows 'AT-GAIN-120'. The left sidebar has three main sections: 'Home' (with links to Status and Firmware), 'Settings' (with links to Network, Control, and Users), and 'Configuration' (with a link to Audio). The 'Network Settings' page is displayed, featuring a 'Network Settings' title bar with an 'IP Reset' button. The settings include: DHCP (ON/OFF buttons), IP Address (10.20.40.68), Subnet (255.255.255.0), Gateway (10.20.40.1), Telnet Port (23), HTTP Port (80), IP Timeout (300), Hostname (AT-GAIN-120-abc), and Telnet Login Mode (ON/OFF buttons). At the bottom are 'Save' and 'Cancel' buttons.

DHCP

Click the **ON** button to enable DHCP. Click the **OFF** button to enable static IP mode. In static IP mode, the IP Address, Subnet, and Gateway fields can be modified.

IP Address

Enter the IP address of the AT-GAIN-120 in this field. This field can only be changed when DHCP is set to **OFF**.

Subnet

Enter the subnet mask in this field. This field can only be changed when DHCP is set to **OFF**.

Gateway

Enter the gateway (router) IP address in this field. This field can only be changed when DHCP is set to **OFF**.

Telnet Port

Enter the Telnet listening port in this field. The default port is 23.

HTTP Port

Enter the HTTP listening port in this field. The default port is 80. This field cannot be modified.

IP Timeout

Enter the time-out interval (in seconds) in this field. This field represents the time interval before the TCP/IP connection times out.

Hostname

Enter the desired hostname in this field. By default, the hostname is the product (SKU) plus the last five digits of the unit serial number.


Telnet Login Mode

Click the **ON** button to prompt for username and password credentials. Username and password credentials are the same as the web GUI login credentials. Click the **OFF** button to create an open Telnet session that does not require login credentials. The default setting is **OFF**.

Save / Cancel

Click the **Save** button after any changes have been made. Click the **Cancel** button to abort changes.

Control page

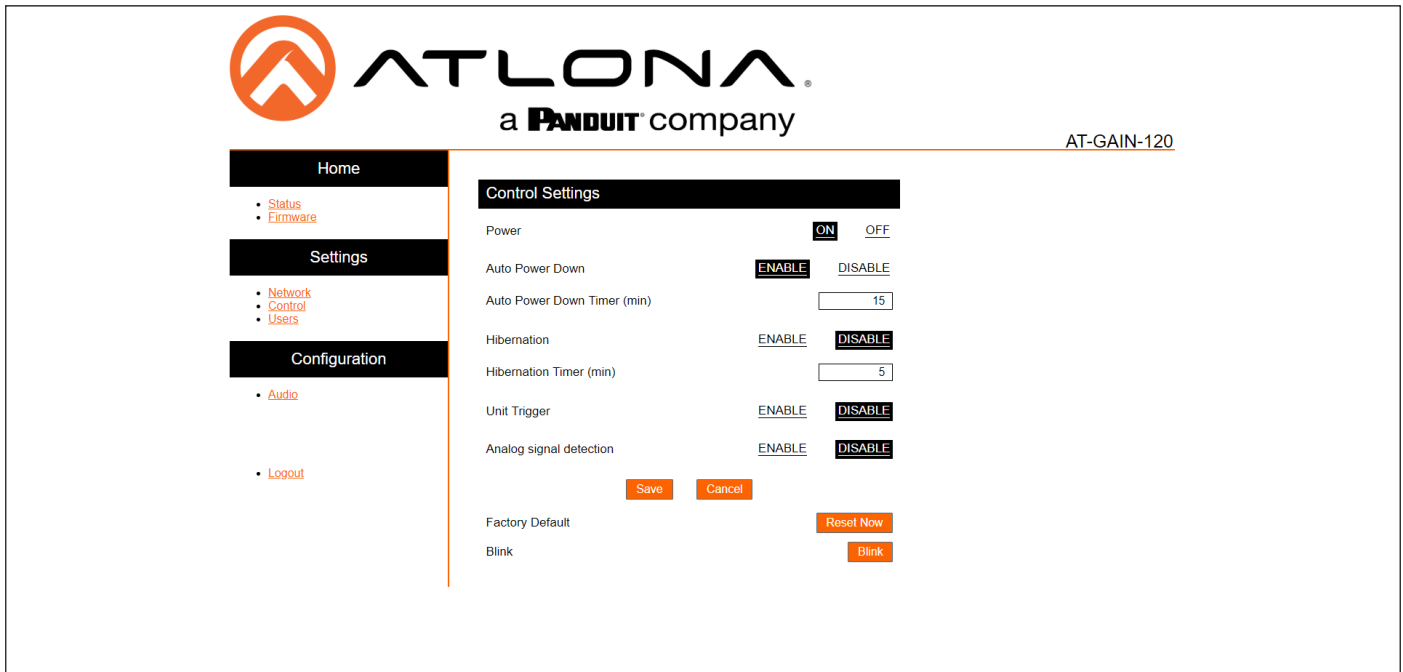

ATLONA
a **PANDUIT** company

AT-GAIN-120

Home

- Status
- Firmware

Settings

- Network
- Control
- Users

Configuration

- Audio
- Logout

Control Settings

Power

Auto Power Down

Auto Power Down Timer (min)

Hibernation

Hibernation Timer (min)

Unit Trigger

Analog signal detection

Factory Default

Blink

Power

Click the **ON** button to power-on the AT-GAIN-120. Click the **OFF** button to power-off the unit.

Auto Power Down

Enables or disables auto power down mode. Refer to [Auto Power Down mode \(page 21\)](#) for more information.

Auto Power Down Time (min)

Specify the time interval before the AT-GAIN-120 goes into auto power down mode. Refer to [Auto Power Down mode \(page 21\)](#) for more information.

Hibernation

Enables or disables hibernation mode. Refer to [Hibernation mode \(page 22\)](#) for more information.

Hibernation Timer (min)

Sets the time interval of inactivity (in minutes) before the unit is automatically placed in hibernation mode.

Unit Trigger

Enables or disables the trigger.

Analog signal detection

...

Save / Cancel

Click the **Save** button to apply changes. Click the **Cancel** button to abort changes.


Factory Default

Click the **Reset Now** button to reset the AT-GAIN-120 to factory-default settings.

Blink

Click the **Blink** button to start blinking the **DEVICE ID** LED indicator. This feature is useful to identify the unit when multiple units are being used.

Users page

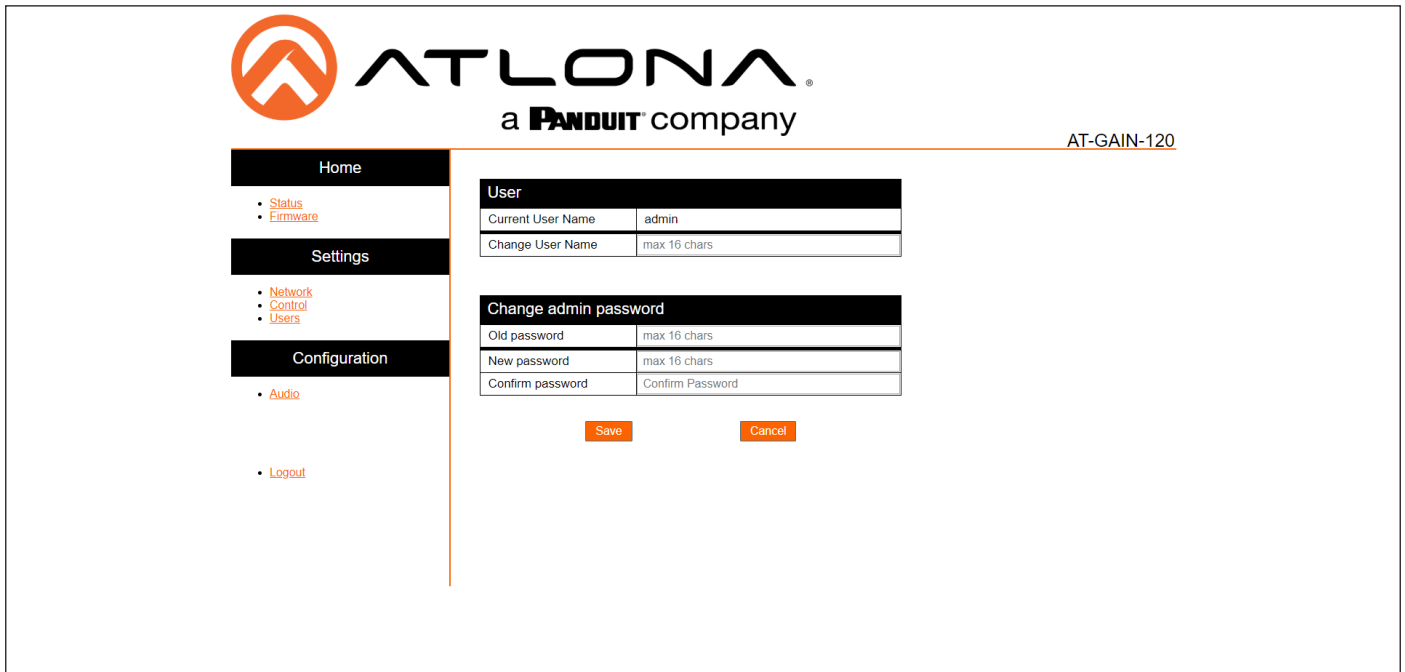

The screenshot shows the Atlona Web GUI interface. On the left is a navigation menu with sections: Home (containing Status and Firmware), Settings (containing Network, Control, and Users), and Configuration (containing Audio and Logout). The main content area has the Atlona logo and 'a PANDUIT company' text. A breadcrumb trail 'AT-GAIN-120' is visible. The 'Users' section is active, showing a table with 'Current User Name' as 'admin' and 'Change User Name' as 'max 16 chars'. Below this is a 'Change admin password' section with fields for 'Old password', 'New password', and 'Confirm password', each with a 'max 16 chars' limit. At the bottom are 'Save' and 'Cancel' buttons.

Current Username

The administrator username. This field cannot be changed.

Password

Enter the password for the administrator in this field. Special characters (e.g. #, %, @, &, etc.) are not permitted.


Change Admin Password

- **Old password**
Enter the current password in this field. The default password is Atlona.
- **New Password**
Enter the new password in this field.
- **Confirm Password**
Verify the new password by entering it in this field.

Save / Cancel

Click the **Save** button to apply all changes. Click the **Cancel** button to abort changes.

Audio page

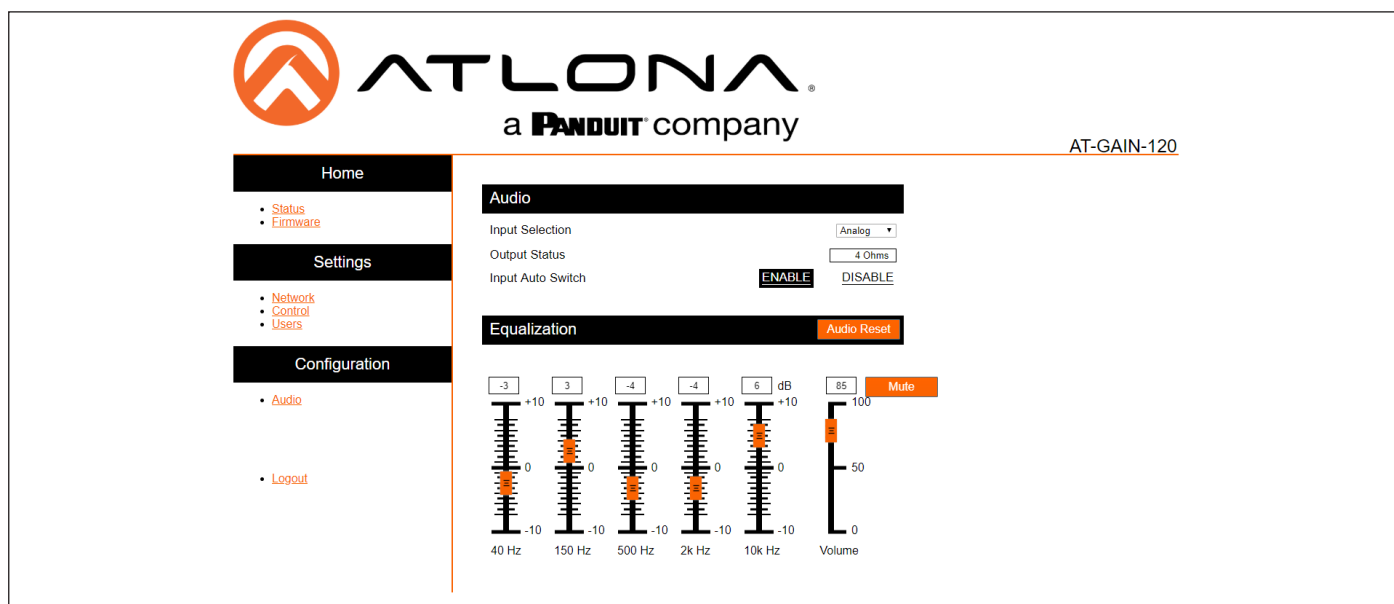

Input Selection

Click this drop-down list to select the audio input: **Analog** or **Net Audio**. The **Net Audio** selection will only be available if the optional AT-GAIN-NET card is installed. This card is available from Atlona.

Output Status

Displays the current output impedance setting.

Input Auto Switch

When enabled, the AT-GAIN-120 will auto-switch between audio inputs. Auto-switching is enabled, by default. If the AT-GAIN-NET card is not installed, this feature will not have any effect.

Equalization (Graphic, 5-band)

Click and drag each of these sliders to adjust the output frequency range. Each band has a range from -10 dB to +10 dB. The following table provides a general breakdown of each frequency in the audio spectrum.

Slider	Description	General Range
40 Hz	Sub-bass frequency	20 Hz - 50 Hz
150 Hz	Bass frequency	50 Hz - 200 Hz
500 Hz	Upper-bass to lower midrange	200 Hz - 800 Hz
2 kHz	Midrange to upper midrange	800 - 4 kHz
10 kHz	"Brilliance" frequency	7 kHz - 12 kHz

Auto Reset

Click this button to reset all equalizer bands to their default settings. Refer to [Default Settings \(page 45\)](#) for more information.

Mute

Click this button to mute the audio output. Note that clicking this button will mute all audio output ports: **LINE OUT**, **4 / 8 Ω OUT**, and **70V / 100V OUT**.

Volume

Click and drag this slider to adjust the output volume. This volume slider only affects the output volume on the speaker outputs. It does not affect the audio volume of the **LINE OUT** port, as this port is a fixed-level port. Note that the volume range for this slider is not measured in decibels.

Appendix

Updating the Firmware

The AT-GAIN-120 can only be updated either through the web GUI or using the mini-USB port on the front panel.



IMPORTANT: As of this writing, Google Chrome is the only browser that is supported for firmware updates. Other browsers will be supported in future versions of firmware.

Web GUI

Required items:

- Firmware
 - IP address of the AT-GAIN-120
 - Computer on the same network as the AT-GAIN-120
 - Username and password to access the web GUI
1. Verify that an Ethernet cable is connected between the AT-GAIN-120 and the network. The computer used to access the web GUI must be on the same network as the AT-GAIN-120.
 2. Type the IP address of the AT-GAIN-120 into the web browser, as shown in the example below.



3. The login screen will be displayed. Login using the username and password. The default login credentials are:

Username: admin

Password: Atlona




 **ATLONA**
a **PANDUIT** company AT-GAIN-120

Login

Username

Password

4. Click **Status** in the menu bar on left side of the screen.
5. Click the **Save** button.

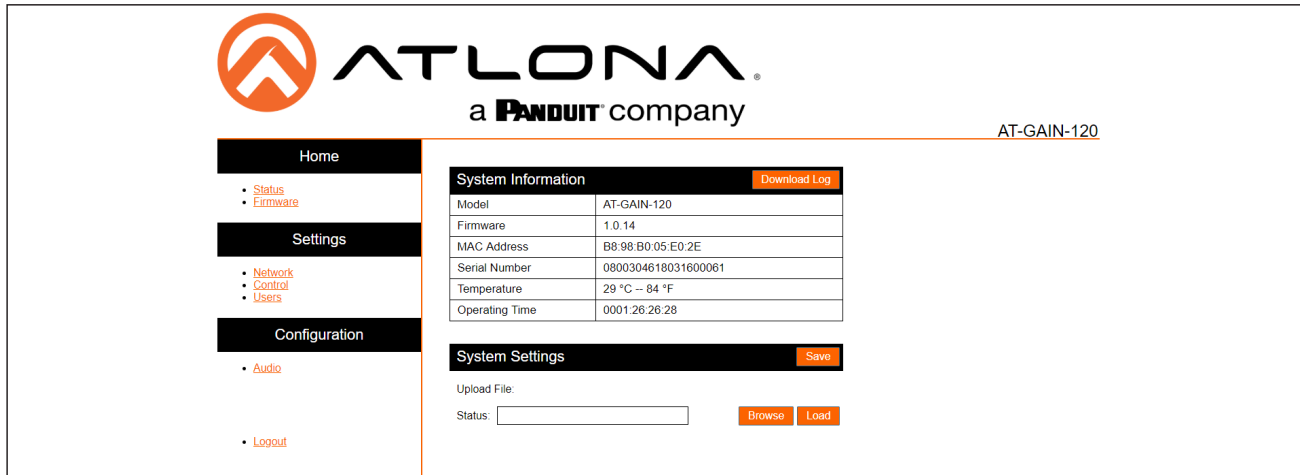


The screenshot shows the ATLONA web interface. The left sidebar has a menu with 'Home', 'Settings', and 'Configuration'. Under 'Settings', there are links for 'Status', 'Firmware', 'Network', 'Control', and 'Users'. Under 'Configuration', there are links for 'Audio' and 'Logout'. The main content area is titled 'AT-GAIN-120'. It contains two sections: 'System Information' and 'System Settings'. The 'System Information' section has a 'Download Log' button and a table with the following data:

Model	AT-GAIN-120
Firmware	1.0.14
MAC Address	B8:98:B0:05:E0:2E
Serial Number	0800304618031600061
Temperature	29 °C -- 84 °F
Operating Time	0001:26:26:28

The 'System Settings' section has a 'Save' button and an 'Upload File' section with a text input field and 'Browse' and 'Load' buttons.

6. The **Save As** dialog box will be displayed. Select the folder where the file will be saved. Click the **Save** button to save the file. The file is saved in .bin format and uses the default name of systemsettings.bin.
7. Click **Firmware** on the left side of the screen.

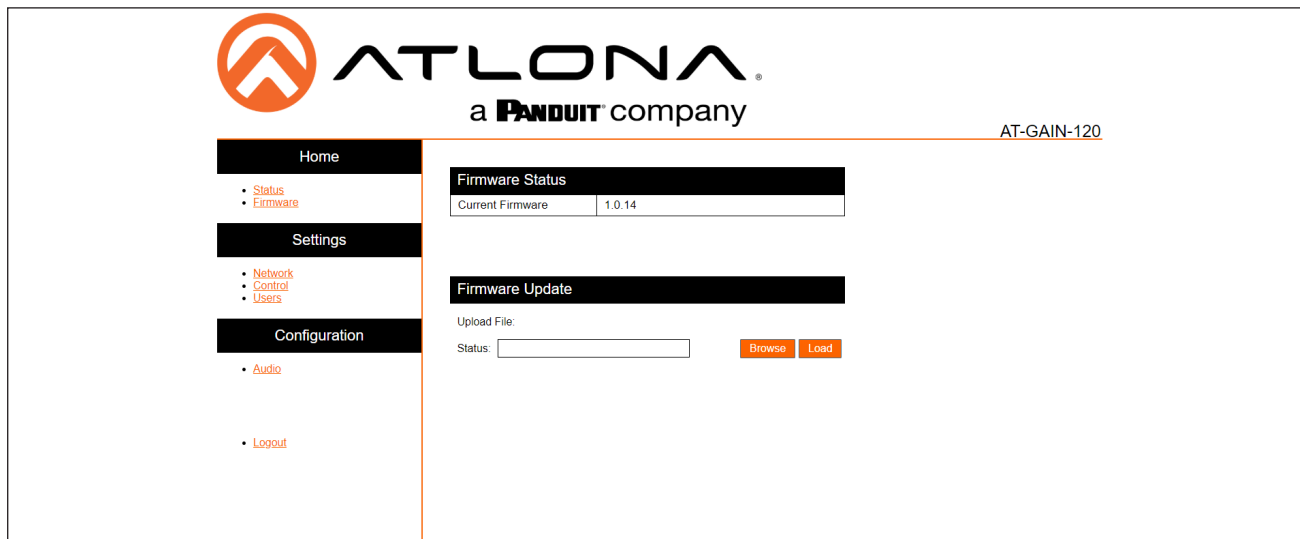

The screenshot shows the ATLONA web interface with the 'Firmware' link selected in the left sidebar. The main content area is titled 'AT-GAIN-120'. It contains two sections: 'Firmware Status' and 'Firmware Update'. The 'Firmware Status' section has a table with the following data:

Current Firmware	1.0.14
------------------	--------

The 'Firmware Update' section has an 'Upload File' section with a text input field and 'Browse' and 'Load' buttons.

8. Click the **Browse** button to select the firmware file.
9. Click the **Load** button to begin the upgrade process and the PWR LED indicator will flash rapidly. A progress bar will be displayed during the update process. Once the update has been completed, re-login to the webGUI.




WARNING: Power must not be disconnected or interrupted during the firmware update process.

USB


Required items:

- Firmware
- USB Type A to Mini-USB Type B cable
- Computer with USB port

1. Download the latest firmware from the Atlona web site.
2. Disconnect the power from the AT-GAIN-120.
3. Connect the USB cable from the FW port on the front panel to the computer with the firmware.
4. Reconnect the power to the AT-GAIN-120. After a few seconds, a drive folder will be displayed.

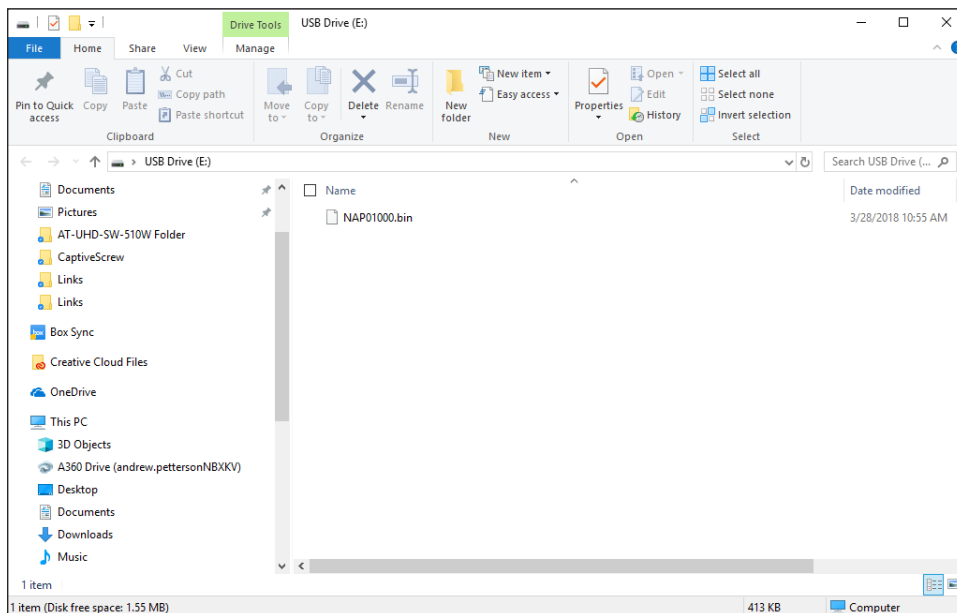

5. Delete all existing files on this drive.
6. Drag-and-drop the firmware file on the computer to this folder. Wait for the file to be copied.
7. Disconnect both the USB cable and power cable from the AT-GAIN-120.
8. Reconnect the power to the AT-GAIN-120. The PWR LED indicator on the front panel will rapidly flash green, indicating that the firmware upgrade is in process; this should take only a few seconds.

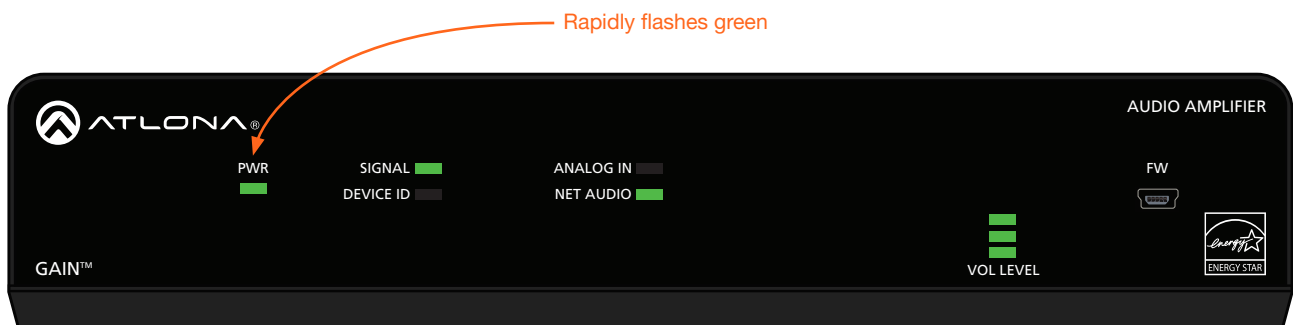

9. The firmware upgrade process is complete.


Rack Mount Installation

The AT-GAIN-120 can be mounted in different ways, based on the number of units that are being installed. When installed into a standard 19" rack, the AT-RACK-1RU will need to be purchased from atlona.com.

The AT-RACK-1RU can be used to either mount a single AT-GAIN-120 unit or it can be used to mount multiple half-rack Atlona products, such as a AT-GAIN-120 and a AT-UHD-SW-510W.



IMPORTANT: Before mounting the AT-GAIN-120 to the AT-RACK-1RU, remove the rubber feet from the bottom of the unit.

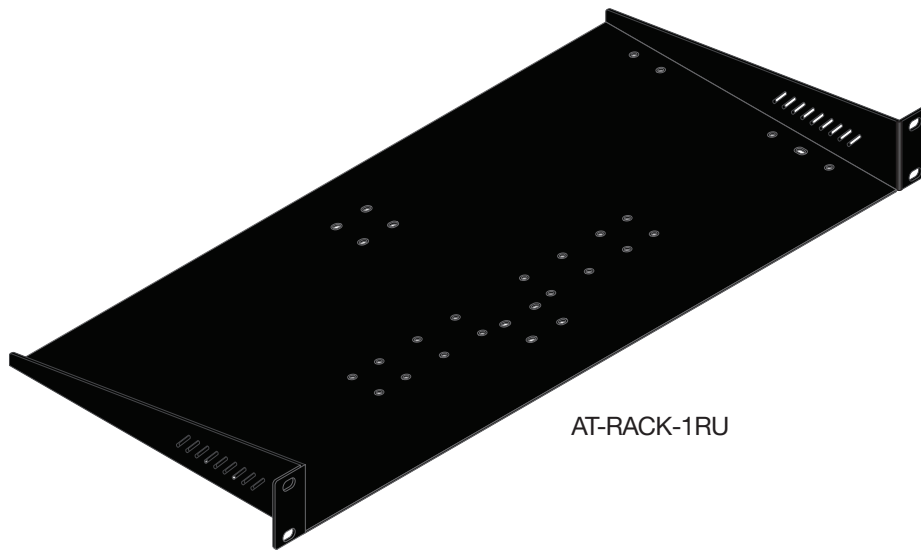


AT-RACK-1RU

1. Place the AT-GAIN-120 on a flat surface, upside down.
2. Turn the AT-RACK-1RU upside down, placing it on top of the AT-GAIN-120, as shown, and align the holes of the AT-RACK-1RU, marked in blue, with the mounting holes on the AT-GAIN-120.
3. Use the included 7 mm screws to secure the AT-RACK-1RU to the AT-GAIN-120.



IMPORTANT: To prevent possible damage to the device, rack, and/or screws, do not overtighten or use high-torque devices when securing the devices to the rack.

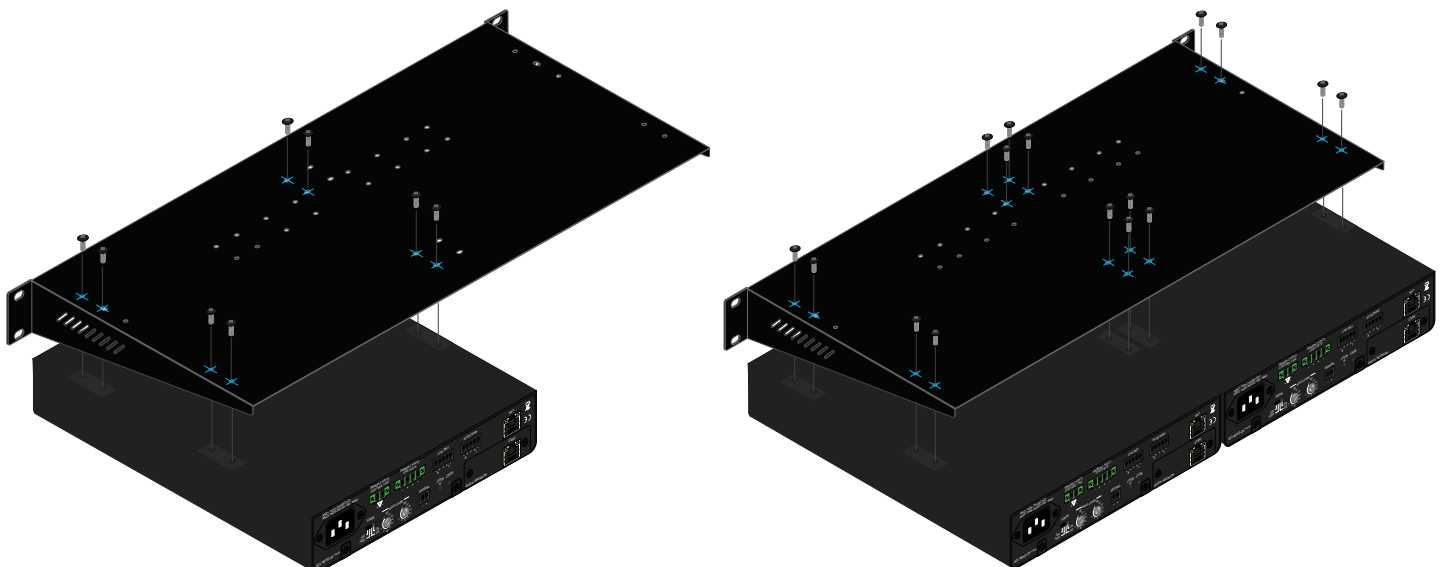

Network Audio Card Installation

The AT-GAIN-NET is an optional audio card which allows Dante and AES67 audio streams to be used with the AT-GAIN-120. Follow the instructions below to install the AT-GAIN-NET audio card.



WARNING: To prevent the risk of electrocution or electric shock, always disconnect the power cord from the AT-GAIN-120 before installing or removing the AT-GAIN-NET network card.


1. Disconnect the power cord from AT-GAIN-120.
2. Set the AT-GAIN-120 on a flat surface, free of obstructions. Position the AT-GAIN-120 as shown in the picture below.



3. Using a small Phillips-head screwdriver, remove the two screws holding the faceplate in place. After the faceplate is removed, set it aside. Keep the two screws to attach the included faceplate with the INPUT card.



4. Locate the plastic guides on either side of the expansion slot.

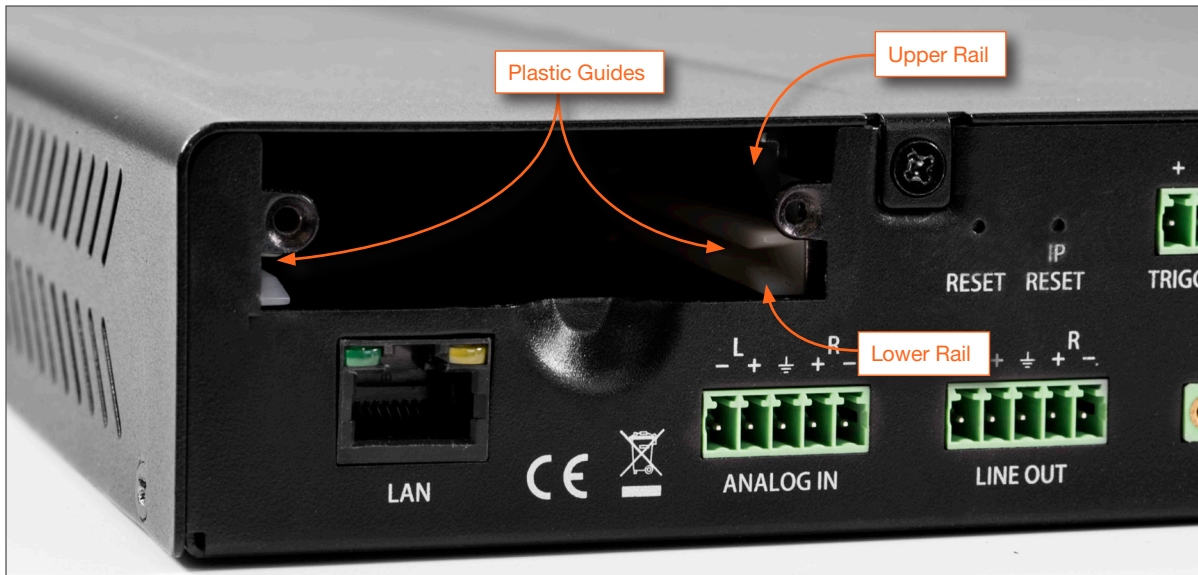


5. Carefully position the card between the upper and lower rail of each guide, and gently push the AT-GAIN-NET network card forward, until it locks in place. The card will make a small snapping sound, once the card is in place.



IMPORTANT: When handling the card, avoid touching the components. Always hold the card by the edges. Electrostatic discharge can damage components and the card.



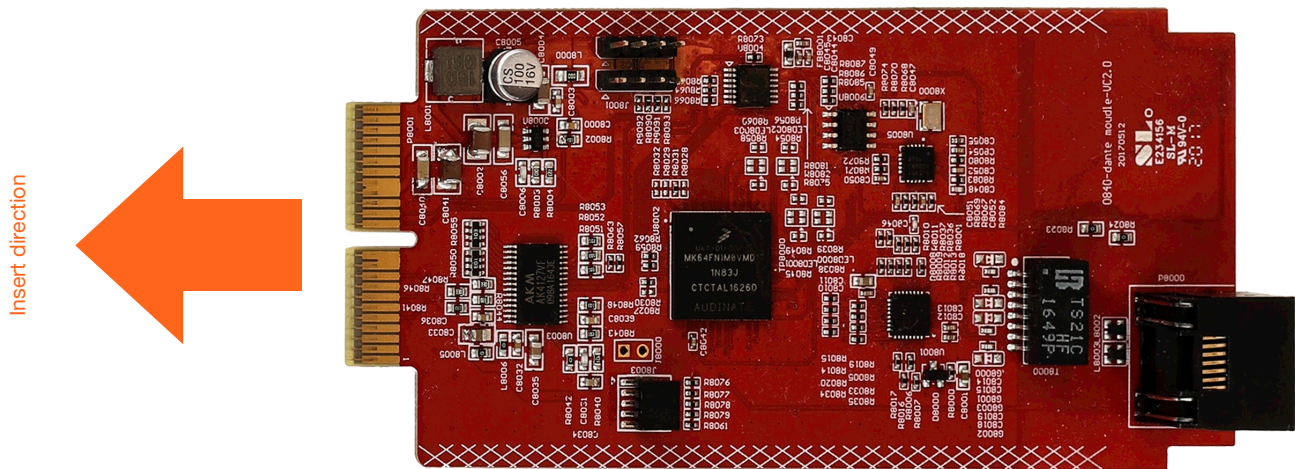

6. Locate the included AT-GAIN-NET faceplate with the **INPUT** port and install the faceplate using the screws from Step 2, as shown below. Do not over-tighten the screws using high-torque devices, as this may cause damage to the screws or the faceplate assembly.



7. Card installation is complete.
8. Connect the power cable to the AT-GAIN-120.
9. Connect an Ethernet cable, with an encoded digital audio stream, to the **INPUT** port. Refer to the [Network Audio \(page 26\)](#) for information on using Dante and AES67 audio streams.

Default Settings

The following table lists the factory-default settings for the AT-GAIN-120.

Feature	Settings	
Network	DHCP	ON
	Static IP address	192.168.1.254
	Subnet	255.255.0.0
	Gateway	192.168.1.1
	Telnet Port	23
	HTTP Port	80
	IP Timeout	300
	Hostname	AT-GAIN-120-[last five digits of serial number]
	Telnet Login Mode	OFF
Control	Power	OFF
	Auto Power Down	Enabled
	Auto Power Down Timer (min)	15
	Hibernation	Disabled
	Hibernation Timer (min)	5
	Unit Trigger	Disabled
	Analog signal detection	Disabled
	Blink	Disabled
Users	Admin username	admin
	Admin password	Atlona
Audio	Input Selection	Analog
	Input Auto Switch	Enabled
	Equalization bands	
	40 Hz	0
	150 Hz	0
	500 Hz	0
	2 kHz	0
	10 kHz	0
	Volume	30

Specifications

Connectors, Controls, and Indicators	
INPUT	1 - RJ45 (AT-GAIN-NET network audio card, only), 100 Mbps
LAN	1 - RJ45
ANALOG IN	1 - 5-pin captive screw, balanced: 20 k Ω , unbalanced: 10 k Ω
LINE OUT	1 - 5-pin, 3.5mm
TRIGGER	1 - 2-pin captive screw
4 / 8 Ω OUT	1 - 4-pin, 5.08 mm lock-down screw connector
70V / 100V OUT	1 - 5-pin, 3.5mm
FW	1 - mini-USB, type-B
INPUT GAIN	2 - Rotary pots, L/R channel
MODE	1 - Slider switch, 4-pole, 4 Ω / 8 Ω / 70 V / 100 V
RESET	1 - Push button, tact-type
IP RESET	1 - Push button, tact-type
Power	1 - IEC power receptacle
PWR	1 - LED indicator, green
SIGNAL	1 - LED indicator, green
DEVICE ID	1 - LED indicator, green
ANALOG IN	1 - LED indicator, green
NET AUDIO	1 - LED indicator, green
VOL LEVEL	1 - Multi-LED indicator

Input Signal	
Analog Input	Balanced: 20 k Ω , unbalanced: 10 k Ω
CMRR	51 dB / 58 dB
Detection Threshold	0 dBV = 2.218 dBu

Output Signal	
Distributed speakers (mono)	70 V / 100 V
Program speakers (stereo)	4 Ω / 8 Ω , line-level
Power	70 V = 120 Vrms (bridge mode) 100 V = 120 Vrms (bridge mode) 4 / 8 Ω = 60 W per channel

Audio Processing	
D/A Conversion	24-bit, selectable sampling rate
Audio Formats	24-bit uncompressed, selectable at 44.1, 48, 88.2, and 96 kHz sampling rate
Latency	2 ms
Signal Processing	Volume, Auto on/off signal sensing, 80 Hz HPF
Network Audio Transport	Dante, AES67
Equalization	5-band, adjustable: 40 Hz, 150 Hz, 500 Hz, 2 kHz, and 10 kHz bands Range: -10 dB to +10 dB

Audio Performance	
Frequency Response	20 Hz - 20 kHz, ± 2 dB @ 4 Ω load
THD + N	< 0.1% @ 1kHz, 3 db below clipping
SNR	> 90 dBA WTD
Damping Factor	< 90 @ 8 Ω
Amplifier Type	Class D

Temperature	Fahrenheit	Celsius
Operating	32 °F to 122 °F	0 °C to 50 °C
Storage	-40 °F to 158 °F	-40 °C to 70 °C
Humidity (RH)	90% RH, non-condensing	

Power	
Standby Mode	Powers down after 5 - 25 minutes (adjustable) of no signal; complies with ENERGY STAR power consumption limits of < 0.5 W in standby mode
Consumption	120 W (max.)
Standby Consumption	normal standby < 0.5 W network standby < 2 W
Supply	100 - 240 V AC, 50/60 Hz, 120 W

Dimensions	Inches	Millimeters
H x W x D	1.69 x 8.66 x 12.99	43 x 220 x 330

Weight	Pounds	Kilograms
Device	19.84	9

Certification	
Device	CE, RoHS, WEEE, FCC, ENERGY STAR®

Index

A

Appendix 38

Audio

connectors 11

distributed speakers 11

impedance 11

Auto power-down. See **Power modes: auto power-down**

Auto-switching 24

C

Configuration

IP. See **IP configuration**

Connection

diagram 14

instructions 13

Contents

package 9

Customer support 3

D

Default settings 45

Description

front / rear panel 10

E

Equalizer

adjusting 29, 37

frequency spectrum 37

F

FCC statement 7

Features 9

Firmware

displaying 32, 33

updating using the web GUI 38

updating using USB 40

H

Hibernation mode. See **Power modes: hibernation mode**

I

Input

signal detection 25

switching, automatic 24

switching, manual 23

Installation 11

IP configuration

using commands 16

using rear panel 15

using the web GUI 17

L

LED indicators 19

M

Mode switch

settings 13

N

Network audio

AES67 support 27

card installation 42

Dante configuration 26

O

Operating notes 3

P

Panel descriptions 10

Password

changing 36

default 30

Power modes

auto power-down 21

hibernation mode 22

powering on/off 20

R

Rack mount

installation 41

Resetting

to factory-default 29

S

Safety information 6

Speakers

distributed 13

program/stereo 13

Specifications 46

Switching

auto 24

manual 23

T

Trigger

voltage levels 12

U

Users

primary user name 30

V

Volume

adjusting 29, 37

W

Warranty 4

Web GUI 30

